

# Settings

<b>Sound &amp; Vibration</b> .....	<b>18-2</b>
Ringtones.....	18-2
Charge Sound/Key Tone .....	18-3
<b>Display</b> .....	<b>18-3</b>
Display Settings.....	18-3
Main Menu .....	18-4
Clock .....	18-5
Back Light.....	18-5
External Display.....	18-6
Font .....	18-6
<b>Touchpad</b> .....	<b>18-7</b>
<b>Manner Mode</b> .....	<b>18-7</b>
<b>Incoming Settings</b> .....	<b>18-8</b>
<b>Date &amp; Time</b> .....	<b>18-9</b>
<b>Call Settings</b> .....	<b>18-9</b>
Call Time & Call Cost .....	18-9
Making & Receiving Calls .....	18-9
<b>Notification Light</b> .....	<b>18-10</b>
<b>Text Entry</b> .....	<b>18-11</b>
Text Entry Method .....	18-11
Conversion.....	18-11
Conversion during Message Text Entry .....	18-12
<b>Phone Book</b> .....	<b>18-12</b>
<b>Voice Dial</b> .....	<b>18-12</b>
<b>Video Call</b> .....	<b>18-13</b>
Function Menus.....	18-13
Engaged Video Call Settings .....	18-13

<b>Horizontal Open Position</b> .....	<b>18-14</b>
Horizontal Open Menu/Wallpaper .....	18-14
Standby Clock .....	18-14
<b>Digital TV</b> .....	<b>18-15</b>
<b>Camera</b> .....	<b>18-16</b>
Camera Settings (Camera Mode/Action Mode) .....	18-16
Video Camera Settings (Video Camera Mode) .....	18-18
<b>Mobile Widget (Japanese)</b> .....	<b>18-19</b>
<b>S! Quick News (Japanese)</b> .....	<b>18-19</b>
Display Settings.....	18-19
Auto Update/Deleting Information .....	18-20
<b>Bluetooth®</b> .....	<b>18-20</b>
<b>Messaging</b> .....	<b>18-21</b>
Universal Settings.....	18-21
S! Mail Settings.....	18-22
PC Mail Settings.....	18-23
SMS Settings .....	18-23
<b>Internet</b> .....	<b>18-24</b>
Browser Display Settings.....	18-24
Memory Manager & Reset .....	18-24
Security Settings.....	18-25
Reset.....	18-25
<b>S! Appli</b> .....	<b>18-26</b>
<b>Osaifu-Keitai®</b> .....	<b>18-26</b>
<b>S! GPS Navi Settings</b> .....	<b>18-27</b>
<b>Default Settings</b> .....	<b>18-28</b>
<b>Confirming Settings</b> .....	<b>18-29</b>

## Settings Sound & Vibration

### Ringtones

From  Main Menu  Settings

Setting/Operation	Default
<b>Change Ringtone</b> > <i>Sound Settings</i> → <i>Ring Tones</i> → Select an item → <i>Select Ring Tone</i> → Select a type → Select a folder → Select a tone	Phone/Video Call: Pattern 1 Message: Tone3
<b>Set Machi-Uta® (Change Ringback Tone)<sup>1</sup></b> > <i>Sound Settings</i> → <i>Machi-Uta</i> → Select an item	—
<b>Change Ringer Volume</b> > <i>Sound Settings</i> → <i>Ringer Volume</i> → Select a type →  to adjust volume	Level 4
<b>Disable 3D Sound Effect (Ringtone/Melody)</b> > <i>Sound Settings</i> → <i>Stereo/3D Sound</i> → <i>OFF</i>	ON
<b>Set Ringtone Sound Output for Earphone<sup>2</sup></b> > <i>Sound Settings</i> → <i>Earphone</i> → <i>Earphone</i>	Earphone + Speaker
<b>Set Message Ringtone Duration</b> > <i>Sound Settings</i> → <i>Message Ring Tones</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i> , enter ring time)	ON (Ring time: 05 sec)
<b>Set Vibration Alert</b> > <i>Incoming Settings</i> → <i>Vibrator</i> → Select an item → Select a vibration pattern	OFF

<sup>1</sup> For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

<sup>2</sup> When earphone is connected and Sound Settings is set to **Earphone**, ringtone sounds through earphone and speaker for incoming calls/messages or alarms after about 20 seconds. Other sounds (e.g. Demo playback) are heard only from earphone.

### Pre-installed Ringtones

Title	Composer
Pinwheel	Original
SINFONIA NR 101 THE CLOCK HOB I 101	HAYDN FRANZ JOSEPH
JE TE VEUX	SATIE ERIK ALFREDI LE
DANSE DES MIRLITONS // CASSE NOISETTE OP 71A /ORI	CHAJKOVSKIJ PETR ILICH
HEIGH HO // SNOW WHITE AND THE SEVEN DWARFS /INST	CHURCHILL FRANK E
DANCE OF THE KNIGHTS OP 64 NO 13	PROKOFEV SERGEJ S
WALTZ/COPPELIA BALLET SUITE	DELIBES LEO CLEMENT PHILIBERT
PETER AND THE WOLF OP 67	PROKOFEV SERGEJ S

Names of composers given above conform to JASRAC Website. Parts of titles may not appear due to Display size.

## Charge Sound/Key Tone

From ► Main Menu ► Settings

Setting/Operation	Default
■ Set Key Tone > <i>Sound Settings</i> → <i>Key Tone</i> → <i>ON</i> or <i>OFF</i>	OFF
■ Charging Start/End Tone Off > <i>Phone Settings</i> → <i>Battery</i> → <i>Charge Sound</i> → <i>OFF</i>	ON

## Settings Display

### Display Settings

- Horizontal Open Menu/Wallpaper (Horizontal Open Position) (㉞P.18-14)

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
■ Change Wallpaper > <i>Internal Display</i> → <i>Stand-by Display</i> → Select an item (→ Select a folder) → Select an image	(㉞P.18-28)
■ Add Calendar to Wallpaper > <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Calendar</i> → Select a view format → <i>BG Image ON</i> or <i>BG Image OFF</i> (→ For <i>BG Image ON</i> , select a folder → select an image)	-
■ Change Wallpaper Randomly > <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Random Display</i> → Select a folder → <i>Every Hour</i> or <i>Every Day</i>	-
■ Change Outgoing Call/Message Image > <i>Internal Display</i> → Select an outgoing type → Select a folder → Select an image	(㉞P.18-28)
■ Change Incoming Call/Message Image > <i>Internal Display</i> → Select an incoming type → <i>Select Calling Disp.</i> <sup>1</sup> → Select an image type → Select a folder → Select an image	(㉞P.18-28)

<ul style="list-style-type: none"> <li>■ <b>Change Battery/Antenna Indicator</b></li> <li>&gt; <i>Internal Display</i> → <i>Battery Icon</i> or <i>Antenna Icon</i> → Select a pattern</li> </ul>	Pattern 1
<ul style="list-style-type: none"> <li>■ <b>Change Start-up Window</b></li> <li>&gt; <i>Internal Display</i> → <i>Start-up</i> → <i>OFF</i>, <i>Message</i>, <i>Pictures</i> or <i>Videos</i><sup>2</sup></li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Change Display Color Scheme</b></li> <li>&gt; <i>Color</i> → Select a color</li> </ul>	(☞P.18-28)
<ul style="list-style-type: none"> <li>■ <b>Set Interface Language</b></li> <li>&gt; <i>言語設定</i> → <i>日本語</i></li> </ul>	日本語
<ul style="list-style-type: none"> <li>■ <b>Show New Call/Message when Handset Opens</b></li> <li>&gt; <i>Open for New</i> → <i>ON</i></li> </ul>	OFF

<sup>1</sup> ● Setting applies to messages retrieved manually or when Server Mail is retrieved (Retrieve New window cannot be changed).

<sup>2</sup> ● For *Pictures* or *Videos*: Select a folder → Select an image  
● For *Message*: Enter text

## Main Menu

From ► **Main Menu** ► **Settings** ► **Display Settings**  
► **Menu Icons**

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ <b>Change Main Menu Theme</b></li> <li>&gt; Select a pattern</li> </ul>	(☞P.18-28)
<ul style="list-style-type: none"> <li>■ <b>Change Main Menu Icons</b></li> <li>&gt; <i>Customize</i> → Select a menu → Select a folder → Select an image</li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Change Main Menu Background</b></li> <li>&gt; <i>Customize</i> → <i>Background Image</i> → Select a folder → Select an image</li> </ul>	—

## Clock

- Standby Clock (Horizontal Open Position) (☞P.18-14)
- External Display Clock (☞P.18-6)

From ► **Main Menu** ► **Settings** ► **Display Settings**  
► **Internal Display** ► **Clock**

Setting/Operation	Default
■ <b>Change Standby Clock Pattern</b> <sup>1</sup> > <i>Stand-by Clock</i> → [Pattern] → Select a pattern (☞P.18-28) → [Set]	
■ <b>Change Standby Clock Position</b> <sup>1 2</sup> > <i>Stand-by Clock</i> → [Position] → Select a position → [Set]	Pattern 1
■ <b>Change Standby Clock Size</b> <sup>1</sup> > <i>Stand-by Clock</i> → [Size] → <i>Small</i> → [Set]	Large
■ <b>Change Standby Clock at Upper Right (lower right in Landscape View)</b> > <i>Icon Clock</i> → Select a pattern	(☞P.18-28)

<sup>1</sup> Highlight *Stand-by Clock* → [Play] to view Standby Clock.

<sup>2</sup> Clock appears in **Pattern 1** when:

- Calendar, World Clock or Operator Name is set to appear in Standby.
- Time zone is set to other than GMT+9.
- Privacy Key Lock is active.

## Back Light

From ► **Main Menu** ► **Settings** ► **Display Settings**

Setting/Operation	Default
■ <b>Turn Back Light On/Off; Set Power Saver Mode</b> <sup>1</sup> > <i>Back Light Time</i> → <i>Lighting</i> → <i>ON</i> or <i>OFF</i> → Enter time to Power Saver mode	ON + 45secs.
■ <b>Illuminate Back Light while Charging</b> > <i>Back Light Time</i> → <i>Charging</i> → <i>Constant Light</i>	Standard <sup>2</sup>
■ <b>Limit Back Light to Display Only</b> > <i>Back Light Time</i> → <i>Area</i> → <i>LCD</i>	LCD + Keys
■ <b>Adjust Brightness</b> > <i>Back Light Time</i> → <i>Brightness</i> → Select a brightness level	Auto <sup>3</sup>
■ <b>Set Soft Light Off</b> > <i>Back Light Time</i> → <i>Soft Light</i> → <i>OFF</i>	ON
■ <b>Disable Auto Image Compensation</b> > <i>LCD AI</i> → <i>OFF</i>	ON

<sup>1</sup> During operation (except when in Standby or S! Appli is active), press and hold (S) to toggle **ON/OFF**.

<sup>2</sup> When set to **Standard**, Back Light illuminates with the same setting as **Lighting** setting.

<sup>3</sup> When set to **Auto**, Back Light is automatically adjusted according to ambient light.

## External Display

From ► Main Menu ► Settings ► Display Settings  
► External Display

Setting/Operation	Default
■ Turn Off External Display > OFF	ON
■ Change Clock Display > ON → Clock → Select a pattern	Pattern 1
■ Change Display Orientation > ON → Orientation → Select a pattern	Pattern 2
■ Adjust Brightness > ON → Brightness → Select a brightness level	Level 3
■ Set Caller ID Off > ON → Incoming Calls → OFF	ON
■ Turn Back Light Off during Data Transmission/ Calls > ON → Disp. Connection → OFF	ON

## Font

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
■ Change Font Size by Function > Font Size → Select an item → Select a size	Standard
■ Set Menu Font Sizes Collectively > Font Size → Collective Setting → Large or Small*	Standard
■ Change Font (Incoming/Outgoing Call Window) > Disp. Call/Recv # → Pattern 2	Pattern 1

\* When **Small** is set, font size for Phone Book and Incoming/Outgoing Call Logs is **Standard**.

## Settings Touchpad

From ► Main Menu ► Settings ► Phone Settings  
► Touchpad Setting

Setting/Operation	Default
<ul style="list-style-type: none"> <li>Change Touchpad Speed</li> <li>&gt; <i>Touchpad Speed</i> → <i>High Speed</i> or <i>Low Speed</i></li> </ul>	Medium Speed
<ul style="list-style-type: none"> <li>Adjust Tap Sensitivity</li> <li>&gt; <i>Tapping Sensitivity</i> → <i>Standard</i></li> </ul>	High
<ul style="list-style-type: none"> <li>Scroll Setting</li> <li>&gt; <i>Auto Scroll</i> → <i>Normal</i> or <i>Y! Keitai/PC Site Brw.</i> → <i>ON</i> or <i>OFF</i><sup>1</sup></li> </ul>	Normal: ON Y! Keitai/PC Site Browser: ON (High Speed)
<ul style="list-style-type: none"> <li>Set Touchpad to Activate for Web Browser/ Mobile Widget</li> <li>&gt; <i>Touchpad Auto ON</i> → Select an item → <i>Activate</i> or <i>Deactivate</i></li> </ul>	Y! Keitai Brw. Start: Deactivate PC Site Browser Start/ Mobile Widget: Activate
<ul style="list-style-type: none"> <li>Adjust Touchpad Sensitivity<sup>2</sup></li> <li>&gt; <i>Auto Sensitivity</i> → <i>Execute</i> or <i>Return to Default</i></li> </ul>	—
<ul style="list-style-type: none"> <li>Deactivate Keypad while Touchpad is On</li> <li>&gt; <i>Touchpad Switch Key</i> → <i>Touchpad Only</i></li> </ul>	Touchpad +Keys

<sup>1</sup> For *Y! Keitai/PC Site Brw.*: *ON (High Speed)*, *ON (Low Speed)* or *OFF*

<sup>2</sup> Do not touch keypad until setting is complete.

## Settings Manner Mode

From ► Main Menu ► Settings ► Incoming Settings  
► Manner Mode Type

Setting/Operation	Default
<ul style="list-style-type: none"> <li>Set Manner Mode Type</li> <li>&gt; <i>Manner Mode</i>, <i>Super Silent</i> or <i>User Mode</i> (→ For <i>User Mode</i>, set individual items → ☑ [Finish])</li> </ul>	Manner Mode

### Default Settings by Mode

Manner Mode	Super Silent	Driving Mode	User Mode
<b>Answer Phone</b>			
Value set for Answer Phone	Value set for Answer Phone	ON	OFF
<b>Vibrator</b>			
ON	ON	OFF	ON
<b>Volume (In. Calls/Msg Ring T./Alarm)</b>			
Silent	Silent	Silent	Silent
<b>Rec. Check Tone</b>			
ON	OFF	ON	ON
<b>Key Tone</b>			
OFF	OFF	OFF	OFF
<b>Mic Sensitiv.</b>			
Up	Up	Up	Up
<b>LVA Tone (Low battery alarm)</b>			
OFF	OFF	OFF	OFF

## Settings Incoming Settings

From **Main Menu** ▶ **Settings** ▶ **Incoming Settings**

Setting/Operation	Default
<b>Change Answer Setting</b> (⏏Right) > <i>Answer Setting</i> → <i>Quick Silent</i> or <i>OFF</i>	Any Key Answer
<b>Answer Calls by Opening Handset</b> > <i>Open-to-Ans. Call</i> → <i>Phone</i> or <i>Video Call</i> → <i>Answer</i>	Keep Ringing
<b>Hide Caller Image Saved in Phone Book</b> > <i>Phone Book Image</i> → <i>OFF</i>	ON
<b>Set Tone for Missed Call/New Message Notification Set to</b> (⏏Right) > <i>Info Notice Setting</i> → <i>ON</i> or <i>OFF</i>	ON
<b>Activate Auto Answer with Earphone</b> > <i>Auto Answer</i> → <i>ON</i> → Enter ring time	OFF
<b>Set Call Waiting Response</b> > <i>In-call Management</i> → <i>Call Forwarding</i> or <i>Call Rejection</i>	Answer

## Answer Setting Key Operations

<b>Any Key Answer</b>	To answer a call, press any of the following keys: Voice Call:  ,  ,  -  ,  ,  ,  ,  ,  ,  ,  ,  ,  , Video Call:  ,  ,
<b>Quick Silent</b>	To cancel ringtone/vibration, press any of the following keys: Voice Call:  -  ,  ,  ,  ,  ,  ,  ,  ,  ,  , Video Call:  -  ,  ,  ,  ,  ,  ,  ,  ,  ,
<b>OFF</b>	To answer a call, press any of the following keys: Voice Call:  , Video Call:  ,  ,

- When [Voice Mail] is assigned to indicated at the bottom of Display, press to start voice or video recording.

## Info Notice Setting Response

<b>ON</b>	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls/Received Messages: Double-beep sounds twice
<b>ボイス (Voice)*</b>	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls: Double-beep sounds; voice message announces that you have a missed call Received Messages: Double-beep sounds; voice message announces that you have a new message

- When Vibrator is set for Incoming Settings, vibration activates with beeps. In Manner Mode, only vibration activates.
- Set **Side-keys Guard** to **OFF** beforehand (⏏P.12-9).

\* Japanese only

## Settings Date & Time

From ► Main Menu ► Settings ► Date & Time

Setting/Operation	Default
■ Change Date and Time* > <i>Date &amp; Time</i> → Enter year, date, time and time zone	–
■ Display World Clock > <i>World Clock</i> → ON →  to select an area	OFF
■ Activate Daylight Savings Time > <i>Daylight Savings</i> → ON	OFF
■ Deactivate Alarm while Operating Other Functions > <i>Alarm Tone</i> → <i>Operation Preferred</i>	Alarm Preferred
■ Deactivate Automatic Time Correction via Yahoo! Keitai > <i>Time Correction</i> → OFF	ON

\* Date & Time Settings effective on handset: from 09:00 on 2000/01/01 to 23:59 on 2037/12/31 (when time zone is set to GMT+9).

## Settings Call Settings

### Call Time & Call Cost

From ► Main Menu ► Settings ► Call Settings

Setting/Operation	Default
■ Display Call Time/Cost <sup>1</sup> > <i>Call Time/Cost</i>	–
■ Reset Total Call Charge/Time > <i>Reset</i> → Enter Phone Password → <i>Reset Total Duration</i> or <i>Reset Total Cost</i> → YES (→ For <i>Reset Total Cost</i> , enter PIN2)	–
■ Set Charge Limit <sup>2</sup> > <i>Set Max Cost Limit</i> → ON → Enter charge limit → Enter PIN2	OFF

<sup>1</sup> May not be available depending on subscription status. In that case, Set Max Cost Limit is not available.

<sup>2</sup> When set to **ON**, incoming/outgoing calls including emergency number calls are not dialable if charge limit is reached.

### Making & Receiving Calls

From ► Main Menu ► Settings

Setting/Operation	Default
■ Change Earpiece Volume > <i>Call Settings</i> → <i>Volume</i> →  to adjust volume	Level 4

<ul style="list-style-type: none"> <li>■ <b>Set Handset Response when Closed during Call</b></li> <li>&gt; <i>Call Settings</i> → <i>Closing Clamshell</i> → <i>No Tone</i> or <i>Hold Call*</i></li> </ul>	End the Call
<ul style="list-style-type: none"> <li>■ <b>Set Hold Tone</b></li> <li>&gt; <i>Call Settings</i> → <i>Hold Tones</i> → <i>On-hold Tone</i> or <i>Holding Tone</i> → Select a tone</li> </ul>	On-hold Tone: On-hold Tone 1 Holding Tone: JESU JOY OF MAN'S
<ul style="list-style-type: none"> <li>■ <b>Turn Off Noise Reduction</b></li> <li>&gt; <i>Call Settings</i> → <i>Noise Reduction</i> → <i>OFF</i></li> </ul>	ON
<ul style="list-style-type: none"> <li>■ <b>Change Tone Volume (Tone Before Call is Disconnected)</b></li> <li>&gt; <i>Call Settings</i> → <i>Quality Alarm</i> → <i>OFF</i> or <i>Low Tone</i></li> </ul>	High Tone
<ul style="list-style-type: none"> <li>■ <b>Change Alarm until Line is Reconnected</b></li> <li>&gt; <i>Call Settings</i> → <i>Reconnect Signal</i> → <i>OFF</i> or <i>Low Tone</i></li> </ul>	High Tone
<ul style="list-style-type: none"> <li>■ <b>Call Service Numbers</b> (Service not available at present)</li> <li>&gt; <i>Call Settings</i> → <i>Service Numbers</i> → Select a service number → </li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Specify Phone Book Entry to Call with Earphone</b></li> <li>&gt; <i>Phone Settings</i> → <i>Headset Switch to Call</i> → <i>Voice Call</i> → Search Phone Book → Select an entry</li> </ul>	OFF

\* When *Hold Call* is selected: *Speaker ON* (Hold tone sounds from speaker)/*Speaker OFF* (Hold tone does not sound from speaker)

## Settings Notification Light

From **Main Menu** **Settings** **Notification Light**

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ <b>Set Notification Light by Incoming Type (Voice/Video Calls or Messages)</b></li> <li>&gt; <i>Incoming</i> → <i>Select Color</i> → Select a type → Select a color</li> </ul>	P.18-28
<ul style="list-style-type: none"> <li>■ <b>Change Notification Light Color Name for Incoming Call/Message</b></li> <li>&gt; <i>Incoming</i> → <i>Color</i> → <i>Edit Color Name</i> → Select a color → Edit color name</li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Adjust Notification Light Color Tone for Incoming Call/Message</b></li> <li>&gt; <i>Incoming</i> → <i>Color</i> → <i>Adjust Color Tone</i> → Select a color → Adjust color tone</li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Set Notification Light for Missed Calls/New Messages</b></li> <li>&gt; <i>Missed Call/Unread</i> → <i>OFF When Checked</i> or <i>OFF</i></li> </ul>	OFF after 24hours
<ul style="list-style-type: none"> <li>■ <b>Custom Set Notification Light</b></li> <li>&gt; Select a function → Select <i>ON</i>, <i>OFF</i> or a color</li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Set Notification Light for Side Key </b></li> <li>&gt; <i>Side Key</i> → Select <i>OFF</i> or a color</li> </ul>	P.18-28
<ul style="list-style-type: none"> <li>■ <b>View Notification Light Status*</b></li> <li>&gt; <i>Confirm Status</i></li> </ul>	—

\* View Notification Light settings for incoming calls/messages, engaged calls or Side Key

## Settings Text Entry

### Text Entry Method

From ► **Main Menu** ► **Settings** ► **Phone Settings**  
► **Text Entry Method**

Setting/Operation	Default
<b>■ Set Input Mode</b> > <b>Input Mode</b> → Check input mode(s) to use → ☑ [Finish] → Select a input mode to prioritize	Input mode: All Prioritized mode: Mode 1 (5-touch)
<b>■ Hide Predictive Candidates/Context Forecast List</b> > <b>Predict</b> → OFF	ON (Show)
<b>■ Disable Learning for Secret Mode/Secret Data Only</b> > <b>Learn in Secret Mode</b> → Enter Phone Password → OFF	ON
<b>■ Reset Learned Words</b> > <b>Reset Learned Words</b> → Enter Phone Password → YES	—

### Conversion

From ► Text entry window, ☑ [Menu] ► **Text entry setting**

Setting/Operation	Default
<b>■ View Learned Words</b> > <b>Learned words</b> → Select a row → Select a log ● To delete learned words: Highlight a log → ☑ [Menu] → <b>Delete this</b> or <b>Delete all</b> (→ For <b>Delete all</b> , enter Phone Password) → YES	—
<b>■ Hide Predictive Candidates and Context Forecast Lists</b> > <b>Predict</b> → OFF	ON (Show)
<b>■ Hide Context Forecast List</b> > <b>Candidate display</b> → OFF	ON (Show)
<b>■ Fix Entered Characters Automatically</b> > <b>Character set time</b> → Select a speed	OFF
<b>■ Hide Word Suggestion Guidance for 2/NIKO-touch Input Method</b> > <b>2/NIKO-touch guide</b> → OFF	ON (Show)

## Conversion during Message Text Entry

From ► Main Menu ► Messaging ► Settings  
 ► Universal Settings ► Text Predict

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Deactivate Pre-text Predict</li> <li>&gt; <i>Pre-text Predict</i> → OFF</li> </ul>	ON
<ul style="list-style-type: none"> <li>■ Deactivate Time Season Predict</li> <li>&gt; <i>Time Season Predict</i> → OFF</li> </ul>	ON
<ul style="list-style-type: none"> <li>■ Activate Text Expression</li> <li>&gt; <i>Text Expression</i> → <i>Written Language</i> or <i>Colloquialism</i></li> </ul>	Normal Phrase

## Settings Phone Book

From ► Main Menu ► Phone ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Change Save Location for New Entry</li> <li>&gt; <i>Save Settings</i> → <i>USIM</i> or <i>Ask Every Time</i></li> </ul>	Phone
<ul style="list-style-type: none"> <li>■ Change Phone Book Search Method</li> <li>&gt; <i>Search Method</i> → Select a method</li> </ul>	A-KA-SA-TA-NA/ Reading
<ul style="list-style-type: none"> <li>■ Change Font Size</li> <li>&gt; <i>Font Size</i> → <i>Phone Book</i> or <i>Call Log</i> → <i>Large</i></li> </ul>	Standard
<ul style="list-style-type: none"> <li>■ Forbid Forwarding Phone Book Entry Images</li> <li>&gt; <i>Forwarding Image</i> → OFF</li> </ul>	ON*

\* If **ON** is selected, images can be forwarded via Infrared, IC transmission or Bluetooth®.

## Settings Voice Dial

From ► Main Menu ► Settings ► Phone Settings  
 ► Voice Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Activate Voice Dial Automatically</li> <li>&gt; <i>Auto Voice Dial</i> → ON</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Activate Voice Dial via Earphone or Bluetooth® Device</li> <li>&gt; <i>Voice Earphone Dial</i> → ON</li> </ul>	OFF

## Settings Video Call

### Function Menus

From ► Main Menu ► Settings ► Video Call

Setting/Operation	Default
■ Change Incoming Image Quality > <i>Incoming Video Qlty</i> → <i>Quality Prioritized</i> or <i>Motion Prioritized</i>	Standard
■ Change Outgoing Image > <i>Select Images</i> → Select a category → Highlight <i>Original</i> → [Menu] → <i>Change setting</i> → Select a folder → Select a file → [Play] to view image	Pre-installed
■ Switch Earpiece On > <i>Loud Speaker</i> → OFF	ON (Loud Speaker ON)
■ Switch to Voice Call when Video Call Fails > <i>Voice Call Auto Redial</i> → ON	OFF
■ Toggle Outgoing/Incoming Image Setting > <i>Switch Images</i> → Select an item	Receiving Priority

### Engaged Video Call Settings

From ► During a Video Call, [Menu] ► V. Call settings

Setting/Operation	Default
■ Change Incoming Image Quality > <i>Incoming Video Qlty</i> → <i>Qlty Prioritized</i> or <i>Motion Prioritized</i>	Standard
■ Change Brightness > <i>Brightness</i> → Select a brightness level	0
■ Adjust Outgoing Image Color Tone to Lighting Conditions > <i>White balance</i> → Select an environment	Automatic
■ Change Outgoing Image Color Tone > <i>Color mode set</i> → Select a color tone	Normal
■ Enhance Image Quality in Low Light Conditions > <i>Night mode</i> → ON	OFF
■ Set Focus > <i>Focus</i> → Select a focus type	Landscape

## Settings Horizontal Open Position

### Horizontal Open Menu/Wallpaper

From ► Main Menu ► Settings

Setting/Operation	Default
<p>■ Set a Default Operation when Handset is Opened to Horizontal Open Position</p> <p>&gt; <i>Phone Settings</i> → <i>Horizontal View</i> → <i>Horizontal Open Menu, TV</i> or <i>Camera</i></p>	OFF
<p>■ Change Menu Theme in Horizontal Open Position</p> <p>&gt; <i>Display Settings</i> → <i>Hor. Open Menu</i> → Select a pattern</p>	(☞P.18-28)
<p>■ Change Wallpaper</p> <p>&gt; <i>Display Settings</i> → <i>Internal Display</i> → <i>Stand-by Display Wide</i> → Select a folder → Select an image</p>	(☞P.18-28)
<p>■ Show Calendar in Standby</p> <p>&gt; <i>Display Settings</i> → <i>Internal Display</i> → <i>Stand-by Display Wide</i> → <i>Calendar</i> → <i>BG Image ON</i> or <i>BG Image OFF</i> (→ For <i>BG Image ON</i>, select a folder → Select an image)</p>	—
<p>■ Change Wallpaper Randomly</p> <p>&gt; <i>Display Settings</i> → <i>Internal Display</i> → <i>Stand-by Display Wide</i> → <i>Random Display</i> → Select a folder → <i>Every Hour</i> or <i>Every Day</i></p>	—

## Standby Clock

From ► Main Menu ► Settings ► Display Settings  
 ► Internal Display ► Clock ► Stand-by Clock Wide

Setting/Operation	Default
<p>■ Change Standby Clock Display<sup>1</sup></p> <p>&gt; [Pattern] → Select a pattern → [Set]</p>	(☞P.18-28)
<p>■ Change Standby Clock Position<sup>1 2</sup></p> <p>&gt; [Position] → Select a pattern → [Set]</p>	Pattern 3
<p>■ Change Standby Clock Size<sup>1</sup></p> <p>&gt; [Size] → <i>Small</i> → [Set]</p>	Large

<sup>1</sup> Highlight *Stand-by Clock Wide* → [Play] to view clock.

<sup>2</sup> Even if clock position is changed, clock appears in **Pattern 1** when:

- Calendar, World Clock or Operator Name is set to appear in Standby
- Time zone is set to other than GMT+9
- Privacy Key Lock is active

## Settings Digital TV

From ► **Main Menu** ► **TV** ► **User Settings**

Setting/Operation	Default
<p>■ Change Display Setting</p> <p>&gt; <i>Display/operation</i> → <i>Display Setting</i> → <i>Visual image+DBC</i> or <i>Enlarged V. image+DBC</i></p>	V. image+ Caption+ DBC
<p>■ Change Caption Position in Landscape View</p> <p>&gt; <i>Display/operation</i> → <i>Caption Posit. In W-scr</i> → <i>Upper</i></p>	Lower
<p>■ Hide Indicators in Landscape View</p> <p>&gt; <i>Display/operation</i> → <i>Icons</i> → <i>OFF</i></p>	ON
<p>■ Change Ticker Setting for Incoming Mail Notification</p> <p>&gt; <i>Display/operation</i> → <i>Mail Ticker Display</i> → <i>Sender+Subject</i> or <i>OFF</i></p>	Receipt Notification
<p>■ Deactivate TV when Handset is Closed</p> <p>&gt; <i>Display/operation</i> → <i>Work When Folded</i> → <i>Suspend</i> or <i>End</i></p>	Maintain
<p>■ Forbid Enhancing Frame Rate Automatically</p> <p>&gt; <i>Video</i> → <i>Mobile W-Speed</i> → <i>OFF</i></p>	ON
<p>■ Change Image Quality</p> <p>&gt; <i>Video</i> → <i>Image Quality</i> → Select an item</p>	Dynamic
<p>■ Set Back Light Duration while Watching TV</p> <p>&gt; <i>Display Light</i> → <i>Lighting Duration</i> → Enter duration (min.)</p>	Constant Light
<p>■ Deactivate Auto Volume</p> <p>&gt; <i>Sound Effect</i> → <i>Auto Volume</i> → <i>OFF</i></p>	ON

<p>■ Remaster Sounds from Earphone or Bluetooth® Device</p> <p>&gt; <i>Sound Effect</i> → <i>Remaster</i><sup>1</sup> → <i>ON</i></p>	OFF
<p>■ Add Listening Effect to Sound from Earphone or Bluetooth® Device</p> <p>&gt; <i>Sound Effect</i> → <i>Listening</i><sup>1</sup> → Select an item</p>	OFF
<p>■ Change Quality of Sound from Earphone or Bluetooth® Device</p> <p>&gt; <i>Sound Effect</i> → <i>Equalizer</i><sup>1</sup> → Select an item</p>	Normal
<p>■ End Recording when Battery Runs Low</p> <p>&gt; <i>Recording</i> → <i>Rec. When Low Battery</i> → <i>Stop Recording</i></p>	Continue Recording
<p>■ Start Recording TV Automatically when a Call Comes in while Watching TV</p> <p>&gt; <i>Recording</i> → <i>Rec. Program When Call</i> → <i>ON</i></p>	OFF
<p>■ Hide Images on Data Broadcast Sites</p> <p>&gt; <i>Data Broadcasting</i> → <i>Images</i> → <i>OFF</i></p>	ON
<p>■ Turn Off Sounds from Data Broadcast/Sites</p> <p>&gt; <i>Data Broadcasting</i> → <i>Sound Effect</i> → <i>OFF</i></p>	ON
<p>■ Show Confirmation on Data Broadcast</p> <p>&gt; <i>Data Broadcasting</i> → <i>Reset Settings</i> → <i>YES</i></p>	–
<p>■ Set Power Saving Mode<sup>2</sup></p> <p>&gt; <i>ECO Mode</i> → <i>YES</i></p>	OFF
<p>■ Reset Channel List</p> <p>&gt; <i>Reset Channel Setting</i> → Enter Phone Password → <i>YES</i></p>	–

<p>■ <b>Delete Information in Broadcasting Storage Area</b></p> <p>&gt; <b>Reset Storage Area</b> → (Highlight an affiliated channel →) [Menu] → <b>Delete</b> → <b>Delete this</b> or <b>Delete all</b> (→ For <b>Delete all</b>, enter Phone Password) → <b>YES</b></p>	—
<p>■ <b>Reset TV Settings</b></p> <p>&gt; <b>Reset TV Settings</b> → Enter Phone Password → <b>YES</b></p>	—
<p>■ <b>Check TV Settings</b></p> <p>&gt; <b>Check TV Settings</b></p>	—

<sup>1</sup> Remaster/Listening/Equalizer Settings: P.5-7

<sup>2</sup> To cancel ECO Mode, perform same operation. When ECO Mode is set, following settings automatically activate and cannot be changed. When canceled, original settings return.

**Mobile W-Speed:** OFF

**Image Quality:** Normal

**Remaster:** OFF

**Listening:** OFF

**Equalizer:** Normal

## Settings Camera

- Change settings before capturing images. (P.6-5).
- Some settings are not available depending on camera mode, image size or photo mode.

### Camera Settings (Camera Mode/Action Mode)

#### Camera Mode

From ► Main Menu ► Camera ► Camera ► [Menu]

#### Action Mode

From ► Main Menu ► Camera ► Camera ► [Video]  
► [Cont.] ► [Menu]

Setting/Operation	Default
<p>■ <b>Change Camera Mode</b></p> <p>&gt; <b>CHG camera-mode</b> → Select a mode</p>	—
<p>■ <b>Change Photo Mode</b></p> <p>&gt; <b>Photo mode</b> (P.6-9)</p>	Camera mode: Intelligent Auto Action mode: Normal
<p>■ <b>Change Image Size</b></p> <p>&gt; <b>Image size</b> → Select a size</p>	Camera mode: Standby (480x854) Action mode: VGA(480x640)

<p>■ <b>Change Brightness</b>          &gt; <i>Camera settings</i> → <i>Brightness</i> → Select a level</p>	±0
<p>■ <b>Adjust Color Balance According to Lighting Conditions</b>          &gt; <i>Camera settings</i> → <i>White balance</i> → Select an item</p>	Auto
<p>■ <b>Change Color Mode</b>          &gt; <i>Camera settings</i> → <i>Color mode set</i> → Select an item</p>	Normal
<p>■ <b>Change Focus Setting</b>          &gt; <i>Camera settings</i> → <i>Focus</i> → Select an item</p>	Camera mode: Face Detection Action mode: Auto
<p>■ <b>Change Image Quality</b>          &gt; <i>Camera settings</i> → <i>Image quality</i> → Select an item</p>	Fine
<p>■ <b>Deactivate Image Stabilizer</b>          &gt; <i>Camera settings</i> → <i>Img. stabilizer</i> → OFF</p>	Auto
<p>■ <b>Add Frames</b>          &gt; <i>Camera settings</i> → <i>Shoot with frame</i> → ON → Select a frame → Capture an image</p>	OFF
<p>■ <b>Change Shutter Click Sound</b>          &gt; <i>Camera settings</i> → <i>Shutter sound</i> → Select an item</p>	Sound 1
<p>■ <b>Minimize Flicker while Shooting near Fluorescent Light</b>          &gt; <i>Camera settings</i> → <i>Flicker correction</i> → <i>Mode 1 (50Hz)</i> or <i>Mode 2 (60Hz)</i></p>	Automatically

<p>■ <b>Change Save Location</b>          &gt; <i>Storage setting</i> → <i>Store in</i> → <i>microSD</i></p>	Phone
<p>■ <b>Set Auto-Save Off</b>          &gt; <i>Storage setting</i> → <i>Auto save set</i> → OFF</p>	ON (Automatically save)
<p>■ <b>Set Auto Shutter On</b>          &gt; <i>Auto shutter</i> (☞P.6-7)</p>	OFF
<p>■ <b>Capture Images with High Sensitivity</b>          &gt; <i>High sensitiv.</i> → ON</p>	OFF
<p>■ <b>Set Flash/Photo Light (Auto-flash)</b>          &gt; <i>Flash setting</i> or <i>Photo light set.</i> (☞P.6-9)</p>	Camera mode: Auto Action mode: OFF
<p>■ <b>Set Auto Timer</b>          &gt; <i>Auto timer</i> (☞P.6-7)</p>	OFF
<p>■ <b>Change Continuous Shooting Setting</b>          &gt; <i>Cont. shooting set.</i> (☞P.6-10)</p>	–
<p>■ <b>Change Viewfinder Size</b>          &gt; <i>Display size</i> → <i>Fit in display</i></p>	Actual size
<p>■ <b>Hide Display Indicators</b>          &gt; <i>Icon</i> → OFF</p>	ON (Show)
<p>■ <b>View Memory Information</b>          &gt; <i>Memory Status</i></p>	–

## Video Camera Settings (Video Camera Mode)

From **Main Menu** ► **Camera** ► **Video Camera**  
 ► [Menu]

Setting/Operation	Default
<b>Change Camera Mode</b> > <i>CHG camera-mode</i> → Select a mode	–
<b>Change Photo Mode</b> > <i>Photo mode</i> (☞P.6-9)	Normal
<b>Change Image Size</b> > <i>Image size</i> → Select a size	QVGA (320x240)
<b>Change Recording Time</b> > <i>File size setting</i> → <i>Mail restrict'n(S)</i> or <i>Long time</i>	Mail restrict'n (L)
<b>Change Brightness</b> > <i>Camera settings</i> → <i>Brightness</i> → Select a level	±0
<b>Adjust Color Balance According to Lighting Conditions</b> > <i>Camera settings</i> → <i>White balance</i> → Select an item	Auto
<b>Change Color Mode</b> > <i>Camera settings</i> → <i>Color mode set</i> → Select an item	Normal
<b>Change Focus Setting</b> > <i>Camera settings</i> → <i>Focus</i> → Select an item	Face Detection
<b>Change Image Quality</b> > <i>Camera settings</i> → <i>Image quality</i> → Select an item	Fine
<b>Deactivate Image Stabilizer</b> > <i>Camera settings</i> → <i>Img. stabilizer</i> → <i>OFF</i>	Auto

<b>Change Shutter Click Sound</b> > <i>Camera settings</i> → <i>Shutter sound</i> → Select an item	Sound 1
<b>Minimize Flicker while Shooting near Fluorescent Light</b> > <i>Camera settings</i> → <i>Flicker correction</i> → <i>Mode 1 (50Hz)</i> or <i>Mode 2 (60Hz)</i>	Automatically
<b>Change Save Location</b> > <i>Storage setting</i> → <i>Store in</i> → <i>microSD</i>	Phone
<b>Set Auto-Save Off</b> > <i>Storage setting</i> → <i>Auto save set</i> → <i>OFF</i>	ON (Automatically save)
<b>Set Photo Light (Auto-flash)</b> > <i>Photo light set.</i> → <i>ON</i>	OFF
<b>Set Auto Timer</b> > <i>Auto timer</i> (☞P.6-7)	OFF
<b>Forbid Recording Audio</b> > <i>Movie type set</i> → <i>Video</i>	Normal
<b>Change Viewfinder Size</b> > <i>Display size</i> → <i>Fit in display</i>	Actual size
<b>Change to Mail Attachment Mode</b> > <i>Attach msg. mode</i> → <i>YES</i>	–
<b>Hide Display Indicators</b> > <i>Icon</i> → <i>OFF</i>	ON (Show)
<b>View Memory Information</b> > <i>Memory Status</i>	–

## Settings Mobile Widget (Japanese)

From ► Main Menu ► Widget ► Settings

Setting/Operation	Default
■ Deactivate Auto Update > <i>Auto Refresh</i> → OFF	ON (Activate)
■ Activate Auto Roaming Abroad > <i>Auto Roaming</i> → ON	OFF (Deactivate)
■ Hide Confirmation when Roaming Abroad > <i>Roaming Notification</i> → OFF	ON (Show)
■ Forbid Sending/Receiving Cookies > <i>Cookies</i> → OFF	ON (Send/Receive)
■ Delete Cookies > <i>Delete Cookies</i> → YES	—
■ Change Pointer Speed > <i>Pointer Speed</i> → <i>High Speed</i> or <i>Low Speed</i>	Medium Speed

## Settings S! Quick News (Japanese)

### Display Settings

From ► Main Menu ► Settings ► Display Settings  
► Internal Display ► S! Quick News Settings

Setting/Operation	Default
■ Show Only Unread Items in Standby > <i>Unread/Read Setting</i> → Unread	Unread + Read
■ Change Marquee Speed > <i>Marquee Speed</i> → <i>Fast</i> or <i>Slow</i>	Normal
■ Hide S! Quick News > <i>Display Always</i> → OFF	ON (Show)
■ Image Download > <i>Image Display</i> → ON	OFF

## Auto Update/Deleting Information

From ► **Main Menu** ► News/Entertainment  
► S! Quick News ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Automatically Update Quick News in S! Quick News List<sup>1 2</sup></li> <li>&gt; <i>Auto Refresh</i> → S! Quick News → Set update frequency</li> </ul>	1 hour
<ul style="list-style-type: none"> <li>■ Deactivate Auto Update General News (Once a day)</li> <li>&gt; <i>Auto Refresh</i> → General → OFF</li> </ul>	ON <sup>1 2</sup>
<ul style="list-style-type: none"> <li>■ Automatically Update Special News (Every four hours)<sup>1 2</sup></li> <li>&gt; <i>Auto Refresh</i> → Special → ON</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Delete S! Quick News Information</li> <li>&gt; <i>Del S! Quick News List</i> → YES → Enter Phone Password</li> </ul>	—

<sup>1</sup> If calls are in progress at update time, auto update does not occur until next update.

<sup>2</sup> Video Calls are rejected during auto update.

## Settings Bluetooth®

From ► **Main Menu** ► Tools ► Bluetooth  
► My Devices Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Set Authentication/Encryption to Send Phone Book Entries</li> <li>&gt; <i>Set Authentications</i> → ON → ON</li> </ul>	OFF/OFF
<ul style="list-style-type: none"> <li>■ Enter Password when Sending All Phone Book Entries</li> <li>&gt; <i>Session Number Setting</i> → ON</li> </ul>	OFF
<ul style="list-style-type: none"> <li>■ Set Duration to Search for Bluetooth® Devices</li> <li>&gt; <i>Time-out to Search</i> → Enter duration (sec.)</li> </ul>	05 sec
<ul style="list-style-type: none"> <li>■ Stop Ringtone Output to Headset/Handsfree Device</li> <li>&gt; <i>Forward Ring Tone</i> → OFF</li> </ul>	ON
<ul style="list-style-type: none"> <li>■ Continue Calls on Handset when Bluetooth® is Disconnected from Headset/Handsfree Device</li> <li>&gt; <i>Disconnection Settings</i> → Continue on the Phone</li> </ul>	End the Call
<ul style="list-style-type: none"> <li>■ Always Make Calls from Handset even when Headset Device is Connected</li> <li>&gt; <i>Dial from Headset</i> → Deactivate</li> </ul>	Activate
<ul style="list-style-type: none"> <li>■ Always Use Handsfree Device to Make/Receive Calls</li> <li>&gt; <i>Handsfree Setting</i> → Handsfree Mode</li> </ul>	Private Mode <sup>1</sup>

■ View Bluetooth® Properties

> Device Properties<sup>2</sup>

<sup>1</sup> In **Private Mode**, device that makes/answers call takes priority.

<sup>2</sup> Device name, address, class and supported services appear.

To change device name: [✉] [Edit]

## Settings Messaging

### Universal Settings

From ► Main Menu ► Messaging ► Settings  
► Universal Settings

Setting/Operation	Default
■ Change Font Size <sup>1</sup> > Font Size → Small or Large	Normal
■ Set Scroll Unit in Text Entry/Preview Window > Scroll Unit → Half Screen or Whole Screen	Single Line
■ Quote Original Message in Reply > Quote Message → Check items → [✉] [Finish]	SMS: OFF S! Mail/ PC Mail: ON
■ Set Attachment Size <sup>2</sup> > Image Compression → Select a size or OFF	500KB
■ Request Delivery Confirmation (Available when messaging to SoftBank handset numbers) > Delivery Report → ON	OFF
■ Change Anti-Spam Measures > Anti-Spam Measures → Report Spam → [⊙] [Edit] → Edit recipient address → [✉] [Finish] → YES	stop@meiwaku. softbankmobile. co.jp

<ul style="list-style-type: none"> <li>■ <b>Reset Anti-Spam Measures</b></li> <li>&gt; <i>Anti-Spam Measures</i> → <i>Report Spam</i> → [Menu] → <i>Reset Address</i> → [Finish] → <i>YES</i></li> </ul>	—
<ul style="list-style-type: none"> <li>■ <b>Set Auto Delete Off (For Sent/Unsent)</b></li> <li>&gt; <i>Auto Sent Msg Del</i> → <i>OFF</i></li> </ul>	ON
<ul style="list-style-type: none"> <li>■ <b>Set Auto Delete Off (For Incoming Mail)</b></li> <li>&gt; <i>Auto Received Msg Del</i> → <i>ON (Read Msg Only)</i> or <i>OFF</i></li> </ul>	ON (All Msg)
<ul style="list-style-type: none"> <li>■ <b>Hide Incoming Mail Notification while Other Function is Active</b></li> <li>&gt; <i>Receiving Display</i> → <i>Operation Preferred</i></li> </ul>	Alarm Preferred (Show)
<ul style="list-style-type: none"> <li>■ <b>Hide Outgoing Mail Display</b></li> <li>&gt; <i>Sending Display</i> → <i>OFF</i></li> </ul>	ON (Show)

<sup>1</sup> Character size in SMS or S! Mail subject field does not change. Check preview to see actual size.

<sup>2</sup> JPEG files only

## S! Mail Settings

From ► **Main Menu** ► **Messaging** ► **Settings** ► **S! Mail Settings**

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ <b>Set Reply-to Address</b></li> <li>&gt; <i>Sending Options</i> → <i>Set Reply-To</i> → <i>ON</i> → Select reply-to address entry field → Select a reply-to address or enter directly → [Finish]</li> </ul>	OFF (Not set)

<ul style="list-style-type: none"> <li>■ <b>Set Signature</b></li> <li>&gt; <i>Sending Options</i> → <i>Set Signature</i> → <i>ON</i> or <i>ON When New</i> → Select signature entry field → Enter signature → [Finish]</li> </ul>	OFF (Not set)
<ul style="list-style-type: none"> <li>■ <b>Change Maximum Outgoing Message Size</b></li> <li>&gt; <i>Sending Options</i> → <i>Create Msg. Size</i> → <i>300KB</i></li> </ul>	2MB
<ul style="list-style-type: none"> <li>■ <b>Limit Maximum Incoming Message Size</b></li> <li>&gt; <i>Incoming Options</i> → <i>Download Size Limit</i> → <i>300KB</i></li> </ul>	2MB
<ul style="list-style-type: none"> <li>■ <b>Deactivate/Limit Auto Retrieval</b></li> <li>&gt; <i>Incoming Options</i> → <i>Auto Retrieve Size</i> → <i>Auto Retrieve OFF</i> or <i>Up to 300KB</i></li> </ul>	Up to 1MB
<ul style="list-style-type: none"> <li>■ <b>Limit Auto-retrieval by Message Type</b></li> <li>&gt; <i>Incoming Options</i> → <i>Auto Retrieve for</i> → <i>Selected Messages</i> → Check <i>Address Stored in PB</i> or <i>SoftBank Domain Only</i><sup>1</sup> → [Finish]</li> </ul>	All Messages
<ul style="list-style-type: none"> <li>■ <b>Play Attached Music Files Automatically<sup>2</sup></b></li> <li>&gt; <i>Incoming Options</i> → <i>Auto Sound Play</i> → <i>ON</i></li> </ul>	OFF (Not play back)

<sup>1</sup> Including messages received from Disney Mobile

<sup>2</sup> When multiple sound files are attached, the first file plays.

## PC Mail Settings

From ► Main Menu ► Messaging ► Settings  
► PC Mail Settings

Setting/Operation	Default
<b>■ Disable Auto-retrieval for New Messages</b> > <i>Check New Mail</i> → <i>Auto Check</i> → Select an account (Each selection toggles ON/OFF) → ☑ [Finish]	ON*
<b>■ Set Auto-retrieval Interval for New Messages</b> > <i>Check New Mail</i> → <i>Check Interval</i> → Select an interval or <i>When Power ON</i>	2 hours
<b>■ Automatically Retrieve New Messages while Abroad</b> > <i>Check New Mail</i> → <i>Auto Check in Roaming</i> → <i>ON</i>	OFF
<b>■ Disable Auto-retrieval between Set Time Period</b> > <i>Check New Mail</i> → <i>Inactivate Time</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i> , enter time)	ON (Start time: 22:00/End time: 06:00)

\* Setting automatically turns *ON* once account is registered.

## SMS Settings

From ► Main Menu ► Messaging ► Settings  
► SMS Settings

Setting/Operation	Default
<b>■ Change SMS Center Number*</b> > <i>Message Center</i> → Enter SMS Center number	+819066519300
<b>■ Set Input Character to English</b> > <i>Set Input Character</i> → <i>English (160char.)</i>	Japanese (70char.)

\* Do not change Message Center number unless instructed so by SoftBank. Changing Message Center number may disable SMS.

## Settings Internet

### Browser Display Settings

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Set Yahoo! Keitai

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser  
► Set PC Site Browser

Setting/Operation	Default
■ Font Size > <i>Font Size</i> → <i>Large</i> or <i>Small</i>	Normal
■ Scroll Unit > <i>Scroll Unit</i> → <i>Whole Screen</i> or <i>Half Screen</i>	Single Line
■ Images Off > <i>Downloads</i> → <i>Display Image</i> → <i>OFF</i>	ON
■ Sound Off > <i>Downloads</i> → <i>Play Sounds</i> → <i>OFF</i>	ON
■ Change Pointer (Scroll) Speed* > <i>Pointer Speed</i> → <i>High Speed</i> or <i>Low Speed</i>	Medium Speed
■ Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai* > <i>Warning Messages</i> → <i>PC Site Browser</i> (when activating) or <i>Yahoo! Keitai</i> (when switching) → <i>OFF</i>	ON

\* PC Site Browser only

### Memory Manager & Reset

Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Set Yahoo! Keitai

PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser  
► Set PC Site Browser

Setting/Operation	Default
■ Clear Cache > <i>Memory Manager</i> → <i>Clear Cache</i> → <i>YES</i>	–
■ Delete Cookies > <i>Memory Manager</i> → <i>Delete Cookies</i> → <i>YES</i>	–
■ Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → <i>Delete Certificates</i> → <i>YES</i>	–
■ Set Data Storage Location to microSD Card* > <i>Save Settings</i> → <i>microSD</i>	Phone

\* Yahoo! Keitai Browser only

## Security Settings

### Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Set Yahoo! Keitai  
► Security

### PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser  
► Set PC Site Browser ► Security

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Set Auto Send Off for Manufacturer's Number (for Authentication)</li> <li>&gt; <i>Manufacture Number</i> → OFF</li> </ul>	ON (Send)
<ul style="list-style-type: none"> <li>■ Forbid Sending Referer Information</li> <li>&gt; <i>Send Referer</i> → OFF</li> </ul>	ON (Send)
<ul style="list-style-type: none"> <li>■ Select whether or Not to Allow Cookies to Be Stored on Handset</li> <li>&gt; <i>Cookies</i> → OFF or Ask Every Time</li> </ul>	ON (Save)
<ul style="list-style-type: none"> <li>■ Select whether or Not to Run Scripts in Yahoo! Keitai<sup>1</sup></li> <li>&gt; <i>Script</i> → Select an item</li> </ul>	Ask before Connect
<ul style="list-style-type: none"> <li>■ Select whether or Not to Run Scripts in PC Site Browser<sup>2</sup></li> <li>&gt; <i>Script</i> → Select an item</li> </ul>	ON (Run)
<ul style="list-style-type: none"> <li>■ View Server Certificates Issued by Certificate Authorities</li> <li>&gt; <i>Root Certificates</i> → Select an item</li> </ul>	–

<ul style="list-style-type: none"> <li>■ Select whether or Not to Retain Authentication Information</li> <li>&gt; <i>Certificate Retention</i> → Always Keep or Not Keep</li> </ul>	Keep While Browsing
<ul style="list-style-type: none"> <li>■ Hide Confirmation when Connecting to Secure Site</li> <li>&gt; <i>Secure Prompt</i> → OFF</li> </ul>	ON

<sup>1</sup> Yahoo! Keitai Browser only

<sup>2</sup> PC Site Browser only

## Reset

### Yahoo! Keitai

From ► **Main Menu** ► Yahoo! ► Reset

### PC Site Browser

From ► **Main Menu** ► Yahoo! ► PC Site Browser ► Reset

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Reset Browser Settings</li> <li>&gt; <i>Restore Defaults</i> → YES → Enter Phone Password</li> </ul>	–
<ul style="list-style-type: none"> <li>■ Initialize Browser</li> <li>&gt; <i>Initialized Browser</i> → YES → Enter Phone Password</li> </ul>	–

## Settings S! Appli

From ► Main Menu ► S! Appli ► S! Appli Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ Volume</li> <li>&gt; <i>Volume</i> →  to adjust volume</li> </ul>	Level 4
<ul style="list-style-type: none"> <li>■ Backlight On/Off<sup>1</sup></li> <li>&gt; <i>Display Backlight</i> → <i>Always ON</i> or <i>Always OFF</i></li> </ul>	Follow General Setting <sup>2</sup>
<ul style="list-style-type: none"> <li>■ Deactivate Vibration</li> <li>&gt; <i>Vibration</i> → <i>OFF</i></li> </ul>	ON (Activate)
<ul style="list-style-type: none"> <li>■ Update S! Appli Information on microSD Card from Another Handset</li> <li>&gt; <i>Synchronize microSD</i></li> </ul>	—

<sup>1</sup> Back Light does not go out completely when S! Appli is active.

<sup>2</sup> Back Light Time setting (P.18-5) applies.

## Settings Osaifu-Keitai®

From ► Main Menu ► Tools ► Osaifu-Keitai  
► IC Card Settings

Setting/Operation	Default
<ul style="list-style-type: none"> <li>■ View IC Card Status</li> <li>&gt; <i>IC Card Status</i></li> </ul>	—
<ul style="list-style-type: none"> <li>■ Disable Handset Response to Commands from Reader/Writer</li> <li>&gt; <i>Interface Settings</i> → Enter Phone Password → Select an item → <i>OFF</i></li> </ul>	All ON

## Settings S! GPS Navi Settings

From ► Main Menu ► Tools ► S! GPS Navi ► NAVI Settings

Setting/Operation	Default
<p>■ <b>Select Navi Appli to Activate</b>                      &gt; <i>Select Navi Appli</i> → Select a Navi Appli</p>	NAVITIME
<p>■ <b>Save Current Map URL</b>                      &gt; <i>Map URL Settings</i> → Highlight &lt;Not Recorded&gt;                      → [Edit] → <i>URL Name</i> → Enter a name →  <i>Map URL</i> → Enter a URL ("http://" or "https://") →                      [Finish]</p>	—
<p>■ <b>Select Map URL</b>                      &gt; <i>Map URL Settings</i> → Select a name</p>	NAVITIME
<p>■ <b>Edit/Delete Map URL*</b>                      &gt; <i>Map URL Settings</i> → Highlight a name →                      [Menu] → <i>Edit</i> or <i>Delete</i></p>	—
<p>■ <b>Activate to Lock Positioning Function</b>                      &gt; <i>Positioning Lock</i> → Enter Phone Password → <b>ON</b></p>	OFF
<p>■ <b>Hide Confirmation when Sending Location Information</b>                      &gt; <i>Send Location Info</i> → Enter Phone Password →  <i>Send without Check</i> (Send location information without showing confirmation)</p>	Send with Check (Show confirmation every time)
<p>■ <b>Hide Notification of Incoming Location Provision Request</b>                      &gt; <i>Notification Setting</i> → Enter Phone Password → <b>OFF</b></p>	ON

■ **Set Positioning Ringtone/Vibrator/Ringtone Duration**

> *Recv Location Request* → *Ringtone, Vibration Alert* or *Ringtone Duration* → Set individual item

Ringtone:  
 Pattern 2  
 Vibrator Alert:  
 Pattern 1  
 Ringtone  
 Duration:  
 05 seconds

\* Pre-installed NAVITIME cannot be edited or deleted.

## Default Settings

Default settings vary by handset color as below.

- For operations, refer to respective setting sections.

Setting		White	Black	Gold	Pervinca Blue	
<b>Notification Light</b> (☞P.18-10)	Incoming	Voice Call	A-Signal	B-Signal	C-Signal	D-Signal
		Video Call	A-Signal	B-Signal	C-Signal	D-Signal
		Message	A-Rhythm	B-Rhythm	C-Rhythm	D-Rhythm
	Side Key (Upper Side Key)		A-HOTARU	B-HOTARU	C-HOTARU	D-HOTARU
<b>Display Settings</b> (☞P.18-3 to 6, P.18-14)	Stand-by Display		White 1	Blue 1	Champagne 1	Blue 1
	Stand-by Display Wide		White 2	Blue 2	Champagne 2	Blue 2
	Stand-by Clock	Pattern	Pattern 1	Pattern 4	Pattern 1	Pattern 4
	Stand-by Clock Wide	Pattern	Pattern 1	Pattern 4	Pattern 1	Pattern 4
	Icon Clock		Pattern 1	Pattern 4	Pattern 1	Pattern 4
	Outgoing Image (Call/Message)		White	Blue	Champagne	Blue
	Incoming Image (Call/Message)		White	Blue	Champagne	Blue
	Menu Icons		White	Blue	Champagne	Blue
	Horizontal Open Menu		Pattern 2	Pattern 1	Pattern 2	Pattern 1
	Color Scheme		White	Black	Gold	Blue

# Confirming Settings

Main Menu ► Settings ► Phone Settings  
► Confirm Settings

## ■ Confirmable Settings

- Back Light Time
  - View Blind
  - Volume
  - Shikkari Talk
  - Noise Reduction
  - Select Network
  - Horizontal View
- ★ appears for items changed from default settings.

