

# Appendix

<b>Function List</b> .....	<b>19-2</b>
<b>Troubleshooting</b> .....	<b>19-10</b>
Warning Signs .....	19-12
<b>Software Update</b> .....	<b>19-12</b>
Updating Software Manually.....	19-12
Updating Software Automatically .....	19-13
<b>Quick Open Menu</b> .....	<b>19-14</b>
<b>Key Assignments (5-touch Mode)</b> .....	<b>19-15</b>
<b>Key Assignments (2-touch Mode)</b> .....	<b>19-16</b>
<b>Key Assignments (NIKO-touch Mode)</b> .....	<b>19-17</b>
<b>Symbol List</b> .....	<b>19-18</b>
<b>Character Code List</b> .....	<b>19-19</b>
<b>Weather Indicator List</b> .....	<b>19-24</b>
<b>Memory List</b> .....	<b>19-25</b>
<b>Specifications</b> .....	<b>19-26</b>
<b>Index</b> .....	<b>19-27</b>
<b>Warranty &amp; Service</b> .....	<b>19-33</b>
Warranty .....	19-33
After-Sales Service .....	19-33
<b>Customer Service</b> .....	<b>19-34</b>



## Function List


From Main Menu, press key corresponding to a menu number for direct access (☞P.1-21).

Example: To select **S! Mail Settings** in Messaging menu:


**1** first column **0** second column **3** third column

① (Messaging) → ② (Settings) → ③ (S! Mail Settings)


- To select ①:  → ①; To select ②:  → ②
- When Menu Icons are set to Basic or Customize, first column of function number is not available. Select a menu from Main Menu; then select a function number (second column in table).

 Messaging		
Menu Number/Function Name		Page
1	Messaging	–
1	Incoming Mail	–
1	Received	P.14-3
2	ユーザーフォルダ 1	P.14-3
3	ユーザーフォルダ 2	P.14-3
4	ユーザーフォルダ 3	P.14-3
5	Spam Folder	P.14-3
2	Create New	P.14-4
3	Retrieve New	P.14-15
4	Drafts	P.14-16
5	Templates	–
1	Download Templates	P.14-10
6	Sent/Unsent	–
1	Sent/Unsent	P.14-3
2	ユーザーフォルダ 1	P.14-3
3	ユーザーフォルダ 2	P.14-3


1	6	4	ユーザーフォルダ3	P.14-3
	7		Server Mail	–
	1		Retrieve Mail List	P.14-14
	2		Retrieve All	P.14-14
	3		Delete All	P.14-15
	4		Server Mail Memory	P.14-15
	8		Create New PC Mail	P.14-25
	9		Create New SMS	P.14-7
	0		Settings	–
	1		Custom Mail Address	P.14-3
	2		Universal Settings	P.18-21
	3		S! Mail Settings	P.18-22
	4		PC Mail Settings	P.18-23
	5		SMS Settings	P.18-23
	①		Memory Status	P.14-3


 Yahoo! (Yahoo! Keitai)		
Menu Number/Function Name		Page
2	Yahoo!	–
1	Yahoo! Keitai	P.15-3
2	Menu List	P.15-3
3	Bookmarks	P.15-8
4	Saved Pages	P.15-8
5	Enter URL	–
1	Direct Entry	P.15-4
2	URL History List	P.15-4
6	History	P.15-4
7	PC Site Browser	–
1	Homepage	P.15-5
2	Bookmarks	P.15-8


2	7	3	Saved Pages	P.15-8	
		4	Enter URL	P.15-5	
		5	History	P.15-5	
		6	Yahoo! Keitai	P.15-5	
		7	Set PC Site Browser	P.18-24	
		8	Reset	P.18-25	
		8	Set Yahoo! Keitai		–
			1	Font Size	P.18-24
	2		Scroll Unit	P.18-24	
	3		Downloads	P.18-24	
	4		Memory Manager	P.18-24	
	5		Security	P.18-25	
	9	Reset		–	
		1	Restore Defaults	P.18-25	
		2	Initialized Browser	P.18-25	


	<b>S! Appli</b>			
	<b>Menu Number/Function Name</b>		<b>Page</b>	
	3	S! Appli		–
		1	S! Appli List	–
	1		Download S! Appli	P.16-2
	2	Osaifu-Keitai		–
		1	Lifestyle-Appli	P.13-10, P.16-2
		2	IC Card Settings	P.13-12
	3	S! Appli Settings		–
		1	Volume	P.18-26
		2	Display Backlight	P.18-26
		3	Vibration	P.18-26
		4	Synchronize microSD	P.18-26

3	4	S! Appli History	P.16-3
	5	Information	P.16-2

	<b>News/Entertainment</b>				
	<b>Menu Number/Function Name</b>		<b>Page</b>		
	4	News/Entertainment		–	
		1	S! Info Ch./Weather		–
			1	What's New?	P.8-2
			2	History	P.8-2
			3	Register/Cancel	P.8-2
			4	Get Latest Contents	P.8-2
			5	Weather Indicator	P.8-3
		2	S! Quick News		–
			1	S! Quick News List	P.8-4
			2	Settings	P.18-20
		3	Digital Media Viewer		P.8-6
		4	BookSurfing		P.8-6
	5	e-Book Viewer		P.8-6	
	6	Post Blog		P.8-7	


	<b>Camera</b>			
	<b>Menu Number/Function Name</b>		<b>Page</b>	
	5	Camera		–
		1	Camera	P.6-6
		2	Video Camera	P.6-7
		3	Pictures	P.6-12
	4	Videos	P.6-12	

 Videos/Music		
Menu Number/Function Name		Page
6	Videos/Music	P.1-31

 Tools		
Menu Number/Function Name		Page
7	Tools	–
1	Alarms	P.13-6
2	Calendar	P.13-2
3	Calculator	P.13-8
4	Notepad	P.13-8
5	Tasks	P.13-5
6	Osaifu-Keitai	–
1	Lifestyle-Appli	P.13-10
2	IC Card Settings	P.13-12
7	Dictionary	P.13-13
8	Sound Recorders	–
1	Voice Call Data	P.2-16
2	Video Call Data	P.2-16
3	Answer Phone Setting	P.2-15
4	Voice Recorder	P.13-14
5	Voice Announce	P.13-14
9	Bar Code Reader	–
1	Scan Barcodes	P.13-15
2	Saved Data List	P.13-16
0	SI! GPS Navi	–
1	Navi Appli	P.17-3
2	Current Location	P.17-2
3	Location Navi	P.17-3


7	0	4	Location Logs	P.17-3
		5	NAVI Settings	P.18-27
①	Bluetooth		–	
	1	Search&Paired Device	P.11-7	
	2	Bluetooth OFF/Bluetooth ON	P.11-8	
	3	Accept Registered	P.11-9	
	4	Dialup Rgstry Standby	P.11-10	
	5	Receive via Bluetooth	P.11-9	
②	6	My Devices Settings	P.18-20	
	Wi-Fi		–	
	1	ON/OFF	P.11-12	
	2	Access Point Search	P.11-12	
	3	Profile Lists/Settings	P.11-13	
	4	Wi-Fi/3G Switch Conf.	P.11-16	
③	5	Connection Status	P.11-15	
	6	MAC Address	P.11-16	
	Receive via Infrared		–	
	1	Receive	P.11-3	
	2	Receive All	P.11-4	
	④	Music Player		–
1		All Tracks	P.9-6	
2		Play List	P.9-6	
3		Artist	P.9-6	
4		Album	P.9-6	
5		Genre	P.9-6	
⑤	microSD Backup		–	
	1	Phone Book	P.10-20	
	2	Calendar	P.10-20	
	3	Tasks	P.10-20	
	4	Incoming Mail	P.10-20	
	5	Sent Messages	P.10-20	


7	⑤	6	Unsent Messages	P.10-20
		7	Drafts	P.10-20
		8	Notepad	P.10-20
		9	Bookmarks	P.10-20
	⑥	Templates/Users Dic.		–
		1	Templates	P.3-6
		2	User's Dictionary	P.3-11
		3	Download Dictionary	P.3-11

 <b>Data Folder</b>				
Menu Number/Function Name				Page
8	Data Folder			–
1	Pictures			–
	1	Download Pictures		P.10-2
	2	Variety Photo Viewer		P.10-24
	3	Main Folder		P.10-2
	4	Camera		P.10-2
	5	My Pictograms		P.10-2
	6	Mail Art		P.10-2
	7	Pre-installed		P.10-2
	8	Original Animation		P.10-2
2	Ring Songs&Tones			–
	1	DL Ring Songs&Tones		P.10-2
	2	Main Folder		P.10-2
	3	Pre-installed		P.10-2
	4	Voice Announce		P.10-2
	5	Play List		P.10-2
3	S! Appli			–
	1	Download S! Appli		P.16-2
4	Widget			–

8	4	1	Download Widget	P.7-4
	5	Music		–
		1	Main Folder	P.10-2
		2	WMA	P.10-2
	6	Videos		–
		1	Download Videos	P.10-3
		2	Main Folder	P.10-3
		3	Camera	P.10-3
		4	Pre-installed	P.10-3
		5	BD/DVD Recorder	P.10-3
		6	Play List	P.10-3
		7	Position Memory	P.10-3
	7	PC Movies		–
		1	microSD	P.10-3
		2	Position Memory	P.10-3
		3	Play History	P.10-3
	8	TV		–
		1	Image	P.5-13
		2	Video	P.5-12
		3	Position Memory	P.10-3
	9	Lifestyle-Appli		–
		1	Download	P.13-10
	0	Books		–
		1	Download Books	P.10-3
	①	Customized Screen		–
		1	Customized Screen	P.1-26
	②	Templates		–
		1	Download Templates	P.14-10
	③	Font		–
		1	Download Font	P.10-3
		2	Main Folder	P.10-3

8	③	3	Pre-installed	P.10-3
	④		Other Documents	–
		1	Main Folder	P.10-3

 <b>Widget (Mobile Widget)</b>				
			Menu Number/Function Name	Page
9	Widget			–
	1	Widget Store		P.7-4
	2	Widget Contents		–
		1	Download Widget	P.7-4
	3	Settings		–
		1	Delete Content	P.7-2
		2	Auto Refresh	P.18-19
		3	Auto Roaming	P.18-19
		4	Roaming Notification	P.18-19
		5	Cookies	P.18-19
		6	Delete Cookies	P.18-19
	7	Pointer Speed	P.18-19	

 <b>TV</b>				
			Menu Number/Function Name	Page
*	TV			–
	1	Watch TV		P.5-5
	2	Program List		P.5-7
	3	Timer Watching		P.5-13
	4	Timer Recording		P.5-13
	5	Recording Result		P.5-14
	6	TV Link		P.5-10
	7	Channel List		P.5-4
	8	Channel Setting		–
		1	Select Area	P.5-4
		2	Automatic	P.5-4
	9	User Settings		–
		1	Display/operation	P.18-15
		2	Video	P.18-15
		3	Display Light	P.18-15
		4	Sound Effect	P.18-15
		5	Recording	P.18-15
		6	Data Broadcasting	P.18-15
		7	ECO Mode	P.18-15
		8	Reset Channel Setting	P.18-15
		9	Reset Storage Area	P.18-16
	0	Reset TV Settings	P.18-16	
	*	Check TV Settings	P.18-16	

Phone		
	Menu Number/Function Name	Page
	Phone	—
1	Phone Book	P.4-2
2	Create New Entry	P.4-3
3	Call Log	—
	1 Outgoing Call Logs	P.2-13
	2 Incoming Call Logs	P.2-13
4	Group	P.4-6
5	Account Details	P.1-34, P.4-12
6	S! Addressbook BkUp	—
	1 Start Sync	P.4-11
	2 Details	P.4-11
7	Memory Manager	P.4-9
8	Restrictions	P.12-12
9	Settings	—
	1 Save Settings	P.18-12
	2 Search Method	P.18-12
	3 Font Size	P.18-12
	4 Voice Dial	P.4-13
	5 Mail Group	P.14-19
	6 Forwarding Image	P.18-12
0	Memory Status	P.4-9

● Number in first column is not available for Phone Book.

Settings		
	Menu Number/Function Name	Page
#	Settings	—
1	Sound Settings	—
	1 Ring Tones	P.18-2
	2 Machi-Uta	P.18-2
	3 Ringer Volume	P.18-2
	4 Key Tone	P.18-2
	5 Stereo/3D Sound	P.18-2
	6 Earphone	P.18-2
	7 Message Ring Tones	P.18-2
2	Display Settings	—
	1 Internal Display	P.18-3
	2 External Display	P.18-6
	3 Font Size	P.18-6
	4 Font	P.1-27
	5 Menu Icons	P.18-4
	6 Hor. Open Menu	P.18-14
	7 Back Light Time	P.18-5
	8 View Blind	P.1-34
	9 Color	P.18-4
	0 Private Menu	P.1-28
	* 言語設定	P.18-4
	# Open For New	P.18-4
	① LCD AI	P.18-5
	② Disp. Call/Recv #	P.18-6
	③ Describe Icons	P.1-11
3	Customized Screen	—
	1 Customized Screen	P.1-27
	2 Release Settings	P.1-27

#	4	Incoming Settings	–	
		1	Vibrator	P.18-2
		2	Manner Mode Type	P.18-7
		3	Answer Setting	P.18-8
		4	Open-to-Ans. Call	P.18-8
		5	Call Logs	P.12-9
		6	Phone Book Image	P.18-8
		7	Ring Time Settings	P.12-12
		8	Info Notice Setting	P.18-8
		9	Auto Answer	P.18-8
		0	In-call Management	P.18-8
#	5	Phone Settings	–	
		1	Horizontal View	P.18-14
		2	Touchpad Setting	P.18-7
		3	Side-keys Guard	P.12-9
		4	Text Entry Method	P.18-11
		5	Battery	P.18-3
		6	Pause Dial	P.2-3
		7	Headset Switch to Call	P.18-10
		8	Voice Settings	P.18-12
		9	Confirm Settings	P.18-29
		0	Videos/Music Updates	P.1-31
*	Software Update	P.19-12		
#	6	Date & Time	–	
		1	Date & Time	P.18-9
		2	World Clock	P.18-9
		3	Daylight Savings	P.18-9
		4	Alarm Tone	P.18-9
		5	Time Correction	P.18-9

#	7	Security	–	
		1	Privacy Key Lock	P.12-4
		2	Personal Data Lock	P.12-5
		3	IC Card Lock	P.13-12
		4	Secret Mode	P.12-10
		5	Secret Data Only	P.12-10
		6	Key Pad Dial Lock	P.12-8
		7	Reject Unknown	P.12-13
		8	Call Setting w/o ID	P.12-13
		9	All Reset	P.12-14
		0	Reset Settings	P.12-13
		*	PIN Authentication	P.12-2
		#	Change Phone Password	P.12-2
		①	Timer Lock at Close	P.12-6
		②	Lock OFF at Open	P.12-7
		③	Content Key	P.10-24
		④	Lock Message	P.12-8
		#	8	Call Settings
1	Call Time/Cost			P.18-9
2	Reset			P.18-9
3	Set Max Cost Limit			P.18-9
4	Voice Mail/Call Fwding			P.2-17, P.2-18
5	Call Waiting			P.2-20
6	Call Barring			P.2-20
7	Missed Call Notifi.			P.2-19
8	Prefix			P.2-3
9	Volume			P.18-9
0	Shikkari Talk	P.2-5		
*	Closing Clamshell	P.18-10		




#	8	#	Hold Tones	P.18-10	
		①	Noise Reduction	P.18-10	
		②	Quality Alarm	P.18-10	
		③	Reconnect Signal	P.18-10	
		④	Offline Mode	P.1-19	
		⑤	Show My Number	P.2-21	
		⑥	Service Numbers	P.18-10	
		9	Video Call	–	
			1	Incoming Video Qlty	P.18-13
			2	Select Images	P.18-13
			3	Loud Speaker	P.18-13
			4	Voice Call Auto Redial	P.18-13
			5	Switch Images	P.18-13
		0	International Call	–	
			1	Int'l Dial Assist	P.2-10
			2	Select Operator	P.2-10
			3	PLMN Setting	P.2-11
			4	Operator Name	P.2-11
			5	Select Network	P.2-10
		①	Connectivity	–	
			1	USB Mode	P.11-17
			2	Retrieve NW Info	P.1-17
		②	Notification Light	–	
			1	Incoming	P.4-4, P.18-10
			2	Online	P.18-10
			3	Missed Call/Unread	P.18-10
			4	Clamshell Close	P.18-10
		5	Music	P.18-10	
		6	Bluetooth	P.18-10	
		7	IC Card	P.18-10	

#	②	8	Side Key	P.18-10
		9	Confirm Status	P.18-10

# Troubleshooting

## Handset does not turn on

- Was  pressed for more than one second?
- Is battery level sufficient?
- Is battery inserted properly? (☞P.1-15)



## Handset functions do not work after turning power on

- Does PIN Entry window appear?  
PIN Authentication is **ON**. Enter PIN (☞P.12-2).

## USIM not inserted After power-off Insert USIM or Inserted USIM is unavailable to this mobile phone Please insert valid one appears when handset is turned on or operations attempted

- Is USIM Card inserted correctly? (☞P.1-3)
- Is SoftBank specified USIM Card inserted? (☞P.1-2).
- USIM Card IC chip may be dirty.  
Wipe with a clean cloth, then insert USIM Card correctly.


## Keypad does not respond

- Does  appear in Standby?  
Keyguard (☞P.12-4) is active. Cancel it.
- Does  appear?  
Privacy Key Lock is active (☞P.12-4). Cancel it.




## Display is blurred

- Adjust display brightness (☞P.18-5).
- Is View Blind active?  
Cancel View Blind (☞P.1-34).


## Side Keys do not work while handset is closed

- Does  appear?  
Side-keys Guard (☞P.12-9) is **ON**.  
Set to **OFF**.

## Outgoing calls or Video Calls will not connect or message and Internet connections are unavailable

- Does  appear?  
Is handset out-of-range or in a location where signal is weak?  
Move to a location where signal is strong.
- Does  appear?  
Cancel Offline Mode (☞P.1-19)
- Are you using handset overseas?  
Set international settings (e.g. Select Operator) to use abroad (☞P.2-10).
- Does  appear?  
Personal Data Lock is set (☞P.12-5). Deactivate Personal Data Lock.


## Outgoing calls or Video Calls will not connect

- Is area code entered?
- Is restricting outgoing calls in Call Barring? (☞P.2-20)
- Does  appear in Standby? Total cost has reached upper limit. Set Max Cost Limit to **OFF** or execute **Reset** (☞P.18-9).

## Outgoing calls will not connect or busy signal sounds

- Did you enter area code?
- Is restricting outgoing calls in Call Barring? (☞P.2-20)

## Call is interrupted or disconnected

- Does  appear? Is handset out-of-range or in a location where signal is weak?  
Move to a location where signal is strong.


---

### Cannot start any more functions appears when a menu is opened.

- Maximum number of functions are active at the same time. Cancel current function and try again (☞P.1-33).

---

### Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.  
Set Secret Mode or Secret Data Only **ON** (☞P.12-10).
- Does  appear?  
Personal Data Lock is set (☞P.12-5). Deactivate Personal Data Lock.


---

### Digital TV does not work

- Is handset out of terrestrial Digital TV broadcasting service area or in a location where airwaves are weak?  
Move to a location where airwaves are strong (☞P.5-3).


---

### Osaifu-Keitai® does not work

- Does  appear?  
Deactivate IC Card Lock (☞P.13-12).

---

### Wi-Fi connection unavailable

- Does  appear?  
Turn on Wi-Fi function (☞P.11-12).  
Is handset in a location where signal is weak?  
Move to a location where signal is strong.

---

### Display clock is reset

- Replacing battery does not reset Display clock; however, if battery is removed for long periods, the clock may be reset. Set Date & Time (☞P.18-9) or Retrieve NW Info (☞P.1-17) again.

---

### Cannot charge battery

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder (not included)? (☞P.1-16)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in handset correctly? (☞P.1-15)
- Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Battery may not charge beyond +5°C and +35°C.
- Battery may need to be replaced.

---

### Handset/accessories feel warm





- AC Charger/Desktop Holder may warm during charging.  
Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.

---

### Battery Operating Time is greatly reduced


- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (☞P.1-13) and "Battery Time" (☞P.1-14).

## Warning Signs

Problem	Causes and Remedies
 appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Side-keys Guard is <b>ON</b> (→P.12-9). To activate Side Keys while handset is closed, set Side-keys Guard to <b>OFF</b> .
 appears	Keyguard is active (→P.12-4). Cancel Keyguard to use keys. Answer calls even if Keyguard is active.
 appears	Privacy Key Lock is active (→P.12-4). Cancel it to use handset. Answer calls even if Privacy Key Lock is active.
<b>Low battery message appears and battery alarm tone sounds</b>	Battery is low. Charge (→P.1-16) or replace battery (→P.1-15).

## Software Update

Check for 941P software updates and download as required.  
Choose to begin update or schedule update.

- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Notification Light/Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.

### Updating Software Manually

Main Menu ► Settings ► Phone Settings  
► Software Update ► Software Update

1  [YES] → Follow onscreen instructions

After download is complete, handset automatically turns off and restarts before Software Update begins.

After Software Update is complete, handset automatically turns off and restarts before information appears for successful update (This process takes approximately 60 seconds.).

Software Update  
Software has been successfully updated.

## Updating Software Automatically

Main Menu ► Settings ► Phone Settings  
► Software Update ► Regular Updates

### 1 YES → Follow onscreen instructions

- Internet connection required for updates (transmission fees do not apply for updates). For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

 
#### Update Results

When Event Indicator appears, **Update** →




- When **Update** indicator does not appear,

Main Menu ► Settings  
► Phone Settings  
► Software Update  
► Update Results

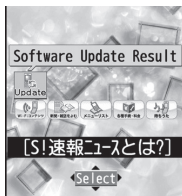

#### Scheduled Update

Follow onscreen instructions for setup. Confirmation appears at scheduled update time. Press  or wait ten seconds for update to start.

- Software Update will not start while handset is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.



#### Note

- If handset does not power on after Software Update, remove then re-insert battery and try again. If handset still does not power on, contact SoftBank Mobile Customer Center, Customer Assistance (☎P.19-34).
- Software Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (☎P.19-34).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

## Quick Open Menu

When **Menu Icons** is set to **Basic** or **Customize** (P.18-4), press menu numbers in Main Menu to open the following functions.

### Example: To open Notepad:




 

In Standby,  →  

Menu	#
Alarm	44
Calendar	45
Calculator	85
Notepad	42
Tasks	95
Sound Recorders	55
Receive via Infrared	79
Templates/Users Dictionary	38
Pictures folder	46
Ring Songs&Tones folder	16
Phone Book Settings	26
Ring Tones	13
Ringer Volume	50
Key Tone	30
Stereo/3D Sound	64
Earphone/Speaker Settings	51
Message Ring Tones	68

Menu	#
Internal Display	56
External Display	93
Font Settings	66
Menu Icons	57
Back Light Time	70
Color Theme	86
Private Menu Settings	52
Language	15
Describe Icons	36
Vibrator	54
Manner Mode Type	20
Answer Setting	58
Ring Time Settings	90
Info Notice Setting	65
Auto Answer	94
Text Entry Method	35
Date & Time	31
Secret Mode	40
Secret Data Only	41
Call Setting w/o ID	10
Reset Settings	23
Change Phone Password	29
Call Time/Cost	61
Reset Total Duration/Cost	60
Closing Clamshell	18

Menu	#
Noise Reduction	76
Quality Alarm	75
Reconnect Signal	77
Show My Number	17
Notification Light	89

## Key Assignments (5-touch Mode)

Display Key	漢	カナ	abc	123
①	あいうえおあいうえお	アイウエオアイウエオ <sup>1</sup>	. / @ - :    	1
②	かきくけこ	カキクケコ <sup>2</sup>	a b c A B C <sup>2</sup>	2
③	さしすせそ	サシスセソ <sup>3</sup>	d e f D E F <sup>3</sup>	3
④	たちつてとっ	タチツテトツ <sup>4</sup>	g h i G H I <sup>4</sup>	4
⑤	なにぬねの	ナニヌネノ <sup>5</sup>	j k l J K L <sup>5</sup>	5
⑥	はひふへほ	ハヒフヘホ <sup>6</sup>	m n o M N O <sup>6</sup>	6
⑦	まみむめも	マミムメモ <sup>7</sup>	p q r s P Q R S <sup>7</sup>	7
⑧	やゆよやゆよ	ヤユヨヤユヨ <sup>8</sup>	t u v T U V <sup>8</sup>	8
⑨	らりるれろ	ラリルレロ <sup>9</sup>	w x y z W X Y Z <sup>9</sup>	9
⑩	わをんわー	ワヲンワ <sup>2</sup> ー <sup>0</sup>	0	0
				[Press and hold] + <sup>4</sup>
✳	 <sup>3</sup> /Pictograph List <sup>5</sup>		Pictograph List <sup>5</sup>	*
	[Press and hold] Templates			
#	、。?!・ (Single-byte Space)		. . ? ! ' - & ( ) ¥ (Single-byte Space)	#
	[Press and hold] Symbol List <sup>6</sup>			

<sup>1</sup> Appears when entering single-byte character.

<sup>2</sup> Appears when entering double-byte character.


<sup>3</sup> Added to highlighted character.

<sup>4</sup> Not Available in S! Mail text entry window

<sup>5</sup> Press (✳) to toggle symbol list/pictograph list while pictograph list is open.

<sup>6</sup> In number mode, symbol list may not appear.

● In alphanumeric mode, last entered case appears first.

● To toggle input modes:  [Mode]

● To toggle double-byte/single-byte characters:  [Menu] → **2bytes character** or **1byte character**

● To toggle upper/lower case characters:  after entering hiragana, katakana or alphanumerics

● To insert line feeds:  [Line FD]

# Key Assignments (2-touch Mode)

## Kanji (Hiragana) Mode

<Upper Case Mode>

		Second digit													
		1	2	3	4	5	6	7	8	9	0				
First digit	1	あ	い	う	え	お	A	B	C	D	E				
	2	か	き	く	け	こ	F	G	H	I	J				
	3	さ	し	す	せ	そ	K	L	M	N	O				
	4	た	ち	つ	て	と	P	Q	R	S	T				
	5	な	に	ぬ	ね	の	U	V	W	X	Y				
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/				
	7	ま	み	む	め	も	¥	&							
	8	や	(	ゆ	)	よ	*	#							
	9	ら	り	る	れ	ろ	1	2	3	4	5				
	0	わ	を	ん	°	°	6	7	8	9	0				

<Lower Case Mode>

		Second digit													
		1	2	3	4	5	6	7	8	9	0				
First digit	1	あ	い	う	え	お	a	b	c	d	e				
	2						f	g	h	i	j				
	3						k	l	m	n	o				
	4			っ			p	q	r	s	t				
	5						u	v	w	x	y				
	6						z								
	7														
	8	や		ゆ		よ									
	9														
	0	わ			,	°									

## Katakana Mode

<Upper Case Mode>

		Second digit													
		1	2	3	4	5	6	7	8	9	0				
First digit	1	ア	イ	ウ	エ	オ	A	B	C	D	E				
	2	カ	キ	ク	ケ	コ	F	G	H	I	J				
	3	サ	シ	ス	セ	ソ	K	L	M	N	O				
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T				
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y				
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/				
	7	マ	ミ	ム	メ	モ	¥	&							
	8	ヤ	(	ユ	)	ヨ	*	#							
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5				
	0	ワ	ヲ	ン	°	°	6	7	8	9	0				

<Lower Case Mode>

		Second digit													
		1	2	3	4	5	6	7	8	9	0				
First digit	1	ア	イ	ウ	エ	オ	a	b	c	d	e				
	2						f	g	h	i	j				
	3						k	l	m	n	o				
	4			ッ			p	q	r	s	t				
	5						u	v	w	x	y				
	6						z								
	7														
	8	ヤ		ユ		ヨ									
	9														
	0	ワ <sup>1</sup>		,	.	.									

## Alphanumerics Mode

		Second digit													
		1	2	3	4	5	6	7	8	9	0				
First digit	1	"	\$	%	'	+	a	b	c	d	e				
	2	.	.	:	:	<	f	g	h	i	j				
	3	=	>	@	[	]	k	l	m	n	o				
	4	^	_	' <sup>1</sup> ' <sup>2</sup>	{		p	q	r	s	t				
	5	}	~ <sup>1</sup> ~ <sup>2</sup>				u	v	w	x	y				
	6						z	?	!	-	/				
	7						¥	&							
	8		(	)			*	#							
	9						1	2	3	4	5				
	0						6	7	8	9	0				

■ Toggle upper/lower case

<sup>1</sup> Appears when entering double-byte character.

<sup>2</sup> Appears when entering single-byte character.

### Note

- A space is entered by pressing key corresponding to a blank where no character is assigned.
- In kanji (hiragana) or katakana mode, "" or "" is entered by pressing (⊗) after entering characters. Press (⊗) once for "", twice for "".
- In number mode, press and hold (0) to enter "+" (not available in S! Mail text field).



# Key Assignments (NIKO-touch Mode)

## Kanji (Hiragana) Mode

		Second digit										
		1	2	3	4	5	6	7	8	9	0	
First digit	1	あ	い	う	え	お	.	-	@	_	1	
	2	か	き	く	け	こ		a	b	c	2	
	3	さ	し	す	せ	そ		d	e	f	3	
	4	た	ち	つ	て	と	っ	g	h	i	4	
	5	な	に	ぬ	ね	の		j	k	l	5	
	6	は	ひ	ふ	へ	ほ		m	n	o	6	
	7	ま	み	む	め	も		p	q	r	s	7
	8	や	ゆ	よ	ゃ	ゅ	ょ	t	u	v	8	
	9	ら	り	る	れ	ろ		w	x	y	z	9
	0	わ	を	ん	.	。	-	.	!	?	0	

## Katakana Mode

		Second digit										
		1	2	3	4	5	6	7	8	9	0	
First digit	1	ア	イ	ウ	エ	オ	.	-	@	_	1	
	2	カ	キ	ク	ケ	コ		a	b	c	2	
	3	サ	シ	ス	セ	ソ		d	e	f	3	
	4	タ	チ	ツ	テ	ト	ッ	g	h	i	4	
	5	ナ	ニ	ヌ	ネ	ノ		j	k	l	5	
	6	ハ	ヒ	フ	ヘ	ホ		m	n	o	6	
	7	マ	ミ	ム	メ	モ		p	q	r	s	7
	8	ヤ	ユ	ヨ	ャ	ュ	ョ	t	u	v	8	
	9	ラ	リ	ル	レ	ロ		w	x	y	z	9
	0	ワ	ヲ	ン	.	。	-	.	!	?	0	

### Note

- Press [Mode] to toggle kanji (hiragana) and single-byte number modes.
- To switch to katakana mode: In kanji (hiragana) mode, [Menu] → **1 byte character**
- To toggle lower/upper case: Enter a character →
- A space is entered by pressing key corresponding to a blank where no character is assigned.
- Press (\*) once for " ", twice for " ". In kanji (hiragana) mode, enter characters before pressing (\*).
- In number mode, press and hold (0) to enter "+ " (not available in S! Mail text field).

# Symbol List

## Double-byte Symbol List

、	。	，	．	・	：	；	？	！	”
°	′	″	ˆ	ˉ	˘	˙	˚	˛	˜
ゞ	〃	全	々	メ	○	—	—	-	/
＼	～	∥		…	…	′	”	”	”
(	)	[	]	{	}	<	>		
《	》	「	」	『	』	【	】	+	-
±	×	÷	=	≠	<	>	≦	≧	∞
∴	♂	♀	°	′	″	℃	¥	\$	Φ
£	%	#	&	*	@	§	☆	★	○
●	◎	◇	◆	□	■	△	▲	▽	▼
※	〒	→	←	↑	↓	■	≡	≅	⊆
⊃	⊂	⊃	∪	∩	∧	∨	⇒	⇔	
∵	∴	∠	⊥	∩	∇	≡	≅	≪	
≫	√	∞	∞	∴	∫	∫	Å	%	#
b	♪	†	‡	¶	○	ゐ	ゑ	ぢ	ヱ
ヴ	カ	ケ	A	B	Γ	Δ	E	Z	H
Θ	I	K	Λ	M	N	Ξ	O	Π	P
Σ	T	Υ	Φ	X	Ψ	Ω	α	β	γ

δ	ε	ζ	η	θ	ι	κ	λ	μ	ν
ξ	ο	π	ρ	σ	τ	υ	φ	χ	ψ
ω	A	B	B	Г	Д	E	Ё	Ж	З
И	Й	К	Л	М	Н	О	П	Р	С
Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ	Ы
Ь	Э	Ю	Я	а	б	в	г	д	е
ё	ж	з	и	й	к	л	м	н	о
п	р	с	т	у	ф	х	ц	ч	ш
щ	ъ	ы	ь	э	ю	я	—		Г
┘	┘	┘	┘	┘	┘	┘	┘	┘	┘
┘	┘	┘	┘	┘	┘	┘	┘	┘	┘
┘	┘	┘	┘	┘	┘	┘	┘	┘	┘
②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪
⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳	I
II	III	IV	V	VI	VII	VIII	IX	X	≡
キ	ク	ケ	コ	カ	キ	ク	ケ	コ	カ
ドル	円	ポ	リ	ギ	mm	cm	km	mg	kg
cc	m	平成	、	、	No	KK	TEL	⊕	⊕

⊕	⊕	⊕	(株)	(有)	(代)	明治	大正	昭和	≡
≡	∫	∫	Σ	√	⊥	∠	∟	△	∴
∩	∪								

## Single-byte Symbol List

!	"	#	\$	%	&	'	(	)	*
+	,	-	.	/	:	;	<	=	>
?	@	[	¥	]	^	_	'	{	
}	~	。	「	」	、	・	ゝ	”	°

● To enter a space: ⌘P. 3-3

# Character Code List

First Three Digits	Last Digit									
	0	1	2	3	4	5	6	7	8	9
010	→	←	↔	↕	↗	↘	↙	↚	↛	↜
011	↞	↠	↡	↢	↣	↤	↥	↦	↧	↨
012	↩	↪	↫	↬	↭	↮	↯	↰	↱	↲
013	↳	↴	↵	↶	↷	↸	↹	↺	↻	↼
014	↽	↾	↿	↺	↻	↼	↽	↾	↿	↺
015	↻	↼	↽	↾	↿	↺	↻	↼	↽	↾
016	↿	↺	↻	↼	↽	↾	↿	↺	↻	↼
017	↺	↻	↼	↽	↾	↿	↺	↻	↼	↽
018	↻	↼	↽	↾	↿	↺	↻	↼	↽	↾
019	↼	↽	↾	↿	↺	↻	↼	↽	↾	↿
020	↽	↾	↿	↺	↻	↼	↽	↾	↿	↺
021	↿	↺	↻	↼	↽	↾	↿	↺	↻	↼
022	↺	↻	↼	↽	↾	↿	↺	↻	↼	↽
023	↻	↼	↽	↾	↿	↺	↻	↼	↽	↾
024	↼	↽	↾	↿	↺	↻	↼	↽	↾	↿
026	↽	↾	↿	↺	↻	↼	↽	↾	↿	↺
027	↿	↺	↻	↼	↽	↾	↿	↺	↻	↼
028	↺	↻	↼	↽	↾	↿	↺	↻	↼	↽
029	↻	↼	↽	↾	↿	↺	↻	↼	↽	↾
031	4	5	6	7	8	9	0	1	2	3
032	4	5	6	7	8	9	0	1	2	3
033	4	5	6	7	8	9	0	1	2	3
034	4	5	6	7	8	9	0	1	2	3
035	4	5	6	7	8	9	0	1	2	3
036	4	5	6	7	8	9	0	1	2	3
037	4	5	6	7	8	9	0	1	2	3
038	4	5	6	7	8	9	0	1	2	3
039	4	5	6	7	8	9	0	1	2	3
040	4	5	6	7	8	9	0	1	2	3
041	4	5	6	7	8	9	0	1	2	3
042	4	5	6	7	8	9	0	1	2	3
043	4	5	6	7	8	9	0	1	2	3
044	4	5	6	7	8	9	0	1	2	3
045	4	5	6	7	8	9	0	1	2	3
046	4	5	6	7	8	9	0	1	2	3
047	4	5	6	7	8	9	0	1	2	3
048	4	5	6	7	8	9	0	1	2	3

First Three Digits	Last Digit									
	0	1	2	3	4	5	6	7	8	9
050	ア	カ	サ	タ	ド	ビ	ボ	ヨ	エ	
051	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	
052	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	
053	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	
054	イ	キ	シ	チ	ニ	フ	ミ	ル	ウ	
055	イ	キ	シ	チ	ニ	フ	ミ	ル	ウ	
056	イ	キ	シ	チ	ニ	フ	ミ	ル	ウ	
057	イ	キ	シ	チ	ニ	フ	ミ	ル	ウ	
058	イ	キ	シ	チ	ニ	フ	ミ	ル	ウ	
060	A	Λ	Φ	Β	Μ	X	Σ	Π	Θ	Ι
061	K	Y								
062	θ	ι	κ	ν	ξ	ο	ζ	η	ρ	
063	θ	ι	κ	ν	ξ	ο	ζ	η	ρ	
064	θ	ι	κ	ν	ξ	ο	ζ	η	ρ	
065	θ	ι	κ	ν	ξ	ο	ζ	η	ρ	
066	θ	ι	κ	ν	ξ	ο	ζ	η	ρ	
070	И	T	B	K	F	M	X	Σ	Π	Θ
071	И	T	B	K	F	M	X	Σ	Π	Θ
072	И	T	B	K	F	M	X	Σ	Π	Θ
073	И	T	B	K	F	M	X	Σ	Π	Θ
074	И	T	B	K	F	M	X	Σ	Π	Θ
075	И	T	B	K	F	M	X	Σ	Π	Θ
076	И	T	B	K	F	M	X	Σ	Π	Θ
077	И	T	B	K	F	M	X	Σ	Π	Θ
078	И	T	B	K	F	M	X	Σ	Π	Θ
080	+	-	×	÷	√	∫	∂	∇	∞	∅
081	+	-	×	÷	√	∫	∂	∇	∞	∅
082	+	-	×	÷	√	∫	∂	∇	∞	∅
083	+	-	×	÷	√	∫	∂	∇	∞	∅
130	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
131	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
132	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
133	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
134	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
135	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
136	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
137	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
138	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
139	⑩	⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲
160	ア	カ	サ	タ	ド	ビ	ボ	ヨ	エ	






























# Weather Indicator List

 



- Indicators and categories are subject to change without prior notice.




Weather	
	Clear (day)
	Clear (night)
	Cloudy
	Rain
	Snow
	Thunderstorm
	Precipitation 0%-100%
	Later
	Occasionally




Pollen Level	
	Low
	Moderate
	High
	Very High

Cherry Blossom	
	Blossoms Opening
	Near Full Bloom
	Peak Bloom
	Past Peak

Fall Foliage	
	No Color
	Moderate Color
	Peak Color
	Past Peak

UV Level	
	Low
	Moderate
	High
	Very High

Typhoon	
	Formed
	Approaching
	Severe

Other Information	
	Heavy Rain
	Strong Winds
	Notifications



## Memory List

<b>Data Folder</b>	Up to 3500 items/up to 300 MB (Including pre-installed data)
--------------------	---

- Shared with S! Appli List  
(One S! Appli corresponds up to 6 MB.)

<b>Calendar Events</b>	Up to 1000 items
------------------------	------------------

<b>Phone Book</b>	Up to 1000 items
-------------------	------------------

<b>Messaging</b>	<b>Incoming Mail</b>	Up to 3000 items
	<b>Sent/Unsent</b>	Up to 1000 items

- Combined total of SMS, S! Mail and PC Mail

<b>Yahoo! Keitai</b>	<b>Saved Pages</b>	[Yahoo! Keitai] Up to 20 items/750KB [PC Site Browser] Up to 20 items/1150KB
	<b>Bookmarks</b>	[Yahoo! Keitai] Up to 100 items [PC Site Browser] Up to 100 items
	<b>URL History</b>	[Yahoo! Keitai] URL Entry: Up to 20 items URL Access: Up to 100 items* [PC Site Browser] URL Entry: Up to 20 items URL Access: Up to 100 items*
	<b>Cache</b>	[Yahoo! Keitai] 750KB [PC Site Browser] 1150KB

\* The number of savable items varies depending on URL length.

# Specifications

## 941P

<b>Weight (including battery)</b>		135 g*
<b>Dimensions (closed)</b>		50 x 111 x 17.9 mm*
<b>Standby Time (closed)</b>	<b>3G</b>	650 hours*
	<b>GSM</b>	370 hours*
<b>Talk Time</b>	<b>3G</b>	220 minutes*
	<b>Video Call</b>	140 minutes*
	<b>GSM</b>	230 minutes*
<b>TV Reception Time</b>	<b>Normal Mode</b>	3.8 hours*
	<b>ECO Mode</b>	5.6 hours*
<b>Charging Time</b>	<b>AC Charger</b>	130 minutes*
	<b>In-Car Charger</b>	130 minutes*
<b>Maximum Output</b>	<b>3G</b>	0.25 W
	<b>GSM</b>	2.0 W

\* Approximate value

- Values above were calculated with battery installed.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- TV-Reception Time is an average measured using Earphone Microphone, with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when an S! Appli is active.

## Battery

<b>Voltage</b>	3.7 V
<b>Battery Type</b>	Lithium-ion
<b>Capacity</b>	800 mAh
<b>Dimensions</b>	45 x 4.5 x 37 mm*

\* Approximate value

- Specifications subject to change without notice.

# Index

## Numerics

3G ..... 2-10

## A

AC Charger .....	1-16
Access History	
PC Site Browser .....	15-5
Yahoo! Keitai .....	15-4
Account Details .....	1-34, 4-12
Address (Adding/editing/deleting) .....	14-8
After-Sales Service .....	19-33
Alarms .....	13-6
All Reset .....	12-14
Alternative Image.....	2-6
Answer Phone.....	2-15
Answering Calls	
Video Calls .....	2-8
Voice Calls .....	2-5
Attachments	
Adding.....	14-8
Deleting.....	14-8
Opening/saving .....	14-13
Auto Answer .....	18-8
Auto Focus Lock .....	6-12
Auto Save (Camera).....	18-17
Auto shutter .....	6-5, 6-7
Auto timer .....	6-7
Auto-sort .....	14-16
AV Output.....	11-18

## B

Back Light	
Display.....	18-5
S! Appli.....	18-26
Video Calls .....	2-12
Background Music .....	9-7
Backup	
microSD Card.....	10-21
S! Address Back-up .....	4-10
Bar Code Reader.....	13-15
Basic Operations	
Handset .....	x
Internet .....	15-6
Battery.....	1-13
Battery Level .....	1-11, 1-12, 1-14
BD/DVD Recorder.....	10-14
Blogging .....	8-7
Bluetooth® .....	11-6
Bluetooth® Passkey.....	11-8
Bookmarks.....	15-8
Books folder .....	10-3
BookSurfing® .....	8-6
Brightness	
Back Light.....	18-5
Camera .....	6-5
External Display .....	18-6
Video Calls .....	18-13
Browser (Initializing) .....	18-25

**C**

Cache Memory.....	15-2
Calculator .....	13-8
Calendar .....	13-2
Calendar Events.....	13-2
Call Barring.....	2-20
Call Cost .....	18-9
Call Forwarding .....	2-17
Call Log.....	2-13
Show/Hide .....	12-9
Call Operations.....	2-11
Call Rejection	
Calls without Caller ID .....	12-13
Unknown Callers .....	12-13
Call Restrictions.....	12-12
Call Settings .....	18-9
Call Time .....	18-9
Call Waiting .....	2-20
Caller ID.....	2-3, 2-21
Camera [Section Contents].....	6-1
Center Access Code .....	1-32
Channel Setting.....	5-4
Character Code (Kuten Code)	
Character Code List.....	19-19
Input Options .....	3-6
Charge Limit .....	18-9
Charging Time .....	1-13
Clock Display .....	18-5
External Display .....	18-6
Horizontal Open Position .....	18-14
Internal Display.....	18-5

Closing Clamshell .....	18-10
Color Scheme.....	18-4
Confirming Settings .....	18-29
Content Key .....	10-5
Continuous Shooting.....	6-6
Conversion Candidates.....	3-7
Conversion Methods.....	3-7
Cookies Setting/Deleting	
Internet .....	18-24, 18-25
Mobile Widget.....	18-19
Copy Protected Files.....	10-5
Country/Region Code .....	2-10
Customer Service.....	19-34
Customized Screen .....	1-26

**D**

Data Folder .....	10-2
Date & Time Settings.....	18-9
Deleting	
Calendar events .....	13-5
Messages.....	14-22
Phone Book .....	4-9
S! Appli.....	16-4
Delivery Report .....	14-10
Dictionary .....	13-13
Digital Media Viewer.....	8-6
Digital TV [Section Contents] .....	5-1
Digital TV Settings.....	18-15
Display.....	1-10
Display Indicators.....	1-10
Display Settings.....	18-3

**Download**

Customized Screen .....	1-26
Fonts.....	1-27
From web pages.....	15-11
Lifestyle-Appli .....	13-10
Music .....	9-3
S! Appli.....	16-2
Templates .....	14-10
Widgets .....	7-4
Download Dictionary.....	3-11
Drafts.....	14-16
Driving Mode.....	1-19, 18-7

**E****Earpiece Volume**

Video Calls .....	2-7
Voice Calls .....	2-5
e-Book Viewer .....	8-6
Emergency Calls (110, 119, 118) .....	2-4
Emergency Positioning Request .....	2-4
Event Indicators.....	1-24
External Display.....	1-12

**F**

Face Detection .....	6-11
Face Zoom .....	10-25
Flash setting.....	6-5, 6-9
Focus Setting.....	6-11
Folder/files.....	10-16
Font Settings .....	1-27

Font Size	
Call Logs.....	18-6
Collective Setting.....	18-6
Internet.....	18-6
Messaging.....	18-6
Phone Book.....	18-6
Text entry.....	18-6
Function List.....	19-2

## G

Global Roaming Service.....	2-9
Graphic Mail.....	14-5
Group Settings (Phone Book).....	4-6
GSM.....	2-10

## H

Handset	
Menus.....	1-19
Parts & Functions.....	1-4
Power On/Off.....	1-17
Handset Security [Section Contents]....	12-1
Help (Text Entry).....	3-2
Hide Call Logs/Address List.....	12-9
Hold	
Video Calls.....	2-12
Voice Calls.....	2-11
Horizontal Open Menu.....	1-20
Horizontal View.....	18-14
HTML messages.....	14-5

## I

IC Card Lock.....	13-12
IC Transmission.....	11-4
IDD Prefix.....	2-9
Image Quality (Camera).....	6-5
Image Size (Camera).....	6-5
Incoming Call Logs.....	2-13
Infrared.....	11-2
Intelligent Auto.....	6-5, 6-9
Internal Display.....	1-10, 18-3
International Call	
From abroad.....	2-9
From Japan.....	2-9
International Setting.....	2-10
Internet [Section Contents].....	15-1

## K

Key Assignments	
Mode 1 (5-touch).....	19-15
Mode 2 (2-touch).....	19-16
Mode 3 (NIKO-touch).....	19-17
Key Pad Dial Lock.....	12-8
Key Tone.....	18-3
Keypad.....	12-4
Kuten Code (Character Code).....	19-19

## L

Language.....	18-4
Lifestyle-Appli.....	13-10
Lock Message.....	12-8

Lock OFF at Open.....	12-7
-----------------------	------

## M

Mail Group.....	14-19
Mail Security.....	12-11
Main Menu.....	1-19
Making Calls	
International Calls.....	2-9
Video Calls.....	2-7
Voice Calls.....	2-2
Manner Mode.....	1-18, 2-11, 2-12, 18-7
Manufacture Number.....	18-25
Memory List.....	19-25
Memory Manager (Internet).....	18-24
Menu Icons.....	18-4
Menu Numbers.....	1-21
Messaging [Section Contents].....	14-1
microSD Card.....	10-18
Backup.....	10-21
Check.....	10-23
Formatting.....	10-20
Synchronizing.....	18-26
Missed Call Notification.....	2-19
Mobile Widget.....	7-2
Mobile W-Speed.....	5-2
Multi Selector.....	ix
Music folder.....	10-2
Music Player [Section Contents].....	9-1
My original set.....	6-5, 6-10
My Pictograms.....	3-4

<b>N</b>	
Narrowing Down Predictive Candidates...	3-9
Network Information .....	1-17
New Messages	
Receiving .....	14-15
Viewing .....	14-11
Night mode	
Camera .....	6-5
Video Calls .....	18-13
Normal Mode (Simple Menu) .....	1-29
Notepad.....	13-8
Notification Light Settings .....	18-10
<b>O</b>	
Offline Mode .....	1-19
One-push Open Button .....	1-7
Open For New.....	18-4
Open-to-Ans. Call.....	18-8
Operator Names .....	2-11
Optional Services .....	2-17
Original Animation .....	10-12
OsaiFu Keitai® .....	13-9
Other Documents folder .....	10-3
Outgoing Call Logs .....	2-13

<b>P</b>	
Passwords .....	1-32
Passwords (Changing)	
Center Access Code .....	1-32
Phone Password .....	12-2
Security Code .....	2-21
PC Mail .....	14-24
PC Site Browser .....	15-2
Access.....	15-5
Display Settings .....	18-24
Memory Manager & Settings .....	18-24
Reset/Initialize.....	18-25
Security Settings .....	18-25
Personal Data Lock .....	12-5
Phone Book [Section Contents].....	4-1
Phone Password .....	1-32
Changing .....	12-2
Photo light setting .....	6-5, 6-9
Photo mode.....	6-5
Pictographs.....	3-4
Pictures (Still Images)	
Capturing .....	6-6
Editing .....	10-11
Pictures folder .....	10-2
PIN/PIN2 .....	1-3
Changing .....	12-3
PIN Authentication .....	12-2
PIN Lock & Cancellation (PUK) .....	12-3
Play List .....	9-10
Play mode setting.....	9-6
Predictive Candidates.....	3-7

Privacy Key Lock .....	12-4
Private Menu .....	1-28
PUK/PUK2 .....	1-3, 12-3

**Q**

QR Code.....	13-15
Quick Open Menu .....	19-14

**R**

Recipients (Adding/editing/deleting) ...	14-8
Refer Information.....	18-25
Remote Lock.....	13-12
Reset	
All Reset .....	12-14
Browser Settings .....	18-25
Settings .....	12-13
Total Call Charge/Time .....	18-9
TV Settings .....	18-16
Ring Songs&Tones folder .....	10-2
Ring Time (Answer Phone).....	2-16
Ring Time Settings.....	12-12
Ringer Volume .....	18-2
Ringtone .....	10-7, 18-2
Ringtone Duration (Message).....	18-2
Roaming Dial Assistant.....	2-9
Root Certificates .....	18-25
<b>S</b>	
S! Addressbook Back-up.....	4-10
S! Appli [Section Contents] .....	16-1

S! GPS Navi [Section Contents].....	17-1
S! Information Channel.....	8-2
S! Mail.....	14-2
Creating/sending.....	14-4
Mail Notice.....	14-12
Settings.....	18-22
Universal Settings.....	18-21
S! Quick News.....	8-4
Settings.....	18-19
Save	
Alarms.....	13-7
Calendar Events.....	13-2
Camera.....	6-5
Notepad.....	13-8
Phone Book.....	4-3, 18-12
S! Information Channel.....	8-2
S! Quick News.....	8-4
Shortcut.....	1-25
User's Dictionary.....	3-11
Saved Pages.....	15-8
Script.....	18-25
Scroll Unit.....	18-24
SD Audio.....	9-2
Secret Data Only.....	12-10
Secret Mail Setting.....	12-11
Secret Mode.....	12-10
Secure Remote Lock.....	12-7
Security	
Data Folder.....	10-16
Internet.....	18-25
S! Appli.....	16-4
Security Code.....	1-32

Security Functions.....	12-2
Server Mail.....	14-14
Settings [Section Contents].....	18-1
Shikkari Talk.....	2-5
Shortcuts.....	1-25
Shutter sound.....	18-17
Side-keys Guard.....	12-9
Signal Strength.....	1-10, 1-12
Simple Menu.....	1-29
Slideshow.....	10-26
Smiley.....	3-5
SMS.....	14-2
Creating/sending.....	14-7
Settings.....	18-23
Universal Settings.....	18-21
Snooze.....	13-7
SoftBank Utility Software.....	11-16
Softkeys.....	ix
Software Update.....	19-12
Spam Filter.....	14-17
Speaker ON/OFF.....	2-11, 2-12
SSL.....	15-3
Status Indicators.....	1-10
Still Images (Picture)	
Capturing.....	6-6
Editing.....	10-11
Streaming.....	15-12
Symbols.....	3-4
Symbol List.....	19-18

## T

Tasks.....	13-5
Templates (Graphic Mail).....	14-5
Text Entry [Section Contents].....	3-1
Time Correction.....	18-9
Timer Lock at Close.....	12-6
TLS.....	15-3
Touchpad.....	1-23
Trimming (Editing Still Images).....	10-12

## U

URL History	
PC Site Browser.....	15-5
Yahoo! Keitai.....	15-4
USB.....	11-17
User Mode (Manner Mode).....	18-7
User's Dictionary.....	3-11
USIM Card.....	1-2
USIM Card Phone Book.....	4-3
USIM PINs.....	1-3

## V

Variety Photo Viewer.....	10-24
Vibrator	
Incoming alert.....	18-2
S! Appli.....	18-26
Videos (Recording).....	6-7
Videos folder.....	10-3
Videos/Music Menu.....	1-31
View Blind.....	1-34

## Viewfinder

Camera .....	6-4
Video Camera .....	6-4
Voice Announce .....	13-14
Voice Dial.....	4-13
Voice Mail.....	2-18
Voice Recorder.....	13-14
Volume	
Ringtone.....	18-2
S! Appli.....	18-26
Video Calls .....	2-7
Voice Calls .....	2-5

## W

## Wallpaper

Horizontal Open Position .....	18-14
Internal Display .....	18-3
Warning Messages (PC Site Browser) ...	18-24
Warranty .....	19-33
Weather Indicator.....	8-3
White balance	
Still Images.....	18-17
Video Calls .....	18-13
Videos.....	18-18
Widgets .....	7-2
Wi-Fi .....	11-11
WMA Files.....	9-2
World Clock .....	18-9

## Y

Yahoo! Keitai .....	15-2
Access.....	15-3
Display Settings .....	18-24
Memory Manager & Settings .....	18-24
Reset/Initialize.....	18-25
Security Settings .....	18-25

## Z

Zoom.....	6-8
-----------	-----



## Warranty & Service

### Warranty

**Warranty is provided when you purchase a 941P.**

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

**SoftBank is not liable for any damage resulting from use of this product.**

### After-Sales Service

See "Troubleshooting" (☞P.19-10) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (☞P.19-34) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

## Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

Check phone number before you dial.

### SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at  
**157 for General Information or  
113 for Customer Assistance**

### SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**  
(Please take care to dial the correct number.  
International charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Toll Free Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113