


Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Power On/Off	1-6
Handset Power On/Off.....	1-6

Display & Indicators	1-8
Display.....	1-8
Indicators.....	1-10
Additional Functions	1-12

1

Getting Started

Parts & Functions

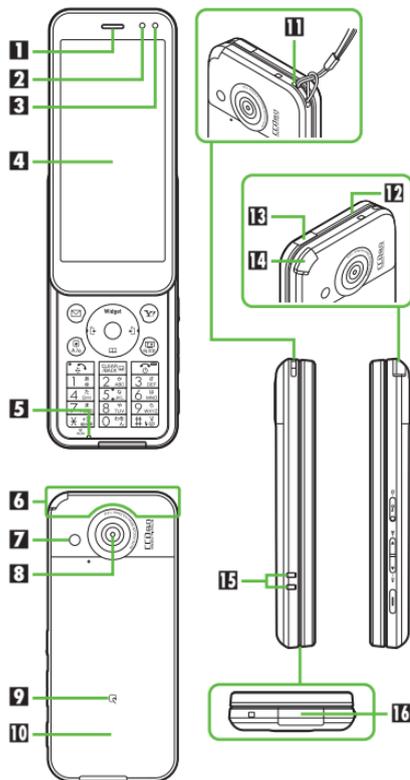

- 1** Earpiece
- 2** Small Light
- 3** Light Sensor
- 4** Display & Touch Panel
- 5** Microphone
- 6** Internal Antenna Location
- 7** Mobile Light
- 8** Camera (lens cover)
- 9** Logo
- 10** Battery Cover
- 11** Strap Eyelet
- 12** Speaker
- 13** Infrared Port
- 14** Antenna (for TV reception)
- 15** Charging Terminals
- 16** External Device Port (with Port Cover)

- Do not cover or place stickers, etc. over Light Sensor or Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Slider Positions


Slider Closed



Keep Slider closed when not in use.

Slider Open

Slide Display until it stops.

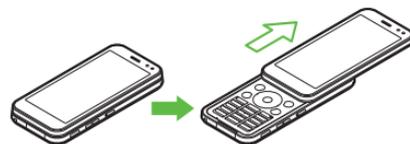


Slider Precautions

- Do not forcefully slide Display; damage may result.
- Avoid touching active Display when opening/closing Slider; may induce unintended Touch Panel operation.

Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with $\bar{\cdot}$ via Set Key Shortcut as needed.

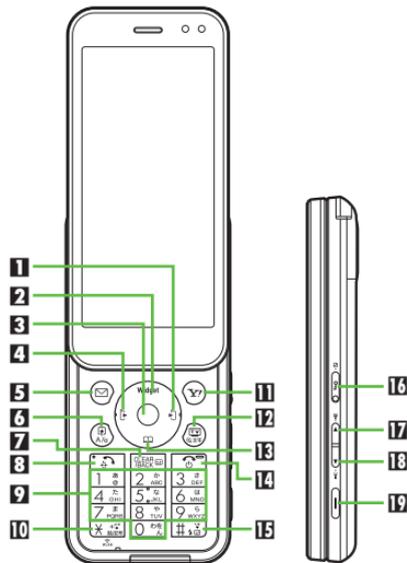

- 1 Multi Selector (right)** Open Received Calls. Long Press to activate/cancel Infrared⁺.
- 2 Multi Selector (up)** Open Mobile Widget window. Long Press to open PC Site Browser menu⁺.
- 3 Center Key** Open Main Menu.
- 4 Multi Selector (left)** Open Dialed Numbers. Long Press to activate/cancel Bluetooth[®].
- 5 Mail Key** Open Messaging menu. Long Press to open SI Mail Composition window⁺.
- 6 Shortcuts & A/a Key** Open Shortcuts menu. Long Press to show active indicators (Status Icon List).
- 7 Clear/Back Key** Play Answer Phone messages. Long Press to activate/cancel Answer Phone.
- 8 Start Key** Open All Calls. Long Press to open Double Number Mode menu.
- 9 Keypad** Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- 10 X Key** Enter \bar{X} , $\bar{+}$, \bar{P} , $\bar{?}$ and $\bar{-}$. Long Press to activate/cancel Wi-Fi.
- 11 Yahoo! Keitai Key** Open Yahoo! Keitai portal. Long Press to activate Familink Remote⁺.
- 12 TV & Text Key** Activate TV. Long Press to open Change Menu window.

- 13 Multi Selector (down)** Open Phone Book. Long Press to create new Phone Book entries⁺.
- 14 Power On/Off Key** Toggle Standby display. Long Press to power handset off.
- 15 # Key** Enter #. Long Press to activate/cancel Manner mode.

Side Keys

- 16 Keypad Lock Key** Long Press to activate/cancel VeilView. **Closed:** Activate/cancel Keypad Lock.
- 17 Volume Up Key** Toggle Display orientation (availability depends on Display Change setting). Long Press to activate/cancel Manner mode.
- 18 Volume Down Key** Show/hide Softkeys. Long Press to illuminate Mobile Light.
- 19 Camera Key** Long Press to activate mobile camera.

Vector Pad

- Multi Selector touch sensor area. Adjust finger pressure to control scroll speed, or make circular motion for Spinguru Menu.

1 Charging Battery

Battery must be inserted in handset to charge it.


Charging Battery Outside Japan

- SoftBank Mobile is not liable for problems resulting from charging battery abroad.

AC Charger

Use specified AC Charger **ZTDAA1** (sold separately).

- In this guide, ZTDAA1 is referred to as "AC Charger."
- Handset and AC Charger may warm during charging.

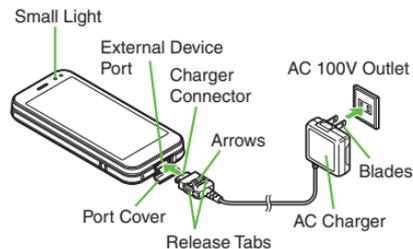


1 Open Port Cover as shown



2 Connect AC Charger

- With arrows up, insert connector until it clicks.

 3 Extend blades and plug AC Charger into AC outlet



- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

4 Unplug AC Charger



- Pull AC Charger straight out.

5 Disconnect handset

- Squeeze Charger Connector release tabs and pull straight out to remove.

6 Fold back blades and replace Port Cover

When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.

Important AC Charger Usage Note

- Fold back blades after charging. Do not pull, bend or twist the cord.

USB Charge

Connect handset (with power on) to PC via USB Cable to charge battery.


- Download and install USB Cable driver beforehand.
- Handset must be on to charge battery.
- Battery may not charge if handset is connected through a USB hub.

In-Car Charger

In-Car Charger may be purchased separately.

Important In-Car Charger Usage Notes

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

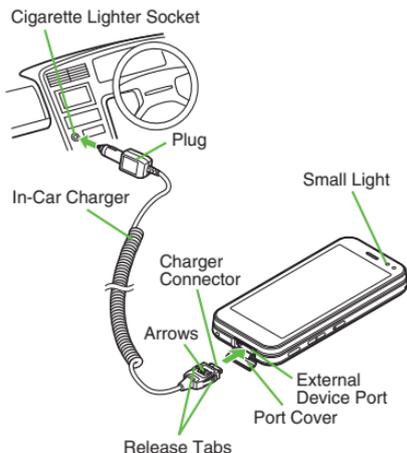

1 Open Port Cover

2 Insert Charger Connector

- With arrows up, insert connector until it clicks.

3 Plug Charger into cigarette lighter socket

4 Start car engine

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

5 Unplug Charger

6 Disconnect handset

- Squeeze Charger Connector release tabs and pull straight out to remove.

7 Replace Port Cover

Advanced

- Disabling USB Charge (P.1-12)

1 Handset Power On/Off

Power On

Follow these steps when powering on 941SH for the first time:

1 (Long)

- After Power On Graphic, follow the steps below.

☎ → ☎ → MENU → いいえ →

設定 → Language → English →

☎ (Long) → ☎ (Long) → Change Menu window opens

2 Select option

Guide descriptions are based on Standard Menu.



- After Change Menu guidance, My Details setup starts.

3 Enter last name → Done → Enter first name → Done

- Change Menu display option confirmation appears.

4 Yes or No



Standby

- Choose **No** to enter Standby immediately after powering on.

When USIM Card is Not Installed

- Insert USIM Card** appears; insert the card to use handset.

Retrieving Network Information

Handset initiates Network Information retrieval when , , or is pressed for the first time.



Follow these steps to retrieve Network Information to use Network-related services and TV; retrieval automatically sets Clock:

1 Yes → Retrieval starts

2 OK

Display Saving & Keypad Lock

Display goes dark after a period of inactivity. With Slider closed, Keypad Lock activates as well; unlock Touch Panel as follows:

Canceling Keypad Lock

1 While Display is dark with Slider closed,



- Display activates. (Keypad Lock is still active.)

2



- Keypad Lock deactivates and Touch Panel is unlocked.
- Alternatively, swipe down on ▼ **Unlock**.

Activating Keypad Lock

With Slider closed,

- Display goes dark and Keypad Lock activates.

Power Off

1 (Long)

- After Power Off Graphic, handset shuts down.

Advanced

-  ● Canceling Keypad Lock upon Display activation ● Setting Keypad Lock cancellation method (P.1-12)

Display

Standby



Hereafter, most screenshots omit Mobile Widgets and other icons.

Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)

1 Tap indicator



- Active indicators are enlarged; description for selected indicator appears.
- Tap indicators to view their descriptions.
- Tap to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.
- Alternatively, Long Press (Ⓜ).

Information

Information window opens at the bottom for Missed Calls, new mail, etc.




Information Window

Information label (e.g., **Message**, etc.) and count appear in Information window. Tap an item to open it.

Opening Information List Manually
MENU ➔ **Phone** ➔ **Information**
Clearing Information List
MENU ➔ **Phone** ➔ **Information** ➔ **Clear** ➔ **Yes**

Softkeys

Softkeys appear at bottom of Display; tap to execute assigned functions/operations. See corresponding handset keys below:

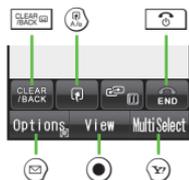

In this guide, CLEAR/BACK and END are respectively indicated as **CLEAR/BACK** and **END**.

■ Softkeys (Long Touch)


Select/execute functions/operations appearing bottom right of Softkeys.



In some windows, assigned functions/operations may appear as **Hold:XX** in bottom half of Softkey labels.

Display Rotation

Motion Sensor tracks handset orientation. When Slider is closed, Display orientation changes with handset orientation. Display orientation for Slider open is fixed by default; set to rotate as needed.

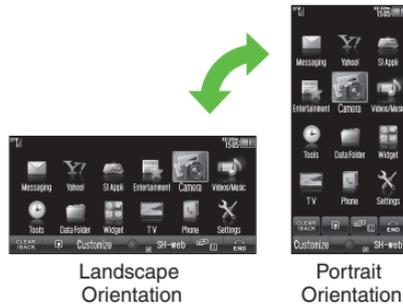

Landscape
Orientation

Portrait
Orientation

1 Indicators

Display Indicators

In Dual Mode, line type appears bottom right of some indicators.

Basic Status

1		Within 3G range
1		Within GSM range
2		International roaming in progress
2		Signal strength ¹
3		Battery strength ²

¹The more bars the better.

²Battery strength % (appears when Display activates, etc.) is an approximation.

Function Status

1		Active S! Application*
1		Paused S! Application*
1		Music playback in progress
1		TV recording in progress (handset)
1		TV recording in progress (Memory Card)
2		Memory Card inserted
2		Accessing Memory Card
2		Reading Memory Card
2		Formatting Memory Card
2		TV Timer/TV Recording Timer set
3		Compass Indicator
4		Music playback in progress (via Bluetooth®)
5		Multiple functions (Multi Job) active

*Appears gold for some S! Applications (Real 3D Games, etc.)

Notifications

1		Unread mail
1		Unread Delivery Report
2		Answer Phone active & message recorded
2		Answer Phone canceled & message recorded
3		New Voicemail
4		Missed Call or new mail on idle line
5		S! Appli/Mobile Widget Notification
6		Contents Key received
7		Unread S! Information Channel info
7		Software Update result
7		Unread S! Quick News info
8		Unread S! Friend's Status notification or unanswered registration request

Warnings

1		Mail memory low
2		Message delivery failure
3		Memory Card unusable/misinserted

■ Transmissions

1	SSL	SSL browsing in progress ¹
2	Packet	Packet transmission available
3	Mail	Receiving mail
4	Mail	Sending mail
3	Friend's Status	S! Friend's Status online
3	Positioning	Positioning in progress ²
4	Software Update	Software Update in progress
5	Wi-Fi	Wi-Fi transmission in progress
6	Keitai Wi-Fi	Keitai Wi-Fi available
7	RSS	RSS-compatible site
7	Weather	Weather Indicator
8	Wi-Fi	Connected to Wi-Fi network ³

9	USB Cable	USB Cable connected
9	USB	USB transmission in progress
9	Infrared	Infrared transmission in progress
9	Infrared	Infrared file transfer in progress
9	Bluetooth	Bluetooth® transmission ready
9	Bluetooth	Bluetooth® transmission in progress (appears for multiple connections)
9	Bluetooth	Bluetooth® talk in progress
9	IC	IC Transmission in progress
9	S!	S! Addressbook Back-up transmission in progress
9	PC Site Browser	PC Site Browser in use
9	Direct Browser	Direct Browser in use
10	Infrared	Infrared transmission ready

¹Hidden while Mobile Widget is in use.

²Flashes while positioning.

³The more blue bars the stronger the connection.

■ Settings

1	Offline Mode	Offline Mode active
2	Answer Phone	Answer Phone active
3	Call Forwarding or Voicemail	Call Forwarding or Voicemail active (forwarding condition: Always *)

4	Schedule/Task	Schedule/Task (Alarm set)
5	Alarm	Schedule/Task (Alarm unset)
5	Alarm	Alarm set
6	Hour Minder	Hour Minder active
7	Manner mode	Manner mode active
7	Drive mode	Drive mode active
7	Original mode	Original mode active
7	VeilView	VeilView active
8	Keypad Lock	Keypad Lock active
8	IC Card Lock	IC Card Lock active
9	Ringtone (Silent)	Ringtone (Silent)
9	Ringtone (Increasing Volume)	Ringtone (Increasing Volume)
9	Vibration	Vibration active
10	Auto Answer or Remote Monitor	Auto Answer or Remote Monitor active
11	Show Secret Data	Show Secret Data active
11	Function Lock	Function Lock active
12	Wakeup TV set	Wakeup TV set

*Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

USB Charge

Disabling USB Charge	<i>MENU</i> → <i>Tools</i> → <i>Connectivity</i> tab → <i>USB Charge</i> → <i>Disable</i>
----------------------	---

Keypad Lock

Canceling Keypad Lock upon Display activation	<i>MENU</i> → <i>Settings</i> → <i>Phone/</i>  <i>tab</i> → <i>Touch Panel</i> → <i>Keypad Lock</i> → <i>Set Keypad Lock</i> → <i>Simple Lock</i>
Setting Keypad Lock cancellation method	<i>MENU</i> → <i>Settings</i> → <i>Phone/</i>  <i>tab</i> → <i>Touch Panel</i> → <i>Keypad Lock</i> → <i>Keypad Unlock</i> → <i>Select method</i>