

Font Size	3-2
Changing Font Size	3-2
Wallpaper	3-3
Customized Screen	3-4
Customized Screen (Japanese)	3-4
Sounds & Alerts	3-5
Customizing Handset Responses	3-5
Text Entry	3-6
Basics	3-6
Entering Hiragana & Kanji	3-7
Entering Other Characters	3-8
Quick Entry & Handy Conversions	3-10
Editing Characters	3-12

User Dictionary	3-13
Saving Frequently Used Words	3-13
Dictionary	3-14
Using Dictionaries (Japanese)	3-14
Search	3-17
Searching Text	3-17
Scratch Pad	3-18
Phone Book	3-19
Creating Phone Book Entries	3-19
Using Phone Book Entries	3-21
Additional Functions	3-22
Troubleshooting	3-27

3

Universal Operations, Etc.



Changing Font Size

Enlarging All Fonts

Activate Large Font Menu to enlarge fonts for menus, text entry, etc. as follows:



- 1 **MENU** ➔ **Settings** ➔ In **Sound/Display** menu, **Change Menu**


• Alternatively, Long Press .

- 2 **Large Font Menu**

Canceling Large Font Menu
In 2, **Standard Menu**

Customizing Font Sizes

- 1 **MENU** ➔ **Settings**

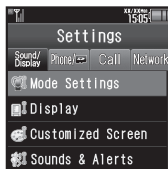

- 2 In **Sound/Display** menu, **Display**

- 3 **Font Settings**




Font Settings Menu

- 4 **Font Size** ➔ **Select item**
- 5 **Select size**

Changing Font Weight

- 1 In **Font Settings** menu, **Font Weight**

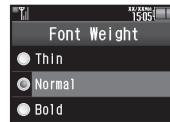

- 2 **Select weight**




Wallpaper

1 MENU ➔ Settings ➔ In Sound/Display menu, *Display*

2 *Wallpaper*

3 *Vertical or Horizontal*

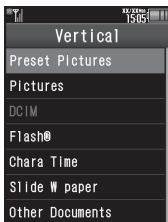

Wallpaper Menu

4 Select folder

5 Select file

- Some files may not be usable.
- Omit the next step when **Preset Pictures** is selected in **4**.

6 *Assign*

Selecting Images Smaller or Larger than Display

After **5**, select option ➔ **Assign**

- For **Centered**, drag slider to zoom in/ out or tap **Rotate** to rotate.

Downloading Images via Yahoo! Keitai
In **4**, **Search by Y! Keitai**

- Read terms of service and then follow onscreen instructions.

Selecting Images with Limited Usage Period

- A confirmation appears. Follow these steps:
Yes ➔ **Assign**

If Double Number Mode Menu Opens

- Tap a mode.

Selecting Chara Time Files

In **4**, **Chara Time** ➔ Select file ➔ **OK**
➔ **Assign**

- If a confirmation appears, tap **Yes**.

Slide Show Wallpaper

Set Slide Show to appear in Standby.
Some images may not appear.

1 In Wallpaper menu, **Slide W paper**

2 *Folder Setting*

3 *Pictures or DCIM*

4 Select sub folder ➔ **Set this folder**

- Omit steps for sub folder if none.

If There is No Image in Set Folder

- Preset images appear.

Using Preset Images

In **3**, **Preset Pictures**

Changing Pattern

In **2**, **Pattern Setting** ➔ Select pattern

- To check patterns, highlight one and tap **Play**.

3

Universal Operations, Etc.



Customized Screen (Japanese)

Preset Customized Screens

- 1 **MENU** ➔ *Customize*
- 2 **Preset Screens**
- 3 **Select pattern**
- 4 **Apply** ➔ **OK**

When Selected Customized Screen is Active

- Cancellation confirmation appears after ③.
To cancel, tap **Yes**.

Downloading Customized Screens

Read information (price, etc.) on Customized Screen download page.

- 1 **MENU** ➔ **Data Folder** ➔ **Customized Screen**



Customized Screen Menu

- 2 **Download Customized Screen**

- Follow onscreen instructions.

Customized Screen Setup

- 1 **In Customized Screen menu, select Customized Screen**
- 2 **Apply** ➔ **OK**

Applying Fee-based Customized Screen

- If Contents Key is required, follow these steps:
 After ①, **OK** ➔ **Yes**
 - Read terms of service and then follow onscreen instructions.

Advanced

- 👉 ● Canceling Customized Screen ● Canceling Customized Screen unconditionally ● Deleting Customized Screens ● Accessing Customized Screen source sites (P.3-22)



Customizing Handset Responses

Ringtones

- 1 **MENU** ➔ **Settings** ➔ In **Sound/Display** menu, **Sounds & Alerts**




Sounds & Alerts Menu

- 2 **Ringtone/videos**

- 3 **Select item**

For **For New Message**, etc., select **Assign Tone**.

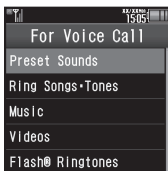

- 4 **Select folder**

- 5 **Select tone/file**

Setting Ring Time for Incoming Mail, etc.
After ③, **Duration** ➔ Enter time ➔ **Accept**

Playing Video for Incoming Transmissions
In ④, **Videos** ➔ Select file

If Portion of File Content is Specifiable

- After ⑤, start point selection window opens; tap start point.

Selecting Files with Limited Usage Period

- A confirmation appears. Tap **Yes** to proceed.

Machi-Uta Service Registration (Japanese)

Use Machi-Uta to play music instead of the standard ringback tone.
Machi-Uta requires a separate contract.

- 1 In **Sounds & Alerts** menu, **Machi-Uta**

- 2 **Register/Cancel**

- Follow onscreen instructions.

Vibration

- 1 In **Sounds & Alerts** menu, **Vibration**

- 2 **Select item** ➔ **Switch On/Off**

- 3 **On**

- 4 **Vibration Pattern**

- To check vibration patterns, highlight one and tap **Check**.

- 5 **Select pattern**

Setting Ringtones to Control Vibration
In ③, **Link to Sound**

Important Vibration Usage Note

- Cancel Vibration when charging battery to help avoid accidents.

3

Universal Operations, Etc.

Advanced

Using Machi-Uta (Japanese) (P.3-22)



Basics


Use handset keys or Touch Panel to enter text.

Unless noted otherwise, text entry descriptions are for text entry windows.

3

Universal Operations, Etc.


Slider Closed



Use Onscreen Keyboard to enter text. Hide Onscreen Keyboard to edit text in expanded window.

Touch Panel **Handset Keys**


Slider Open



Use handset keys to enter text. Touch Panel is available for selecting words from suggestion list, using Options menu, etc.

Touch Panel **Handset Keys**

Text Entry Window with Slider Closed



Onscreen Keyboard


Function Keys

Switch

- Tap **Switch** to toggle Function Key assignments.

Switching Entry Modes

Tap **Switch**



Input Mode

or

Select mode

Entry Mode



Entry Modes:

Kanji	Kanji (hiragana)	123	Single-byte number
アイウ	Double-byte katakana	Pictogram	Pictogram List
アイ	Single-byte katakana	My Pictograms	My Pictogram List
A b c	Double-byte alphanumerics (upper/lower case)	Symbols	Symbol List
Abc	Single-byte alphanumerics (upper/lower case)	Character Code	Character Code



Entering Hiragana & Kanji

Follow these steps to enter **すずき** or **鈴木** in kanji (hiragana) mode:

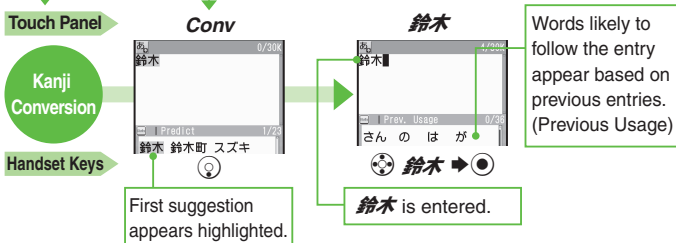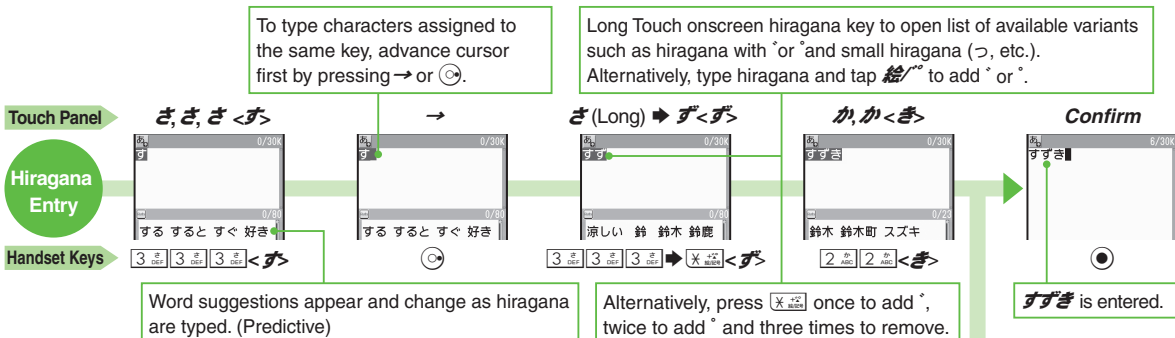

Personal Mode

- Follow these steps before conversion to change suggestion mode:

Switch ⇒ Pred. Mode

- Tap **Pred. Mode** to toggle suggestion modes.

When Target Word is Not Listed

- Tap **←Range** or **Range→** to segment hiragana to convert separately.

Single Kanji Conversion

- Type reading in hiragana and Long Touch **Hold:Kanji**.

Advanced

- Opening Help
- Inserting line breaks
- Inserting spaces
- Setting Font Size
- Disabling suggestions based on entered characters (And more on P.3-22 - 3-23)




Entering Other Characters

Alphanumerics Mode

Word suggestions appear and change as letters are typed.


Example: To enter *apple*

1 Type *a*

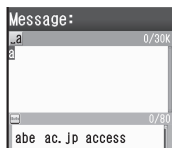

- Words starting with *a* appear.

2 Type *p*

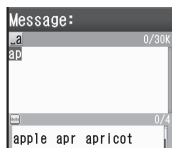

- Words starting with *ap* appear.

3 *apple*

Katakana

Follow these steps to switch to double-byte katakana mode and enter *ジュン*.

1 Switch ➡ Input Mode ➡ アイウ



2 サ, サ<シ> ➡ 絵/°<ジ>

3 ヤ, ヤ<ユ> ➡ A/a<ユ>


4 ワ, ワ, ワ<ン>



Pictograms

May be unavailable depending on the entry mode.

1 Pict

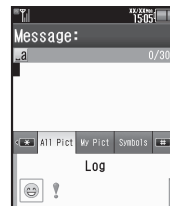

- Pictogram Log appears.

2 Pict 1

- Tap *All Pict* or *Common Pict* for all Pictograms or Cross-Carrier Pictograms.

3 Select Pictogram

- Pictograms are double-byte even in single-byte modes.

4 CLEAR/BACK

- List closes.

Advanced

- Using Character Codes
- Using Pager Code (P.3-22)



Symbols

May be unavailable depending on the entry mode.

1 **Pict** ➔ **Symbols**



- Symbol Log appears.

2 **Half Sym.1**


3 **Select Symbol**

4 **CLEAR/BACK**

- List closes.

Emoticons

1 **Options** ➔ **Emoticons**

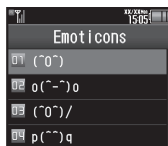

2 **Select emoticon**

Alternative Emoticon Entry Method

- In kanji (hiragana) mode, type **かお** or a descriptive word such as **わーい** or **うーん**, then convert the entry.

EmoticonWordLink

- Immediately after inserting a descriptive word such as **嬉しい** or **悲しい**, corresponding emoticons may appear in the suggestion list.




Quick Entry & Handy Conversions

Mail & Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1 Options ➔ Quick Addr. List

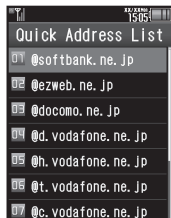


2 Select extension

- Extensions are single-byte even in double-byte entry modes.

Entering from Dictionaries (Search Word)

Enter text by referring to word definitions, translations, etc.

1 Type hiragana ➔ Before completing entry, tap **Switch** twice ➔ **Search Word**

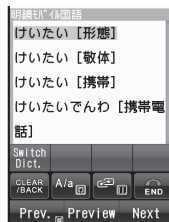

- Alternatively, press after typing hiragana.
- Tap **Switch Dict.** to toggle dictionaries.

2 Select word, etc.

- Definition/translation appears.

3 Confirm

One-Hiragana Conversion

Type the first hiragana to access previously selected words.

Example: **鈴木** was previously selected after conversion.

1 ざ, ざ, ざ <ず> ➔ **Conv**



2 Select word/phrase <鈴木>



Hiragana to Katakana/ Alphanumeric Conversion

Enter katakana and alphanumerics in kanji (hiragana) mode.

Example: To enter **PM**

1 ま ➡ は ➡ Kanaei



2 Select word/phrase <PM>

Quick Conversion (for Hiragana)

A list of word suggestions appears based on the key tapped.

Example: To enter 終電

1 さ<さ> ➡ や<や> ➡ あ<あ>
➡ た, 絵/''<だ> ➡ わ<わ>
➡ Switch ➡ Quick Conv



2 Select word/phrase <終電>

One Hiragana Word Call

- Type the first hiragana of entries you used Quick Conversion for and use Quick Conversion.



Editing Characters

Highlighting Characters to Edit

One Character

Tap the character.



Text Range

Follow these steps to highlight text range.

1 Range Text

- Alternatively, double-tap a character.

2 Drag text range ➡ Release

 


- Tap **Quit** to cancel Range Text.

Deleting & Editing

Follow these steps to correct **また、お願
いします** to **明日またお願いします**.

1 Highlight character




2 CLEAR/BACK



- The highlighted character is deleted.

 3 Highlight target location ➡ Enter characters



Recovering Deleted Characters

- Tap **Undo** once for each character after deletion.

Deleting All Text

- Long Touch **CLEAR/BACK** at the end of text. To delete characters on and after cursor, do the same at the cursor point.

Copy/Cut & Paste

1 Select character or highlight text range



2 Cut or Copy

3 Highlight target location ➡ Options ➡ Paste

4 Select text



Advanced

- Undo conversion or recover deleted characters
- Inserting Phone Book entry items (P.3-22)




Saving Frequently Used Words

Saving Words (Japanese)

Saved words appear among suggestions.

- 1 MENU ➔ Settings ➔ Phone/☎ tab ➔ User Dictionary**

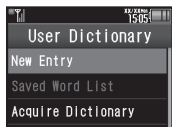

User Dictionary Menu

- 2 New Entry ➔ Enter word ➔ Done**
- 3 Enter reading ➔ Done**

Editing Entries


In ❷, **Saved Word List ➔ Select word ➔ Edit ➔ Done ➔ Edit reading ➔ Done ➔ Yes**

941SH Download Dictionary (Japanese)

Get specialized 941SH Download Dictionaries via SH-web Mobile Internet site (スマホ・メカ・SH-web in Bookmarks; see P.6-9). Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions.

Some dictionary files may not be usable.

- 1 In User Dictionary menu, Acquire Dictionary**

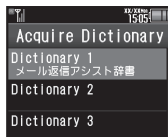

- 2 Select number ➔ Select dictionary**

- Existing dictionary is replaced.

Canceling Dictionary

In ❷, highlight dictionary ➔ **Options ➔ Cancel**

Viewing Dictionary Information

In ❷, highlight dictionary ➔ **Options ➔ Info**

Reply Assist Dictionary (メール返信アシスト辞書)

- When replying, this dictionary prioritizes original message words in suggestion list.
- Effective in kanji (hiragana) mode.

Advanced

- ☞ Deleting entries (P.3-23)



Using Dictionaries (Japanese)

Available Dictionaries:

Preloaded Dictionaries*	Meikyo Japanese Dictionary, Genius English-Japanese Dictionary, Genius Japanese-English Dictionary
Online Dictionaries	Yahoo! Answers, Meikyo Japanese Dictionary MX.net, Genius English-Japanese Dictionary MX.net, Genius Japanese-English Dictionary MX.net, Imidas Encyclopedia, Complete Japanese Encyclopedia (Encyclopedia Nipponica 2001) including "Nipponica Plus," Digital Dai-ji-sen Japanese Dictionary, Shogakukan Progressive English-Japanese/Japanese-English Dictionaries, Hot Pepper FooMoo, Amazon.co.jp, Family Medical Encyclopedia, Guide to Prescription Drugs

*Download and add dictionaries as needed.

Online Dictionaries

- Online dictionary use requires Internet connection incurring packet transmission fees. Information fees may also apply. Read terms of service and then follow onscreen instructions.
- Update dictionary list for most recent versions.

Advanced

- Setting Font Size ● Looking up copied words in dictionaries ● Viewing dictionary information ● Updating dictionary list (And more on P.3-23 - 3-24)

Using Preloaded Dictionaries

Searching As-You-Type

- MENU** ➔ **Tools** ➔ **Doc./Rec. tab** ➔ **Dictionary** ➔ **Switch**


- Select dictionary**



Dictionary Window

- Last used dictionary appears first.

- Enter reading (spelling for English-Japanese dictionary)**

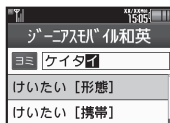

- Enter reading in katakana.
- Search results appear as you type.

- Select word, etc.**



Definition/Translation Window

Looking Up in Online Dictionaries [Definition/Translation Window]

Options ➔ WebDict.Search

- Perform from ② (except ④) in "Using Online Dictionaries" on P.3-15. (Read bulleted sentence in ① beforehand.)

Searching by Keyword

- In Dictionary window, Options**
- Search Method** ➔ **Keyword Search**
- Select entry field** ➔ **Enter text** ➔ **Done**



- Search** ➔ **Select word, etc.**
- Definition/translation window opens.




Copying Text**Selected Portions**

1 In definition/translation window, *Copy*

2 *Start* ➔ *Drag text range* ➔ *Release* ➔ *End*

Index Word Only


1 In definition/translation window, *Options*

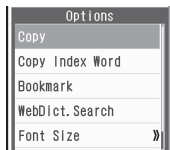

2 *Copy Index Word*

Adding Downloaded Dictionary

1 In Dictionary window, *Options*

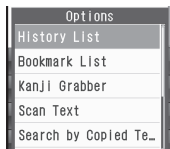

2 *Add Dictionary*

3 *Select file*


Canceling Added Dictionary
In 2, *Cancel Dictionary* ➔ *Yes*

Using Online Dictionaries

1 In Dictionary window, *Switch* ➔ *ネット辞書*

- Terms of service (Japanese) appear when using online dictionary for the first time; read and then tap **OK**. A confirmation appears subsequently; select image download option.

2 *Select pull-down menu*

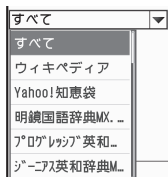

3 *Select dictionary*

- Tap *すべて* to look up in all dictionaries at once.

4 *Select entry field* ➔ *Enter text* ➔ *Done*

5 *Search*

6 *Yes*

7 *Select word, etc.*

- Definition/translation window opens.

Disabling Confirmation

After 5, *Check* (✓) ➔ *From* 5

Viewing Dictionary Information

After 5, select word, etc. ➔ *Options* ➔ *Reference* ➔ *Yes*

Looking Up in Preloaded Dictionaries

After 5, *Options* ➔ *Find by Other Dict.* ➔ *Select dictionary* ➔ *Search* ➔ *Select word, etc.*

Advanced


● Setting Font Size ● Selecting dictionaries for use ● Selecting search method ● Selecting search area (And more on P.3-23 - 3-24)



Using History & Bookmarks

Saving Bookmarks


- 1 In definition/translation window, *Options*

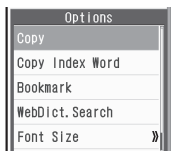

- 2 **Bookmark**

Opening History or Bookmarks

- 1 In Dictionary window, *Options*

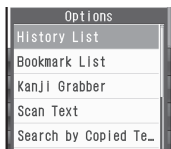

- 2 **History List or Bookmark List**

- 3 **Select word, etc.**

- Definition/translation window opens.
- Not available in History List of online dictionaries.

Using Dictionaries during Text Entry

- 1 **Type text ➔ Before completing entry, Long Touch**

- 2 **Select dictionary**

- 3 **Search ➔ Select word, etc.**
 - Definition/translation window opens.

Inserting Index Word into Text

After , *Options* ➔ *Paste Index Word*

Advanced

- 1 Deleting History & bookmarks (P.3-23)



Searching Text

Web Search

Packet transmission fees apply.

1 *MENU* ➔ *Tools* ➔ *Doc./Rec.* tab

2 *Search*



Search Window

- **Web Search** is selected by default.

3 Select entry field ➔ Enter search text ➔ *Done*

4 *Search*

- Search results appear.

Switching Browsers


[Search Window] *Options* ➔ *Change Browser* ➔ Select browser

Mail Search

1 In Search window, *Mail Search*

2 Select entry field ➔ Enter search text ➔ *Done*

3 *Search*

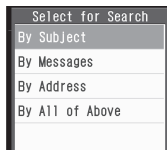

4 Select option

Searching within Received or Sent Messages

[Search Window] *Options* ➔ *Change Mail Folder* ➔ *Received Messages* or *Sent Messages*



Scratch Pad

Open Scratch Pad to jot down text, and more.

3


Universal Operations, Etc.

1 MENU ➔ Tools ➔ Doc./Rec. tab

2 Scratch Pad

- Text entry window opens.

3 Enter text ➔ Done

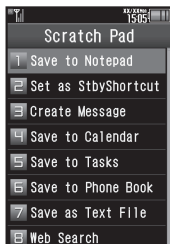

4 Save to Notepad

- Open saved entries from Notepad.

Other Scratch Pad Usage

Usage	Operation
Paste to Standby	Set as StbyShortcut ➔ Select sheet
Enter Mail Message Text	Create Message ➔ Select mail type
Enter Schedule Subject/Details	Select Save to Calendar
Enter Task Subject/Details	Select Save to Tasks
Add Last Name/Phone Number/Mail Address to Phone Book	Select Save to Phone Book ■ Reading is not entered.
Save Text File	Save as Text File ➔ Enter name ➔ Done ➔ Save here ■ Saved to Data Folder (Other Documents).
Search Internet	Web Search ➔ Select browser

For more, see corresponding function description or follow onscreen instructions.



Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

1 MENU ➔ Phone ➔ Add New Entry



2 Last Name: ➔ Enter last name ➔ Done ➔ First Name: ➔ Enter first name ➔ Done




- Characters entered for names (reading for kanji) appear.

3 Add Phone Number: ➔ Enter phone number ➔ Done ➔ Select type



- To save additional phone numbers, repeat 3.

4 Add Email Address: ➔ Enter mail address ➔ Done ➔ Select type

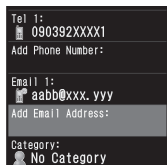

- To save additional mail addresses, repeat 4.

5 Category: ➔ Select Category



Phone Book Entry Window

6 Save

- Entry is saved to Phone Book.

Incoming Calls while Creating Entry

- Contents are temporarily saved. End the call to return.

Selecting Mode in Dual Mode

[Phone Book Entry Window] Mode:

➔ Select mode ➔ 6

Advanced

- Saving other information
- Setting Light Color
- Changing vibration pattern
- Editing Phone Book entries
- Setting incoming mail ring time
- Renaming Categories
- Changing Category icons
- Moving Categories (P.3-25)



Personal Ringtone

Set tone for calls from saved numbers.

- 1 In Phone Book entry window, select item, e.g., *Tone-Voice Call*:



- 2 Assign Tone ➔ Select folder
- 3 Select tone/file ➔ Save

Saving Secret Entries

Hide Phone Book entries to require Handset Code for access.


- 1 In Phone Book entry window, *Secret*:
- 2 On ➔ Save

Accessing Secret Entries

➔ Options ➔ *Unlock Temporarily*
➔ Enter Handset Code ➔ OK

Customizing Response by Category

- 1 MENU ➔ Phone ➔ Set Category

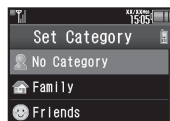

- 2 Select Category ➔ Options ➔ Select item
- 3 Select item ➔ Select item, e.g., *Assign Tone* ➔ Customize responses


- Customize responses in the same way as Phone Book entries.
- Not available for USIM Card.

Responses Set by Phone Book Entry

- Settings for each entry take priority.

Saving Numbers After Calls

After a call, save number to Phone Book.

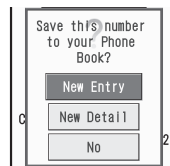

- 1 When confirmation appears, *New Entry* ➔ Complete other fields ➔ Save

Saving to an Existing Entry

In 1, *New Detail* ➔ Select entry ➔ Complete other fields ➔ Save



Using Phone Book Entries

Dialing via Phone Book

- 1  ➔ Highlight katakana row (tab)



Entry Search Window (By あかさたな)

- When using Double Number in Dual Mode, Line indicators appear.

- 2 Select entry



- 3 Select phone number

- 4 Call

Placing Video Calls
In , Video Call

Advanced

- Changing view for entry search window
- Assigning images to Phone Book entries for incoming transmissions (And more on P.3-24)
- Messaging via Phone Book
- Placing Decoration Calls via Phone Book
- Deleting Phone Book entries
- Checking memory status
- Copying Phone Book entries (And more on P.3-25 - 3-26)

Changing Search Method

- 1 In entry search window, **Options** ➔ **Ph.Book Settings**
- 2 **Sort Entries**



- 3 Select method


- Phone Book Search Methods:

By あかさたな	Shows entries with Readings that start with katakana in the specified row
By Category	Opens entries in the specified Category
By Reading	Shows all entries in Reading order (katakana, alphabetical then numerical)

Changing Search Method Temporarily
[Entry Search Window] **Switch**

Opening from Other Functions

 
Example: Enter a recipient via Phone Book when sending a message.



Select Recipient Window


- 1 **Phone Book**
 - Entry search window opens.
- 2 Select entry
- 3 Select phone number or mail address



- Recipient is entered.
- Omit  if only one number or address is saved.



Customized Screen


Canceling Customized Screen	<i>MENU</i> ➔ <i>Customize</i> ➔ <i>Off</i> ➔ <i>Yes</i>
Canceling Customized Screen unconditionally	 (Long) ➔ <i>Menu List</i> ➔ <i>Settings</i> ➔ In Sound/Display menu, <i>Customized Screen</i> ➔ <i>Off</i> ➔ <i>Yes</i>
Deleting Customized Screens	<i>MENU</i> ➔ <i>Data Folder</i> ➔ <i>Customized Screen</i> ➔ Highlight Customized Screen ➔ <i>Options</i> ➔ <i>Delete</i> ➔ <i>Yes</i> <ul style="list-style-type: none"> When the corresponding Contents Key has been downloaded, tap <i>Yes</i> or <i>No</i>.
Accessing Customized Screen source sites	<i>MENU</i> ➔ <i>Data Folder</i> ➔ <i>Customized Screen</i> ➔ Highlight Customized Screen ➔ <i>Options</i> ➔ <i>Web Access</i> <ul style="list-style-type: none"> Follow onscreen instructions.

Machi-Uta

Using Machi-Uta (Japanese)	<small>[Start Here]</small> <i>MENU</i> ➔ <i>Settings</i> ➔ In Sound/Display menu, <i>Sounds & Alerts</i> ➔ <i>Machi-Uta</i> ➔ See below
	Searching Music <i>Music Search</i> <ul style="list-style-type: none"> Follow onscreen instructions.
	Changing Settings <i>Settings</i> <ul style="list-style-type: none"> Follow onscreen instructions.
	Viewing Machi-Uta Information <i>What's Machi-Uta</i> <ul style="list-style-type: none"> Follow onscreen instructions.

Text Entry

Entry & Edit


Opening Help	In a text entry window, <i>Options</i> ➔ <i>Help</i>
Using Character Codes	In a text entry window, <i>Switch</i> ➔ <i>Input Mode</i> ➔ <i>Character Code</i> ➔ Enter four digits
Using Pager Code	In a text entry window, <i>Options</i> ➔ <i>Input/Conversion</i> ➔ <i>Input Method</i> ➔ <i>Pager Code</i> <ul style="list-style-type: none"> Return to text entry window and enter two digits.
Inserting line breaks	At the End of Text In a text entry window, double-tap
	Mid-Entry In a text entry window, <i>絵/* or Pict</i> ➔ <i>Symbols</i> tab ➔ <i>Half Sym.2</i> ➔ 
Inserting spaces	In a text entry window, →
Clearing entry log	In a text entry window, <i>Options</i> ➔ <i>Input/Conversion</i> ➔ <i>Reset Log</i> ➔ <i>Yes</i>
Undo conversion or recover deleted characters	In a text entry window, <i>Options</i> ➔ <i>Undo/Recover</i>
Inserting Phone Book entry items	In a text entry window, <i>Options</i> ➔ <i>Insert/Font Size</i> ➔ <i>Phone Book</i> ➔ Select entry ➔ Select item
Setting Font Size	In a text entry window, <i>Options</i> ➔ <i>Insert/Font Size</i> ➔ <i>Font Size</i> ➔ Select size



■ Conversion

Disabling suggestions based on entered characters	In a text entry window, <i>Options</i> ➤ <i>Input/Conversion</i> ➤ <i>Predictive</i> ➤ <i>Off</i>
Disabling suggestions based on entered words	In a text entry window, <i>Options</i> ➤ <i>Input/Conversion</i> ➤ <i>Previous Usage</i> ➤ <i>Off</i>
Disabling emoticon/Pictogram suggestions based on entered words	In a text entry window, <i>Options</i> ➤ <i>Input/Conversion</i> ➤ <i>EmoticonWordLink</i> ➤ <i>Off</i>
Lowering type priorities in suggestion list	In a text entry window, <i>Options</i> ➤ <i>Input/Conversion</i> ➤ <i>Set Low Priority</i> ➤ Select type (✓) ➤ <i>OK</i>
Selecting a suggestion mode	In a text entry window, <i>Options</i> ➤ <i>Input/Conversion</i> ➤ <i>Personal Mode</i> ➤ Select mode

User Dictionary

Deleting entries	<i>MENU</i> ➤ <i>Settings</i> ➤ <i>Phone/</i>  <i>tab</i> ➤ <i>User Dictionary</i> ➤ <i>Saved Word List</i> ➤ Highlight word ➤ <i>Delete</i> ➤ <i>Yes</i>
------------------	--

Dictionary

■ Preloaded & Online Dictionaries

Setting Font Size	<i>MENU</i> ➤ <i>Tools</i> ➤ <i>Doc./Rec. tab</i> ➤ <i>Dictionary</i> ➤ <i>Options</i> ➤ <i>Font Size</i> ➤ Select size
Looking up copied words in dictionaries	After copying text, <i>MENU</i> ➤ <i>Tools</i> ➤ <i>Doc./Rec. tab</i> ➤ <i>Dictionary</i> ➤ <i>Options</i> ➤ <i>Search by Copied Text</i> ➤ <i>Search</i> ➤ Select word, etc.
Deleting History & bookmarks	<small>Start Here</small> <i>MENU</i> ➤ <i>Tools</i> ➤ <i>Doc./Rec. tab</i> ➤ <i>Dictionary</i> ➤ <i>Options</i> ➤ <i>History List</i> or <i>Bookmark List</i> ➤ See below
	One Word Highlight word ➤ <i>Options</i> ➤ <i>Delete</i> ➤ <i>Yes</i>
	All Words <i>Options</i> ➤ <i>Delete All</i> ➤ Enter Handset Code ➤ <i>OK</i> ➤ <i>Yes</i>
Looking up scanned kanji in dictionaries	<i>MENU</i> ➤ <i>Tools</i> ➤ <i>Doc./Rec. tab</i> ➤ <i>Dictionary</i> ➤ <i>Options</i> ➤ <i>Kanji Grabber</i> ➤ Frame kanji in Loupe ➤ <i>Select</i> ➤ <i>Dictionary</i> ➤ <i>Search</i> ➤ Select word, etc. • Definition/translation window opens.
Looking up scanned text in dictionaries	<i>MENU</i> ➤ <i>Tools</i> ➤ <i>Doc./Rec. tab</i> ➤ <i>Dictionary</i> ➤ <i>Options</i> ➤ <i>Scan Text</i> ➤ Frame text in center of Display ➤ <i>Scan</i> ➤ Select line ➤ <i>Select</i> ➤ <i>OK</i> ➤ <i>Search</i> ➤ Select word, etc. • Definition/translation window opens.



■ Preloaded Dictionaries

Viewing dictionary information	MENU ➤ Tools ➤ Doc./Rec. tab ➤ Dictionary ➤ Options ➤ Information
--------------------------------	---

■ Online Dictionaries

Updating dictionary list	MENU ➤ Tools ➤ Doc./Rec. tab ➤ Dictionary ➤ Switch ➤ ネット辞書 ➤ Options ➤ Update Dictionaries ➤ Yes
--------------------------	--

Selecting dictionaries for use	MENU ➤ Tools ➤ Doc./Rec. tab ➤ Dictionary ➤ Switch ➤ ネット辞書 ➤ Options ➤ Edit Dict. List ➤ Select dictionary <input type="checkbox"/> / <input checked="" type="checkbox"/> ➤ Save
--------------------------------	--

Selecting image download option	MENU ➤ Tools ➤ Doc./Rec. tab ➤ Dictionary ➤ Switch ➤ ネット辞書 ➤ Options ➤ Show Image ➤ Select option • For Auto, tap Yes or No.
---------------------------------	---

Selecting search method	MENU ➤ Tools ➤ Doc./Rec. tab ➤ Dictionary ➤ Switch ➤ ネット辞書 ➤ Select pull-down menu ➤ Select dictionary ➤ Options ➤ Set Search Method ➤ Select option • Not available when すべて or unsupported dictionary is selected.
-------------------------	---

Selecting search area	MENU ➤ Tools ➤ Doc./Rec. tab ➤ Dictionary ➤ Switch ➤ ネット辞書 ➤ Select pull-down menu ➤ Select dictionary ➤ Options ➤ Set Search Area ➤ Select area • Not available when すべて or unsupported dictionary is selected.
-----------------------	---

Opening terms of service

MENU ➤ Tools ➤ Doc./Rec. tab ➤ Dictionary ➤ Switch ➤ ネット辞書 ➤ Options ➤ Terms of service
• Tap OK to return to Dictionary window.

Opening Help

MENU ➤ Tools ➤ Doc./Rec. tab ➤ Dictionary ➤ Switch ➤ ネット辞書 ➤ Select pull-down menu ➤ Select dictionary ➤ Options ➤ Help ➤ Yes

Phone Book

■ View Settings

Changing view for entry search window	<small>(Start Here)</small> MENU ➤ Phone ➤ Ph.Book Settings ➤ See below
	Portrait Orientation Vertical Display ➤ List+Business Card
	Landscape Orientation Horizontal Display ➤ Name+Email
Assigning images to Phone Book entries for incoming transmissions	<small>(Start Here)</small> MENU ➤ Phone ➤ Add New Entry ➤ Picture: ➤ See below
	Assigning Images Assign Picture ➤ Select image
	Capturing Images Take Picture ➤ Frame image on Display ➤
Hiding confirmation after calls to/from unsaved numbers	MENU ➤ Phone ➤ Ph.Book Settings ➤ New Number Prompt ➤ Incoming Call or Outgoing Call ➤ Off



■ Phone Book Entry

Tap **Save** at the end to save entry. (At least a name, phone number or mail address must be entered.)

Saving other information	<p>Start Here MENU ➤ Phone ➤ Add New Entry ➤ See below</p> <p>Address Address: ➤ Select item ➤ Complete field ➤ Done ➤ OK • For Address Type:, tap type.</p> <p>Office Office: ➤ Select item ➤ Enter text ➤ Done ➤ OK</p> <p>Homepage Homepage: ➤ Enter URL ➤ Done ➤ Select type</p> <p>Note Note: ➤ Enter text ➤ Done</p> <p>Birthday Birthday: ➤ Enter date ➤ Accept</p> <p>Location Information Location Info.: ➤ Enter Location Information</p>
	<p>MENU ➤ Phone ➤ Add New Entry ➤ Select item, e.g., Light-Voice Call: ➤ Switch On/Off ➤ Select option ➤ Light Color ➤ Select color ➤ CLEAR/BACK</p>
	<p>MENU ➤ Phone ➤ Add New Entry ➤ Select item, e.g., Vibration-Message: ➤ Switch On/Off ➤ Select option ➤ Vibration Pattern ➤ Select pattern ➤ CLEAR/BACK</p>
Setting Light Color	<p>MENU ➤ Phone ➤ Add New Entry ➤ Select item, e.g., Light-Voice Call: ➤ Switch On/Off ➤ Select option ➤ Light Color ➤ Select color ➤ CLEAR/BACK</p>
Changing vibration pattern	<p>MENU ➤ Phone ➤ Add New Entry ➤ Select item, e.g., Vibration-Message: ➤ Switch On/Off ➤ Select option ➤ Vibration Pattern ➤ Select pattern ➤ CLEAR/BACK</p>





■ Editing Entries & Categories

Editing Phone Book entries	<p>Start Here MENU ➤ Phone ➤ Add New Entry ➤ See below</p> <p>Phone Numbers Phone Number: ➤ Select item ➤ Complete field ➤ Done ➤ OK • Edit Reading after editing names.</p>
Setting incoming mail ring time	<p>MENU ➤ Phone ➤ Set Category ➤ Select Category ➤ Edit Name ➤ Enter name ➤ Done</p> <p>Tone-New Message: ➤ Duration ➤ Enter time ➤ Accept ➤ Save • Available for compatible ringtones.</p>
Renaming Categories	<p>MENU ➤ Phone ➤ Set Category ➤ Select Category ➤ Edit Name ➤ Enter name ➤ Done</p>
Changing Category icons	<p>MENU ➤ Phone ➤ Set Category ➤ Select Category ➤ Change Icon ➤ Select Pictogram</p>
Moving Categories	<p>MENU ➤ Phone ➤ Set Category ➤ Highlight Category ➤ Move ➤ Select target location • View for By Category Phone Book search changes accordingly.</p>





■ Using Entries

	<p>Start Here MENU ➤ Phone ➤ Add New Entry ➤ See below</p> <p>Phone Numbers Phone Number: ➤ Select item ➤ Complete field ➤ Done ➤ OK • Edit Reading after editing names.</p>
Messaging via Phone Book	<p>MENU ➤ Phone ➤ Set Category ➤ Select Category ➤ Change Icon ➤ Select Pictogram</p> <p>Tone-New Message: ➤ Duration ➤ Enter time ➤ Accept ➤ Save • Available for compatible ringtones.</p>
Placing Decoration Calls via Phone Book	<p>MENU ➤ Phone ➤ Set Category ➤ Highlight Category ➤ Move ➤ Select target location • View for By Category Phone Book search changes accordingly.</p>



Initiating S! Circle Talk via Phone Book	 ➔ Select entry ➔ Select phone number ➔ <i>Call S! Circle Talk</i> ➔ <i>Call</i> • Set Connection status to Online first.
Placing international calls via Phone Book	 ➔ Select entry ➔ Select phone number ➔ <i>Int'l Call</i> ➔ Select country ➔ <i>Call</i>
Using Location Information via Phone Book	 ➔ Select entry ➔ <i>Settings</i> tab ➔ Highlight  ➔ <i>Options</i> ➔ <i>Set to Destination</i> • Follow onscreen instructions.



■ Managing Entries

Deleting Phone Book entries	One Entry  ➔ Highlight entry ➔ <i>Options</i> ➔ <i>Delete</i> ➔ <i>Yes</i>
	All Entries <i>MENU</i> ➔ <i>Phone</i> ➔ <i>Manage Entries</i> ➔ <i>Delete All</i> ➔ Select entry type ➔ <i>Yes</i> ➔ Enter Handset Code ➔ <i>OK</i>
Checking memory status	<i>MENU</i> ➔ <i>Phone</i> ➔ <i>Manage Entries</i> ➔ <i>Memory Status</i>
Copying Phone Book entries	One Entry (Handset → USIM Card)  ➔ Highlight entry ➔ <i>Options</i> ➔ <i>Manage Entries</i> ➔ <i>Copy Entry to USIM</i> ➔ <i>Yes</i>
	One Entry (USIM Card → Handset)  ➔ <i>Options</i> ➔ <i>Ph.Book Settings</i> ➔ <i>Select Phone Book</i> ➔ <i>USIM Memory</i> ➔ Highlight entry ➔ <i>Options</i> ➔ <i>Manage Entries</i> ➔ <i>Copy Entry to Phone</i>
	All Entries  ➔ <i>Options</i> ➔ <i>Manage Entries</i> ➔ <i>Copy All</i> ➔ Select method ➔ <i>Yes</i> • If handset/USIM Card memory is low, some entries may not be copied.

Editing Categories on USIM Card	<i>(Start Here)</i> <i>MENU</i> ➔ <i>Phone</i> ➔ <i>Set Category</i> ➔ <i>Options</i> ➔ <i>Change to USIM</i> ➔ See below
	Renaming Categories Select Category ➔ <i>Edit Name</i> ➔ Enter name ➔ <i>Done</i>
	Moving Categories Highlight Category ➔ <i>Move</i> ➔ Select target location
	Changing Icons Select Category ➔ <i>Change Icon</i> ➔ Select Pictogram
Changing default storage media for new entries	<i>MENU</i> ➔ <i>Phone</i> ➔ <i>Ph.Book Settings</i> ➔ <i>Save New Entry</i> ➔ <i>USIM Memory</i> or <i>Ask Each Time</i>
Switching reference Phone Book	<i>MENU</i> ➔ <i>Phone</i> ➔ <i>Ph.Book Settings</i> ➔ <i>Select Phone Book</i> ➔ <i>USIM Memory</i> or <i>Both</i>

■ Mode (Double Number)

First, activate Double Number.

Changing modes of all entries at once	<i>MENU</i> ➔ <i>Phone</i> ➔ <i>Manage Entries</i> ➔ <i>Change Mode(All)</i> ➔ Select mode ➔ Enter Handset Code ➔ <i>OK</i>
Changing modes of multiple entries	 ➔ <i>Options</i> ➔ <i>Manage Entries</i> ➔ <i>Multiple Selection</i> ➔ Select entry (<input checked="" type="checkbox"/> / <input type="checkbox"/>) ➔ <i>Options</i> ➔ <i>Change Mode</i> ➔ Select mode
Changing modes of entries by Category	 ➔ Highlight Category ➔ <i>Options</i> ➔ <i>Manage Entries</i> ➔ <i>Change Mode(Category)</i> ➔ Select mode ➔ Enter Handset Code ➔ <i>OK</i> • Set search method to By Category first.



Customized Screen



Customized Screen is not applied

- Some Customized Screens may not contain files for Wallpaper, System Graphics, ringtones or ringvideos; default settings apply for these functions.

Phone Book



Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images do not appear for incoming Decoration Calls including image/video.
- Images may not appear when another function is active, etc.



Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Ringtones do not sound for incoming Decoration Calls with sound.
- Memory Card with source files may be removed; reinsert the card to restore settings.



Cannot enter 16 characters for Category names

- Character entry limit for Category names may be lower depending on the USIM Card in use.

