

Internet Services	6-2
Service Basics	6-2
Yahoo! Keitai	6-3
Using Yahoo! Keitai.....	6-3
PC Sites	6-5
Browsing PC Sites.....	6-5
Browsing	6-6
Basic Operations	6-6

Bookmarks & Saved Pages	6-9
Using Bookmarks & Saved Pages....	6-9
RSS Feeds	6-10
Updating Blogs & News.....	6-10
Additional Functions	6-11
Troubleshooting	6-19

6

Internet



Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser or Direct Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SoftBank Mobile Website (**P.17-23**).
- Outside Japan, Yahoo! Keitai and PC Site Browser cannot be used over Wi-Fi.

Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. Information fees may also apply.

Security

Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

Opening Secure Pages

- A confirmation appears. Tap **Yes** to proceed.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GMO GlobalSign, RSA Security, SECOM Trust Systems and Comodo Japan cannot be held liable for any damages associated with the use of SSL.

Advanced

- Clearing cache (temporarily saved information)
- Clearing authentication information (And more on **P.6-11**)
- Disabling referer information delivery to the Server
- Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.) (And more on **P.6-18**)



Using Yahoo! Keitai

Access Yahoo! Keitai sites via 3G Network or Wi-Fi.

- Subscription to Keitai Wi-Fi is required to use Yahoo! Keitai over Wi-Fi.
- To use Wi-Fi, complete related settings beforehand.
- Within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Internet pages may not open depending on connection/Server status, etc.

Using Yahoo! Keitai Main Menu

Browse Yahoo! Keitai sites from Yahoo! Keitai Main Menu.


1 ➔ Connection starts



Internet Page

- Yahoo! Keitai Main Menu appears.
- To disconnect, tap **Cancel**.

2 Select menu item

- Corresponding page opens.
- Repeat  to open additional links.

3 **END** ➔ **Yes** ➔ **Page closes**

Returning to Previous Pages

[Internet Page] **Back** ➔ Previous page opens

- Follow these steps to return to the initial page:
[Internet Page] **Options** ➔ **Forward**
Returning to Yahoo! Keitai Main Menu
[Internet Page] **Options** ➔ **Yahoo! Keitai**



User Authentication

Enter user ID or password ➔ **Done**
➔ **Send**

Accessing **メニューリスト** Directly
MENU ➔ **Yahoo!** ➔ **Menu List**

Switching between 3G and Wi-Fi Manually
[Internet Page] **Options** ➔ **Convenient Functions** ➔ **Switch Wi-Fi/3G** ➔ Select network

Advanced

-   Switching browsers (P.6-11)



Playing Media during Download


Play files while they transfer from the server (progressive download) or stream media files.

- Save progressive download files of 10 MB or less after playback as needed. (Copy protected files cannot be saved.)
- These media files cannot be saved even after playback:
 - Progressive download files larger than 10 MB
 - Streaming media files
- Fast forward/rewind is not available for progressive download files larger than 10 MB.
- Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.

1 On a page, select file

- Playback starts.


Pausing PlaybackTap 

- To resume playback, tap .
- Progressive download continues even while playback is paused. For files larger than 10 MB, progressive download stops if playback is paused for a period of time.

Stopping Playback**CLEAR/BACK** → **Back****Stopping Progressive Download**

- For files of 10 MB or less, progressive download continues even when playback is paused or stopped. To stop download, tap **CLEAR/BACK** to return to the previous page, then tap **CLEAR/BACK** again.

Playback Sound

- Sound is heard from Speaker/Headphones regardless of  Sound Output setting.







Using History**1 MENU** → **Yahoo!** → **History****2 Select record** → **Connection starts**

- Corresponding page opens.

3 END → **Yes** → **Page closes****Entering URLs Directly****1 MENU** → **Yahoo!** → **Enter URL****2 Enter URL** → **Done** → **Connection starts**

- Corresponding page opens.

3 END → **Yes** → **Page closes****Advanced**

-   Using previously entered URLs
-  Deleting History records
-  Sorting History records (And more on **P.6-11**)
-  Customizing media playback settings
-  Streaming from Media Player (And more on **P.6-15**)

Browsing PC Sites

View PC Internet sites via PC Site Browser or Direct Browser. (Direct Browser requires Wi-Fi connection.)

- To use Wi-Fi, complete related settings beforehand.
- Internet pages may not open depending on connection/Server status, etc.
- When using PC Site Browser within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Browsing PC sites via PC Site Browser may incur high charges depending on subscribed price plan.
- Subscription to Keitai Wi-Fi is required to use PC Site Browser over Wi-Fi.
- PC Site Browser and Direct Browser share Bookmarks, Saved Pages, History records, etc.

- 1 MENU** ➔ **Yahoo!**
- 2 PC Site Browser or Direct Browser**
- 3 Homepage** ➔ **Connection starts**



Internet Page

- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, tap **Cancel**.

- 4 Select menu item**
 - Corresponding page opens.
 - Repeat 4 to open additional links.
- 5 END** ➔ **Yes** ➔ **Page closes**

Direct Browser

- Use this Wi-Fi-based browser to view PC sites without using SoftBank 3G Network service.

Returning to Previous Pages

[Internet Page] **Back** ➔ Previous page opens

- Follow these steps to return to the initial page:

[Internet Page] **Options** ➔ **Forward**
 Returning to Yahoo! JAPAN Home
 [Internet Page] **Options** ➔ **Homepage**

User Authentication

Enter user ID or password ➔ **Done**
 ➔ **Send**

Using History

In ☺, **History** ➔ Select record

Entering URLs Directly

In ☺, **Enter URL** ➔ Enter URL ➔ **Done**

Switching between 3G and Wi-Fi Manually (PC Site Browser)

[Internet Page] **Options** ➔ **Convenient Functions** ➔ **Switch Wi-Fi/3G** ➔ Select network

Advanced

- ☞ Switching browsers
- Using previously entered URLs
- Deleting History records
- Opening History properties (P.6-11)
- Showing navigation map for continuous scroll
- Setting scroll unit
- Hiding PC Site Browser messages
- Setting up proxy
- Setting search engine URLs (And more on P.6-14)



Basic Operations

Page Browsing


Scrolling Pages

If page content continues beyond view, drag finger across Display to scroll.



Switching Frames

On framed pages, tap frame to highlight it.

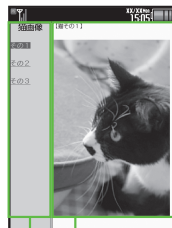

Frames

Viewing Single Frame

[Internet Page] Highlight frame ➔
Options ➔ Convenient Functions ➔
Frame In

- To return, tap *Back*.

 
Tabbed Browsing

Open another page in a new tab and switch between tabs.

Opening a New Tab

- 1 On a page, highlight menu item ➔ *Options* ➔ *Tab Menu*
 - Use to highlight menu item.

Open in New Tab



Switching Tabs

Tap a tab to open it.

Closing Tabs

Tap tab ➔ *Options* ➔ *Tab Menu* ➔
Close Tab or *Close All Other Tabs*


Advanced

- Looking up copied words in dictionaries
- Saving files to Data Folder
- Setting Font Size
- Enlarging specific areas
- Disabling automatic image display/sound playback
- Setting scroll unit (And more on P.6-12 - 6-14)

Selecting Items in Enlarged View

Enlarge area to select items with finger.

1 On a page, Long Touch area

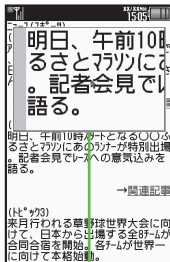

Enlarged View

2 Drag finger to highlight item in enlarged view → Release

 
Selecting Text

Activate Drag Mode to enable text selection; select text to copy or look up words in dictionaries. Follow these steps to create a message:
(Text may not be selectable or linked page may open depending on the site or page.)

1 On a page, Long Touch Hold:Drag Mode

- Drag Mode is activated.

2 Drag text range → Release



3 Options → Create Message


4 Select mail type → Complete message → Send

- S! Mail Composition window opens automatically depending on character count.



Additional Page Operations

Enter text or select/execute items.

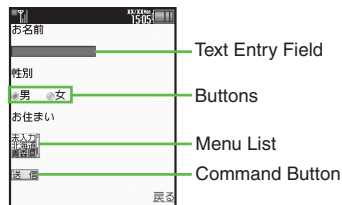

Text Entry

1 On a page, select text entry field

2 Enter text ➔ **Done**
 • Internet page returns.

Using Entered Text (Input Memory)

[Internet Page] Select text entry field
 ➔ **Options** ➔ **Insert/Font Size** ➔
Input Memory ➔ **Select text**

Pull-down Menu Item Selection

1 On a page, select menu list field

2 Tap ▲ or ▼ to highlight item ➔ **Select item**

When Multiple Selection is Supported

- Select items as needed and tap **Cancel**.

Page Item Indicators

Selection Items

Buttons or boxes appear.

1 On a page, select button or or box



• / changes to / .

Execution Items

Execute the assigned command.

1 On a page, select command



Using Bookmarks & Saved Pages

Bookmarks

Bookmark sites for quick access.

Saving Bookmarks

- 1 On a page, **Options** ➔ **Bookmarks** ➔ **<Add New Entry>**
 - **<Add New Entry>** appears in gray for unsavable pages.

2 Check/edit URL ➔ **Done**

3 Check/edit title ➔ **Done**

4 **Save**

Opening Bookmarks

- 1 **MENU** ➔ **Yahoo!** ➔ **Bookmarks**



2 Select title

- Corresponding page opens.

Switching Bookmarks Lists

After 1, **Options** ➔ **Change List** ➔
Select type

Opening Bookmarks Online
[Internet Page] **Options** ➔
Bookmarks ➔ Select title

Saved Pages

Save page content; handset opens saved pages without connecting to the Internet.

Saving Pages

- 1 On a page, **Options** ➔ **Saved Pages** ➔ **Save**
 - **Save** appears only for savable pages.

2 Check/edit title ➔ **Done**

Opening Saved Pages

- 1 **MENU** ➔ **Yahoo!** ➔ **Saved Pages**



2 Select page

- Corresponding page opens.

Switching Saved Pages Lists

After 1, **Options** ➔ **Change List** ➔
Select type

Opening Saved Pages Online
[Internet Page] **Options** ➔ **Saved Pages** ➔ **Open List** ➔ Select page

Advanced

- 👉 ● Deleting titles ● Editing titles ● Changing title order ● Sorting titles into folders ● Deleting pages ● Editing page titles ● Changing page order (And more on P.6-15 - 6-16)



Updating Blogs & News

Register RSS-compatible sites; view content updates without opening source sites. Packet transmission fees apply (except when handling RSS feeds via Wi-Fi).

Subscribing to RSS Feeds

Indicator below appears for RSS-compatible sites.



RSS Indicator

Available for PC Site Browser and Direct Browser.

- 1 On a compatible page, **Options** → **Register In RSS Feed**
- 2 Select feed (/) → **Complete selection** → **Assign**
- 3 **Save**
 - Tap **Yes** to update immediately or **No**.

Via RSS Icons

Use RSS icons to subscribe to RSS feeds from sites that are not RSS-compatible. Available for PC Site Browser and Direct Browser.

- 1 On a page, select icon
- 2 **Yes** → **Save**

Checking Updates


Follow these steps to update all feeds via PC Site Browser:

- 1 **MENU** → **Yahoo!**
- 2 **PC Site Browser** → **RSS Feed**



RSS Feed List

- 3 **Reload All** → **OK**
- 4 **Yes or No**
- 5 **Select feed**

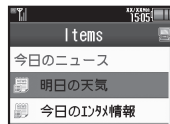

Title List

- 6 **Select title**
 - Information appears.

Via Direct Browser

In **Direct Browser** → **RSS Feed** → **From**

Updating Single RSS Feeds

[RSS Feed List] Highlight feed → **Options** → **Reload** → **OK** → **Yes or No**

Accessing Source Sites

[Title List] Select title → **Select linked title** → **Yes** → **OK** → **Yes or No**

Advanced

- Disabling feed updates
- Sorting feeds into folders
- Deleting feeds
- Sorting feeds
- Opening feed properties
- Exchanging feeds with other devices
- Sending feeds via mail (P.6-17 - 6-18)



Connecting & Browsing

■ General

Switching browsers	On a page, <i>Options</i> ➔ <i>Switch Browser</i> ➔ <i>This Page</i> or <i>Linked Page</i> ➔ <i>Select browser</i> <ul style="list-style-type: none"> • A confirmation may appear when switching to PC Site Browser.
Using previously entered URLs	Start Here <i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>See below</i>
	Yahoo! Keitai <i>Enter URL</i> ➔ <i>Options</i> ➔ <i>URL Entry Log</i> ➔ <i>Select URL</i> ➔ <i>Done</i>
	PC Site Browser & Direct Browser <i>PC Site Browser or Direct Browser</i> ➔ <i>Enter URL</i> ➔ <i>Options</i> ➔ <i>URL Entry Log</i> ➔ <i>Select URL</i> ➔ <i>Done</i>

■ History

Follow these steps to switch History lists:

Options ➔ *Change List* ➔ *Select browser*

Deleting History records	Start Here <i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>History</i> ➔ <i>See below</i>
	One Record <i>Highlight record</i> ➔ <i>Options</i> ➔ <i>Delete</i> ➔ <i>Yes</i>
	All Records <i>Options</i> ➔ <i>Delete All</i> ➔ <i>Enter Handset Code</i> ➔ <i>OK</i> ➔ <i>Yes</i>

Opening History properties	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>History</i> ➔ <i>Highlight record</i> ➔ <i>Options</i> ➔ <i>Details</i>
Sorting History records	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>History</i> ➔ <i>Options</i> ➔ <i>Sort</i> ➔ <i>By Domain</i> or <i>By Date</i>
Sending History records via mail	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>History</i> ➔ <i>Highlight record</i> ➔ <i>Options</i> ➔ <i>Send URL</i> ➔ <i>S! Mail or SMS</i> ➔ <i>Complete message</i> ➔ <i>Send</i> <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.

■ Memory Operation

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings**.

PC Site Browser (or *Direct Browser*) ➔ *PC Site Browser Settings* (or *Set Direct Browser*)

Clearing cache (temporarily saved information)	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Browser Settings</i> ➔ <i>Memory Operation</i> ➔ <i>Delete Cache</i> ➔ <i>Yes</i>
Clearing cookies	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Browser Settings</i> ➔ <i>Memory Operation</i> ➔ <i>Delete Cookies</i> ➔ <i>Yes</i>
Clearing authentication information	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Browser Settings</i> ➔ <i>Memory Operation</i> ➔ <i>Delete Auth Info</i> ➔ <i>Yes</i>








Page Operations

■ All Browsers

Using linked info	Dialing Numbers On a page, select number → <i>Call</i> or <i>Video Call</i>
	Sending Messages On a page, select number or mail address → <i>Create Message</i> → <i>S! Mail</i> or <i>SMS</i> → Complete message → <i>Send</i>
Copying text	On a page, <i>Options</i> → <i>Copy Text</i> → Highlight first character → <i>Start</i> → Highlight text range → <i>End</i>
Looking up copied words in dictionaries	On a page, <i>Options</i> → <i>Convenient Functions</i> → <i>Copy & Search Dict.</i> → Highlight first character → <i>Start</i> → Highlight text range → <i>End</i> → Select dictionary → <i>Search</i> → Select word, etc.
Using Web Search	On a page, <i>Options</i> → <i>Convenient Functions</i> → <i>Web Search</i> → Enter search text → <i>Done</i>
Searching current page	On a page, <i>Options</i> → <i>Convenient Functions</i> → <i>Search</i> → Enter search text → <i>Done</i> • Tap <i>Next</i> to jump to next search result, if any.
Jumping to page top/bottom	On a page, <i>Options</i> → <i>Convenient Functions</i> → <i>Jump In Page</i> → <i>Page Top</i> or <i>Page Bottom</i>
Opening page properties	On a page, <i>Options</i> → <i>Convenient Functions</i> → <i>Details</i> → Select item

Sending URLs via mail	On a page, <i>Options</i> → <i>Convenient Functions</i> → <i>Send URL</i> → <i>S! Mail</i> or <i>SMS</i> → Complete message → <i>Send</i> • S! Mail Composition window opens automatically depending on character count.
Handling Flash® files	<small>[Start Here]</small> On a page, <i>Options</i> → <i>Convenient Functions</i> → <i>Flash@Menu</i> → See below Pausing/Playing <i>Pause, Resume</i> or <i>Replay</i> Selecting Image Quality <i>Quality</i> → Select quality
Saving files to Data Folder	<small>[Start Here]</small> On a page, <i>Options</i> → <i>Save Items</i> → See below Files on Page Select file → <i>Save</i> → Enter name → <i>Done</i> → <i>Save here</i> • Some files are saved automatically. • End memory-consuming operations (TV recording, etc.) beforehand. • Confirm signal is strong, battery is adequately charged and that there is enough free memory beforehand. Background Images <i>Save Background Image</i> → <i>Save</i> → Enter name → <i>Done</i> → <i>Save here</i>
Updating page content	On a page, <i>Options</i> → <i>Reload</i> • To update content in Saved Pages, open a page and follow the steps above.
Changing encoding to read garbled text	On a page, <i>Options</i> → <i>Settings</i> → <i>Char-code</i> → Select option



Opening function shortcuts	On a page, <i>Options</i> ➔ <i>Help</i>
■ Yahoo! Keitai	
Setting Font Size	On a page, <i>Options</i> ➔ <i>Settings</i> ➔ <i>Font Size</i> ➔ Select size
■ PC Site Browser & Direct Browser	
Switching view	On a page, <i>Options</i> ➔ <i>PC Screen</i> or <i>Small Screen</i> <ul style="list-style-type: none"> In Small Screen view, PC sites are redesigned to fit Display.
Zooming on pages	On a page, <i>Options</i> ➔ <i>Convenient Functions</i> ➔ <i>Zoom Factor</i> ➔ Select scale <ul style="list-style-type: none"> Alternatively, Long Touch <i>Zoom In</i> or <i>Zoom Out</i> Softkey.
Jumping to specific locations	On a page, <i>Options</i> ➔ <i>Convenient Functions</i> ➔ <i>Quick Movement</i> ➔ Select target location
Enlarging specific areas	On a page, point to area ➔  (Long) <ul style="list-style-type: none"> Use  to move pointer in enlarged view; highlight item and press  to execute it. To close enlarged view, press a key other than .
Hiding Softkeys	On a page, <i>Options</i> ➔ <i>Convenient Functions</i> ➔ <i>Softkey Area</i> ➔ <i>Off</i> <ul style="list-style-type: none"> To show Softkeys temporarily, press . (Alternatively, in landscape orientation, tap title bar.)

Internet Page Settings

■ All Browsers

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings**.

PC Site Browser (or Direct Browser) ➔ PC Site Browser Settings (or Set Direct Browser)

Disabling automatic image display/sound playback	<small>(Start Here)</small> <i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Browser Settings</i> ➔ <i>Downloads</i> ➔ See below
	<i>Image Display</i> <i>Images</i> ➔ <i>Do not Show</i>
	<i>Sound Playback</i> <i>Sounds</i> ➔ <i>Do not Play</i>
Setting Font Size	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Browser Settings</i> ➔ <i>Font Size</i> ➔ Select size
Using pointer navigation	<small>(Start Here)</small> <i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Browser Settings</i> ➔ <i>Cursor Settings</i> ➔ See below
	<i>Activating</i> <i>Cursor Mode Settings</i> ➔ <i>Normal Mode</i>
	<i>Setting Pointer Speed</i> <i>Speed Settings</i> ➔ Select speed
Using Memory Card as primary download storage	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Browser Settings</i> ➔ <i>Download to</i> ➔ <i>Prefer Card</i> <ul style="list-style-type: none"> Some files may be saved to handset regardless of this setting.

■ Yahoo! Keitai

Setting scroll unit	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Browser Settings</i> ➔ <i>Scroll Unit</i> ➔ Select unit
---------------------	--



■ PC Site Browser & Direct Browser

For Direct Browser, perform the following sequence instead of *PC Site Browser* ➔ *PC Site Browser Settings*.

Direct Browser ➔ *Set Direct Browser*

Showing navigation map for continuous scroll	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>PC Site Browser</i> ➔ <i>PC Site Browser Settings</i> ➔ <i>Scroll Settings</i> ➔ <i>Page Navigation</i> ➔ <i>On</i>
Setting scroll unit	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>PC Site Browser</i> ➔ <i>PC Site Browser Settings</i> ➔ <i>Scroll Settings</i> ➔ <i>Scroll Unit</i> ➔ <i>Select unit</i>

■ PC Site Browser

Hiding PC Site Browser messages	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>PC Site Browser</i> ➔ <i>PC Site Browser Settings</i> ➔ <i>Warning Message</i> ➔ <i>Off</i>
---------------------------------	--

■ Direct Browser

Restricting Direct Browser use	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Direct Browser</i> ➔ <i>Set Direct Browser</i> ➔ <i>Direct Browser Lock</i> ➔ <i>On</i> ➔ <i>Enter Administrator Code</i> ➔ <i>OK</i>
--------------------------------	--

Setting up proxy	<small>[Start Here]</small> <i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Direct Browser</i> ➔ <i>Set Direct Browser</i> ➔ <i>Proxy Setting</i> ➔ <i>Enter Administrator Code</i> ➔ <i>OK</i> ➔ <i>Use</i> ➔ <i>See below</i>
	Entering Address <i>Proxy Address</i> ➔ <i>Enter address</i> ➔ <i>Done</i> ➔ <i>Save</i>
	Entering Port Number <i>Port Number</i> ➔ <i>Enter number</i> ➔ <i>Done</i> ➔ <i>Save</i>
Editing proxy settings	Specifying Addresses to Bypass Proxy <i>Apply Address</i> ➔ <i>OK</i> ➔ <i>Enter address</i> ➔ <i>Done</i> ➔ <i>Save</i>
	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Direct Browser</i> ➔ <i>Set Direct Browser</i> ➔ <i>Proxy Setting</i> ➔ <i>Enter Administrator Code</i> ➔ <i>OK</i> ➔ <i>Highlight Use</i> ➔ <i>Edit</i> ➔ <i>Select item</i> ➔ <i>Edit</i> ➔ <i>Save</i>
Changing home page	<i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Direct Browser</i> ➔ <i>Set Direct Browser</i> ➔ <i>Homepage Settings</i> ➔ <i>Enter URL</i> ➔ <i>Done</i>
Setting search engine URLs	<small>[Start Here]</small> <i>MENU</i> ➔ <i>Yahoo!</i> ➔ <i>Direct Browser</i> ➔ <i>Set Direct Browser</i> ➔ <i>Search Page</i> ➔ <i>See below</i>
	Adding <Empty> ➔ <i>OK</i> ➔ <i>Enter URL</i> ➔ <i>Done</i>
	Changing <i>Select URL</i>
	Editing <i>Highlight URL</i> ➔ <i>Edit</i> ➔ <i>OK</i> ➔ <i>Edit</i> ➔ <i>Done</i>



Streaming & Progressive Download

■ General

Customizing media playback settings	[Start Here] During playback, Options ➤ Settings ➤ See below
	Playback Size <i>Display Size ➤ Select size</i> • Playback size may not change depending on file.
	Backlight Status <i>Backlight ➤ Select option</i> • Selecting Normal Settings applies Display Backlight settings.
	Sound Effects <i>Sound Effects ➤ Select effect</i>

■ Streaming

Streaming from Media Player	[Start Here] MENU ➤ Entertainment ➤ Media Player ➤ Streaming ➤ See below
	Resuming from Stopped Point <i>Last Played</i>
	Using Bookmarks <i>Bookmarks ➤ Select title</i>
Switching networks during media playback	Using History <i>History ➤ Select record</i>
	During playback, <i>Options ➤ Switch Wi-Fi/3G ➤ Select network</i>

Bookmarks

Deleting titles	[Start Here] MENU ➤ Yahoo! ➤ Bookmarks ➤ See below
	One Title <i>Highlight title ➤ Options ➤ Delete ➤ Yes</i>
	All Titles <i>Options ➤ Delete All ➤ Enter Handset Code ➤ OK ➤ Yes</i>
Editing titles	<i>MENU ➤ Yahoo! ➤ Bookmarks ➤ Highlight title ➤ Options ➤ Edit ➤ Title: ➤ Enter title ➤ Done ➤ Save</i>
Editing bookmarked URLs	<i>MENU ➤ Yahoo! ➤ Bookmarks ➤ Highlight title ➤ Options ➤ Edit ➤ URL: ➤ Edit ➤ Done ➤ Save</i>
Sending bookmarked URLs via mail	<i>MENU ➤ Yahoo! ➤ Bookmarks ➤ Highlight title ➤ Options ➤ Send ➤ As Message ➤ S! Mail or SMS ➤ Complete message ➤ Send</i> • S! Mail Composition window opens automatically depending on character count.
Changing title order	<i>MENU ➤ Yahoo! ➤ Bookmarks ➤ Highlight title ➤ Options ➤ Change Order ➤ Select target location</i>
Opening title properties	<i>MENU ➤ Yahoo! ➤ Bookmarks ➤ Highlight title ➤ Options ➤ Details</i>



Sorting titles into folders

(Start Here) MENU ➔ Yahoo! ➔ Bookmarks ➔ See below
Creating Folders Options ➔ Create Folder ➔ Enter name ➔ Done
Moving to Folders Highlight title ➔ Options ➔ Move ➔ Select folder ➔ Move
Moving from Folders Select folder ➔ Highlight title ➔ Options ➔ Move ➔ Move
Renaming Folders Highlight folder ➔ Options ➔ Rename ➔ Enter name ➔ Done
Deleting All Titles within a Folder Select folder ➔ Highlight title ➔ Options ➔ Delete All ➔ Enter Handset Code ➔ OK ➔ Yes
Deleting Folders Highlight folder ➔ Options ➔ Delete ➔ Enter Handset Code ➔ OK ➔ Yes

Saved Pages

(Start Here) MENU ➔ Yahoo! ➔ Saved Pages ➔ See below
Deleting pages One Page Highlight page ➔ Options ➔ Delete ➔ Yes All Pages Options ➔ Delete All ➔ Enter Handset Code ➔ OK ➔ Yes
Editing page titles MENU ➔ Yahoo! ➔ Saved Pages ➔ Highlight page ➔ Options ➔ Rename ➔ Enter title ➔ Done
Changing page order MENU ➔ Yahoo! ➔ Saved Pages ➔ Highlight page ➔ Options ➔ Change Order ➔ Select target location
Opening page properties MENU ➔ Yahoo! ➔ Saved Pages ➔ Highlight page ➔ Options ➔ Details
Switching page list view MENU ➔ Yahoo! ➔ Saved Pages ➔ Highlight page ➔ Options ➔ List View or Preview View



RSS Feeds

For Direct Browser, tap **Direct Browser** instead of **PC Site Browser**.

Disabling feed updates	MENU → Yahoo! → PC Site Browser → RSS Feed → Highlight feed → Options → Manage RSS Feed → Restrict Update
Sorting feeds into folders	Start Here MENU → Yahoo! → PC Site Browser → RSS Feed → See below
	Creating Folders Options → Manage RSS Feed → Create Folder → Enter name → Done
	Moving to Folders Highlight feed → Options → Manage RSS Feed → Move → Select folder → Move
	Renaming Folders Highlight folder → Options → Manage RSS Feed → Rename → Enter name → Done
	Deleting Folders Highlight folder → Options → Delete → Enter Handset Code → OK → Yes

Deleting feeds	Start Here MENU → Yahoo! → PC Site Browser → RSS Feed → See below
	One Entry Highlight feed → Options → Delete → Yes
Sorting feeds	All Entries Options → Manage RSS Feed → Delete All → Enter Handset Code → OK → Yes • Alternatively, perform Delete RSS Feed List in Memory Operation (PC Site Browser Settings or Set Direct Browser) to delete all feeds.
	MENU → Yahoo! → PC Site Browser → RSS Feed → Options → Manage RSS Feed → Sort → Select option
Opening feed properties	MENU → Yahoo! → PC Site Browser → RSS Feed → Highlight feed → Options → Manage RSS Feed → Details
Exchanging feeds with other devices	Start Here MENU → Yahoo! → PC Site Browser → RSS Feed → Options → Manage RSS Feed → See below
	Exporting All Feeds Export All → Select storage media
	Importing (Adding Feeds) Import → Select file → As New Items → Yes or No → Yes or No
	Importing (Overwriting Existing Feeds) Import → Select file → Delete All → Enter Handset Code → OK → Yes → Yes or No → Yes or No



Sending feeds via mail

MENU ➤ **Yahoo!** ➤ **PC Site Browser** ➤ **RSS Feed**
 ➤ **Highlight feed** ➤ **Options** ➤ **Manage RSS Feed**
 ➤ **As Message** ➤ **Complete message** ➤ **Send**

Security Settings

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings**.

PC Site Browser (or Direct Browser) ➤ **PC Site Browser Settings (or Set Direct Browser)**

Disabling manufacture number auto send for authentication	MENU ➤ Yahoo! ➤ Browser Settings ➤ Security Settings ➤ Manufacture Number ➤ Off • Not available for Direct Browser.
Disabling referer information delivery to the Server	MENU ➤ Yahoo! ➤ Browser Settings ➤ Security Settings ➤ Send Referer ➤ Not Send
Enabling/disabling cookies	MENU ➤ Yahoo! ➤ Browser Settings ➤ Security Settings ➤ Cookies ➤ Select option
Selecting script execution option	MENU ➤ Yahoo! ➤ Browser Settings ➤ Security Settings ➤ Script Settings ➤ Select option
Hiding confirmations before entering/exiting secure pages	MENU ➤ Yahoo! ➤ Browser Settings ➤ Security Settings ➤ Secure Prompt ➤ Do not Show
Opening electronic certificates saved on handset	MENU ➤ Yahoo! ➤ Browser Settings ➤ Security Settings ➤ Root Certificates ➤ Select certificate

Setting validity of entered user ID/password

MENU ➤ **Yahoo!** ➤ **Browser Settings** ➤ **Security Settings** ➤ **Keep Auth Info** ➤ **Select option**

- **Per Browsing** retains entered user ID/password during browsing sessions. **On** retains such authentication information even after powering handset off.
- Authentication information may not be retained depending on the site.

Enabling/disabling Ajax (for asynchronous communication)

MENU ➤ **Yahoo!** ➤ **Browser Settings** ➤ **Security Settings** ➤ **Restrict Ajax** ➤ **Select option**

Resetting

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings**.

PC Site Browser (or Direct Browser) ➤ **PC Site Browser Settings (or Set Direct Browser)**

Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.)	MENU ➤ Yahoo! ➤ Browser Settings ➤ Initialized Browser ➤ Enter Handset Code ➤ OK ➤ Yes • For Direct Browser, enter Administrator Code instead of Handset Code.
Restoring default handset settings	MENU ➤ Yahoo! ➤ Browser Settings ➤ Reset Settings ➤ Enter Handset Code ➤ OK ➤ Yes • For Direct Browser, enter Administrator Code instead of Handset Code.



Connecting & Browsing

? What is the bar at Display bottom?

- This is a data progress bar; the number beside it indicates transmitted (green) or received (red) data.

Page Operations

? Internet page does not open completely

- Portions of page content may not appear in tabbed browsing; close other tabs.

? Text overlaps

- The site may be designed for browsing on PCs; try *Tiny* font size.
- Text may overlap when Zoom Factor is used; adjust scale.

? Cannot access other functions while browsing the Internet

- Multi Job may be active. When switching between browsers, additional function activation is disabled; close either browser and retry.

