

Digital TV	7-2
Basics	7-2
Area Setup.....	7-3
Watching TV	7-4
Obtaining Program Information.....	7-7
Recording/Playing.....	7-8
Recording Programs.....	7-8
Playing Recorded Programs.....	7-9

TV Timer	7-11
TV Timer & TV Recording Timer.....	7-11
Time Shift	7-12
Time Shift Recording & Playback ...	7-12
Additional Functions	7-13
Troubleshooting.....	7-19

7

Digital TV



Basics

941SH supports One Seg terrestrial digital television broadcast services developed for mobile devices in Japan.

Watch Live Television

Set up a channel list for your service area to access available programming. Capture screenshots while watching TV.

Multi Job

Watch TV in one half of Display using the other to access messaging functions, browse the Internet or open Phone Book, etc.

TV Listing (EPG) & Program Info

Find program channels and times, or open program details via current channel's schedule.

View Data Broadcasts

In addition to audio and visuals, enjoy text, program-related information and interactive services.

Record Shows/Time Shift

Record current program for later viewing; if interrupted by incoming calls while watching TV, record it temporarily for delayed playback.

Reserve TV Programs

Record a show or activate TV at a specified time; enter dates & times manually or reference TV Listing electronic program guide.

Important Digital TV Usage Notes

- 941SH TV is exclusively for use in Japan.
- Do not use TV while driving or cycling. Accidents may result. Phone use while driving is prohibited by the Road Traffic Law (revised November 1, 2004). When walking, always pay attention to your surroundings, especially near road/rail crossings, etc.
- When using TV while charging battery, separate AC Charger and Antenna to avoid interference.
- Call transmissions, incoming messages or mobile phone use in the immediate vicinity may affect audiovisual quality.
- Programs may not be viewable or record properly when:
 - Too far from or too close to broadcasting stations
 - In mountainous areas or near tall buildings
 - Aboard trains or in moving vehicles
 - Near high-voltage lines, neon lights or wireless base stations
 - Near railroad tracks or highways
 - Anywhere a jamming signal is broadcast/reception is unstable




Area Setup


When activating TV for the first time, follow these steps to set up channels by area:

1 MENU ➔ TV



- Setup confirmation appears.
- Alternatively, press .

2 Yes

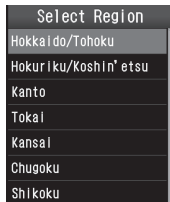

3 Select region

4 Select prefecture ➔ Select locality




- After setup, channel list appears.

5 OK



- To watch TV, tap **Digital TV**.

Watching TV without Completing Area Setup

In , **No Preference**

Adding Reception Areas

MENU ➔ TV ➔ Digital TV ➔ Options

➔ Set Channels ➔ Change Area ➔


Highlight Area ➔ Options ➔ Set

Area Info ➔ From .

Digital TV Antenna

Pull Antenna by top bead until it clicks.

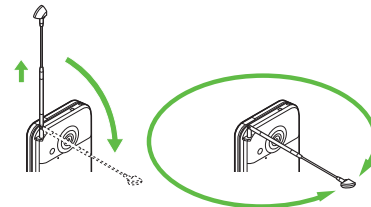

- After extending Antenna fully, fold then rotate it to find best reception. (Unless transmission source is near, extend it for better reception.)
- After use, gently retract Antenna aligning top bead. Do not carry handset with Antenna extended; damage may result.



7

Digital TV

Advanced

-  ● Switching reception Areas ● Renaming Areas ● Changing/disabling  function ● Editing channels ● Deleting all channels in Area ● Adding new channels to Area ● Updating all channels in the Area (P.7-13)



Watching TV

1 MENU ➔ TV ➔ Digital TV



TV Window

- Alternatively, press .

2 Tap or to select a channel

- Long Touch to find channel with stable signal automatically.
- Alternatively, drag finger left or right across TV image then tap a channel.

3 END ➔ Yes ➔ TV ends

Watching TV in Widescreen

- When Slider is closed, TV orientation changes with handset orientation.
- When Slider is open, press to toggle Display orientation. (In Motion Control menu, set Display Change to **Manual at Open**(press) or **Manual**(press) first.)

Incoming Calls

- Tap **Answer** to answer calls.

When Answering Voice Calls with Memory Card Inserted (Time Shift)

- Current program is temporarily recorded; start playback after the call.


Incoming Messages

- Double beep sounds and New Message notice appears. Long Press or Long Touch **Options** with Slider open to access messages.

Panel Description



Area Name Station Name Channel Key

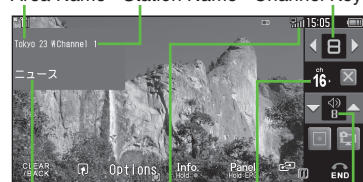

Program Name Signal Strength Channel Volume


The more bars the better the signal strength.

Advanced


- Opening Help
- Enlarging image portion in landscape (And more on P.7-13)
- Changing subtitle settings
- Changing sound settings (P.7-16)



TV Window Operations

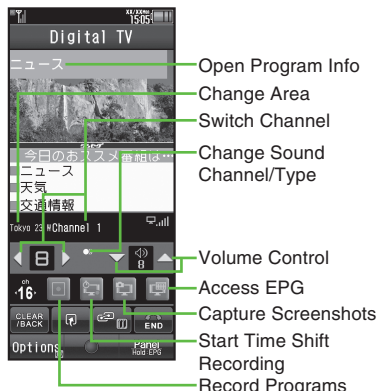

Change Area Switch Channel Hide Panel

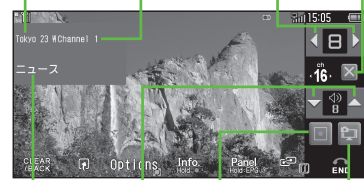

Open Program Info Volume Control Record Programs Capture Screenshots

Advanced

- Saving current channel
- Selecting an audiovisual mode
- Adjusting current AV Mode parameters
- Setting handset responses to incoming transmissions
- Switching audio output to wireless device (And more on P.7-13 - 7-14)
- Changing view
- Saving links to Data Broadcasts or related information (And more on P.7-15)

Major TV Window Operations

Touch Panel

Switch Channel	Drag finger left or right across TV image ➡ Tap channel
Volume Control	Drag finger up or down across TV image
Toggle View	Tap TV image
Change Display Size	Pinch or spread fingers on TV image
Change Data Broadcast View	Pinch or spread fingers on Data Broadcast area*
Change Area	Tap Area name ➡ Tap Area

*Available in portrait orientation.

Handset Keys

Toggle Panel On/Off	
Change Area	
Volume Control	

Data Broadcast (Japanese)

In portrait orientation, Data Broadcast text appears below TV image. Tap an item to access program-related information and interactive services.



Data Broadcast Window

Data Broadcast Fees

- Data Broadcast information viewing is free, however, using data links/related services incurs Internet connection fees.
- A confirmation appears the first time a fee-based Network connection is established from a channel; if accepted, further Network connections are established without confirmation until the channel is changed.



Still Image Capture

Capture screenshots while watching TV.

- May be unavailable if TV was activated by TV Timer, etc.
- Saved images cannot be forwarded, edited, set as Wallpaper or attached to messages.

1 In TV window,

2 **Assign**

- Image is saved.

Opening Saved Images

- While Watching TV

[TV Window] **Options** ➤ *Useful Func.* ➤ *TV-Image Folder* ➤ Select image

- From Standby

MENU ➤ **TV** ➤ *TV-Image Folder* ➤ Select image



Obtaining Program Information

Find program channels and times, or open program details via current channel's schedule.

TV Listing	Start EPG S! Application to find program channels and times for specified area
Program Info	Open program details via current channel's schedule; set Reservations to record shows or activate TV

TV Listing (Japanese)

1 In TV window, Long Touch **Hold:EPG**

- EPG application starts; refer to the application's help menu for operational instructions.
- When using EPG application for the first time, a confirmation appears. Follow onscreen instructions.

Program Info

1 In TV window, **Options** ➔ **OperateProgram**

2 **Program Info.**



Program Info Window

3 **Select program**

- To return to TV window, tap **CLEAR/BACK** twice.

Setting Recording Timer via Program Info [Program Info Window] Highlight program ➔ **Record**

- Timer entries set via Program Info are updated with program changes automatically. Program cancellations cancel corresponding Timer entries. (Poor signal conditions may inhibit updates or cancellations.)

Setting TV Timer via Program Info [Program Info Window] Highlight program ➔ **Options** ➔ **Watching**



Recording Programs

Clip is saved to handset (or Memory Card, if inserted).

Precautions

- Saved files cannot be forwarded or attached to messages.
- 941SH encryption technology prevents unauthorized copying or playback of Memory Card files through data encryption and authentication. Files copied from Memory Card to other cards on PC are unplayable.
- Copyright laws limit duplicated material to private use only, and prohibit unauthorized reproduction/other use.
- SoftBank Mobile is not liable for any damages resulting from accidental loss or alteration of recorded content.


Dubbing 10

- 941SH supports Dubbing 10 copy protection scheme that allows recordings to be copied from handset to Memory Card. Open file properties to check the remaining number of copies allowed to be made.

1 In TV window, → Recording starts



Recording Window

- Alternatively, Long Press .
- Changing volume, etc. does not affect recordings.
- When Small Light flashes yellow, reception is poor; change location to improve it: Small Light illuminates green for moderate, or blue for strong reception.

2 → Recording ends

Chase Play (Playing while Recording)

- Watch a program from the beginning while recording it on Memory Card.
[Recording Window] Options → **Rec./TimeShift** → **Time Shift Play**
■ Long Touch **Hold**:■ to stop playback.

Memory/Battery Runs Low or Video Call/S! Circle Talk Request is Accepted

- Recording stops. (Recorded clip is saved.)

Saving Files via the Internet while Recording

- While recording programs to handset, confirm there is enough free memory before saving files.

Advanced

-  ● Recording programs without Data Broadcasts ● Saving Data Broadcasts to Memory Card ● Recording programs to handset (P.7-16)



Playing Recorded Programs

1 MENU → TV → TV Player



Video List

- [Icon] indicates the file is unplayable.

2 Select file



- Playback starts. (The last played file plays from where it stopped.)

3 Long Touch Hold: [Icon] → Playback stops

Switching Video List

After 1, Options → Change to Phone or Change to MemoryCard

Playback Window Description



- Program Name
- Data Broadcast
- Area Name
- Status
- Station Name
- Change Sound Channel/Type
- Volume Control
- Volume
- Top: Elapsed Time
Bottom: Recording Time
- Pause/
Stop (Long Press)
- Rewind/Fast Forward

Advanced


- Splitting files by specifying a time point
- Playing files repeatedly
- Playing split files
- Playing video files transferred from Blu-ray Disc recorders
- Checking memory status
- Renaming files
- Deleting files
- Copying files to Memory Card
- Opening file properties
- Playing files with Markers (And more on P.7-16 - 7-17)



Major Playback Operations

Adjust volume or change display size following the same operations used while watching TV.

Touch Panel









Rewind	Drag finger left across TV image ¹
Fast Forward	Drag finger right across TV image ¹
Pause	Tap Pause or  ²
Skip to Any Point	Drag playback slider
Toggle View	Tap TV image
Change Display Size	Pinch or spread fingers on TV image
Change Data Broadcast View	Pinch or spread fingers on Data Broadcast area ³



  ¹Release to resume normal playback.

²In pause, drag finger left/right across TV image to reverse/advance frame.

³Available in portrait orientation.

Handset Keys

Rewind/Fast Forward	 ¹ ,  ¹
Skip (Forward/Backward)	 
Pause ³	 ( in landscape)
Marker	 ⁴
Toggle Panel On/Off	

¹Each press increases speed. To resume normal playback, press  ( in landscape).

²Long Press to replay. (Available when no Marker is saved.)

³In pause, use  to reverse/advance frame.

⁴Not available during Time Shift playback. Long Press to split file.



TV Timer & TV Recording Timer


1 **MENU** ➔ **TV**

2 **Reservation List** ➔ **Options**

3 **New Entry**



4 **Manual** ➔ **Watching or Recording**

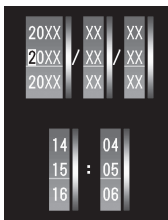

5 Enter start date/time ➔ **OK**
➔ Enter end date/time ➔ **OK**

6 **Channel:** ➔ Select channel
➔ **Save**

Setting Timer via EPG

In 4, **From TV Listing**

- Refer to the application's help menu for operational instructions.

Timer Recording Precautions

Confirm target channel reception.

- End the current operations.
- Confirm target channel reception.
- Confirm battery is adequately charged and there is enough free memory.

At Timer Time (TV Alarm Time)

TV and Alarm activate. Alarm ends after the set duration.



Recording starts slightly before the Timer start time and ends a few seconds after the Timer end time.

While Using Another Function

- TV activates via Multi Job and target program/recording starts. However, if Multi Job cannot activate in the current state, TV may remain off, or the current function may end automatically (unsaved images, messages, Phone Book entries, etc. may be deleted). End all active functions/applications before Timer time.

Advanced

- Opening/editing/deleting Timer details
- Opening/deleting Timer log
- Customizing TV Alarm settings
- Prioritizing current operation over TV Timer/TV Recording Timer (P.7-18)



Time Shift Recording & Playback

Record current program temporarily for delayed playback.

- Recorded content is deleted after playback.
- First, insert Memory Card.


1 While watching TV, *Options* ➔ *Rec./TimeShift* ➔ *Time Shift Rec. Start*



Recording in progress

- Alternatively, Long Press .

2 While recording, ➔ **Playback starts**

- Alternatively, Long Press .
- Playback starts from where recording was started.
- Recording and playback stop when Time Shift playback has caught up to the real-time program.

Major Playback Operations

Touch Panel

Fast Forward

Drag finger right across TV image*

*Release to resume normal Time Shift playback.

Handset Keys

Fast Forward



Skip Forward




Skip Backward



*Press  to resume normal Time Shift playback.


Time Shift Recording Automatic Activation

When a Voice Call is answered while watching TV with Memory Card inserted, Time Shift recording starts automatically; tap  after the call for playback.

Advanced

-  ● Disabling Time Shift recording automatic activation (P.7-16)



Area & Channel	
Switching reception Areas	While watching TV, <i>Options</i> ➤ <i>Set Channels</i> ➤ <i>Change Area</i> ➤ <i>Select Area</i>
Renaming Areas	While watching TV, <i>Options</i> ➤ <i>Set Channels</i> ➤ <i>Change Area</i> ➤ <i>Highlight Area</i> ➤ <i>Options</i> ➤ <i>Change Area Name</i> ➤ <i>Enter name</i> ➤ <i>Done</i>
Changing/disabling  function	<small>[Start Here]</small> While watching TV, <i>Options</i> ➤ <i>Set Channels</i> ➤ <i>Channel Key Setting</i> ➤ See below
	<i>Toggle All Receivable Channels By Manual</i> <i>Disabling Disable</i>
Editing channels	<small>[Start Here]</small> While watching TV, <i>Options</i> ➤ <i>Set Channels</i> ➤ <i>CH Switch</i> ➤ <i>Highlight channel</i> ➤ <i>Options</i> ➤ See below
	<i>Switching Channel Positions Flip</i> ➤ <i>Select target key</i>
	<i>Deleting Channels Delete</i> ➤ <i>Yes</i>
Deleting all channels in Area	While watching TV, <i>Options</i> ➤ <i>Set Channels</i> ➤ <i>Change Area</i> ➤ <i>Highlight Area</i> ➤ <i>Options</i> ➤ <i>Reset Settings</i> ➤ <i>Yes</i>
Adding new channels to Area	While watching TV, <i>Options</i> ➤ <i>Set Channels</i> ➤ <i>Change Area</i> ➤ <i>Highlight Area</i> ➤ <i>Options</i> ➤ <i>Channel Update</i> ➤ <i>Update Further</i>



Updating all channels in the Area	While watching TV, <i>Options</i> ➤ <i>Set Channels</i> ➤ <i>Change Area</i> ➤ <i>Highlight Area</i> ➤ <i>Options</i> ➤ <i>Channel Update</i> ➤ <i>Update All</i> ➤ <i>Yes</i>
-----------------------------------	--

Watching

Opening Help	While watching TV, <i>Options</i> ➤ <i>Help</i> • Also available while recording or playing programs.
Searching for current program on the Internet	While watching TV, <i>Options</i> ➤ <i>OperateProgram</i> ➤ <i>Program Info. Search</i> ➤ <i>Search</i> • Follow onscreen instructions.
Enlarging display size for portrait orientation	While watching TV, <i>Options</i> ➤ <i>AV Settings</i> ➤ <i>Screen Size</i> ➤ <i>Enlarge</i>
Viewing widescreen images in full size	While watching TV, <i>Options</i> ➤ <i>AV Settings</i> ➤ <i>Screen</i> ➤ <i>Full Screen</i>
Enlarging image portion in landscape	With TV in landscape, Long Touch portion • Drag enlarged portion to enlarge other areas.
Canceling image smoothing	While watching TV, <i>Options</i> ➤ <i>AV Settings</i> ➤ <i>Smooth Mode</i> ➤ <i>Off</i>
Saving current channel	While watching TV, <i>Options</i> ➤ <i>Set Channels</i> ➤ <i>Save Channel</i> ➤ <i>Select key</i> • To overwrite a saved channel, tap <i>Yes</i> .
Selecting an audiovisual mode	While watching TV, <i>Options</i> ➤ <i>AV Settings</i> ➤ <i>AV Mode</i> ➤ <i>Select mode</i> • TV reception time may shorten depending on the mode.



Adjusting current AV Mode parameters	<p>[Start Here] While watching TV, <i>Options</i> ➤ <i>AV Settings</i> ➤ See below</p> <ul style="list-style-type: none"> Change AV Mode (select mode other than <i>Link to Genre</i>) first.
	<p>Brightness</p> <p><i>Image</i> ➤ <i>Brightness</i> ➤ Adjust level ➤ <i>OK</i></p>
	<p>Disabling/Enabling Brightness Adjustment via Light Sensor</p> <p><i>Image</i> ➤ <i>Brightness</i> ➤ Check (<input type="checkbox"/>/ <input checked="" type="checkbox"/>) ➤ <i>OK</i></p>
	<p>Adjusting Brightness Automatically by Scene</p> <p><i>Image</i> ➤ <i>Control by Scene</i> ➤ <i>On(Light)</i> or <i>On</i></p>
	<p>Other Image-Related Parameters</p> <p><i>Image</i> ➤ Select item ➤ Adjust level ➤ <i>OK</i></p> <ul style="list-style-type: none"> Adjust <i>Contrast</i>, <i>Blackness</i> (black level), <i>Color</i> (color density), <i>Tint</i> (skin color tone) and <i>Sharpness</i>.
	<p>Restoring Default Image Settings</p> <p><i>Image</i> ➤ <i>Reset</i> ➤ <i>Yes</i></p>
Hiding panel	<p>Selecting Sound Option</p> <p><i>Tone</i> ➤ Select option</p>
	<p>While watching TV, <i>Options</i> ➤ <i>Advanced</i> ➤ <i>Panel On/Off</i> ➤ <i>Off</i></p>
Changing panel pattern	<p>While watching TV, <i>Options</i> ➤ <i>Advanced</i> ➤ <i>Panel Type</i> ➤ Select pattern</p>
Customizing viewing options for landscape orientation	<p>[Start Here] <i>MENU</i> ➤ <i>TV</i> ➤ <i>Settings</i> ➤ <i>Set Landscape</i> ➤ See below</p>
	<p>Showing Indicators Always</p> <p><i>Display Icon</i> ➤ <i>On</i></p>
	<p>Placing Panel to the Left</p> <p><i>Display Panel</i> ➤ <i>Display Left</i></p>

Switching One Seg service	<p>While watching TV, <i>Options</i> ➤ <i>Set Channels</i> ➤ <i>Select Serv. Station</i> ➤ Select service</p> <ul style="list-style-type: none"> Available for programs with multiple services.
Listening to audio from Speaker	<p>While watching TV, <i>Options</i> ➤ <i>Advanced</i> ➤ <i>Sound Output</i> ➤ <i>Loudspeaker</i></p>
Using wireless Headphones	<p>While watching TV,  (Long)</p> <ul style="list-style-type: none"> Pair SCMS-T DRM scheme compliant Bluetooth® headphones beforehand.
Setting TV to end automatically after a period of time	<p>While watching TV, <i>Options</i> ➤ <i>Advanced</i> ➤ <i>Auto Exit Time</i> ➤ Select time</p>
Setting handset responses to incoming transmissions	<p>[Start Here] <i>MENU</i> ➤ <i>TV</i> ➤ <i>Settings</i> ➤ <i>Calls & Alarms</i> ➤ See below</p>
	<p>Showing Alarm Notice</p> <p><i>Alarm</i> ➤ <i>Alarm Notice</i></p>
	<p>Showing Voice Calls, etc.</p> <p>Select item ➤ <i>Notice a Call</i></p>
	<p>Showing New Message Window</p> <p><i>Incoming Message</i> ➤ <i>Calls & Alarms</i></p>
Switching audio output to wireless device	<p><i>MENU</i> ➤ <i>TV</i> ➤ <i>Settings</i> ➤  <i>Sound Output</i> ➤ <i>Bluetooth Device</i></p>



Data Broadcast	
Changing view	With Data Broadcast in portrait, <i>Options</i> ➤ <i>SetBroadcastData</i> ➤ <i>Change View (Data)</i> • To return to TV window, tap <i>TV</i> .
Returning to initial window	With Data Broadcast in portrait, <i>Options</i> ➤ <i>SetBroadcastData</i> ➤ <i>Back to Top</i>
Deleting information saved from Data Broadcasts	[Start Here] While watching TV, <i>Options</i> ➤ <i>SetBroadcastData</i> ➤ <i>Delete StationData</i> ➤ See below <i>Deleting by Station</i> Highlight station ➤ <i>Options</i> ➤ <i>Delete</i> ➤ <i>Yes</i> <i>Deleting All</i> <i>Options</i> ➤ <i>Delete All</i> ➤ Enter Handset Code ➤ <i>OK</i> ➤ <i>Yes</i>
Hiding Network connection confirmation	While watching TV, <i>Options</i> ➤ <i>SetBroadcastData</i> ➤ <i>Notify Connection</i> ➤ <i>Off</i>
Sending/hiding Location Information	[Start Here] While watching TV, <i>Options</i> ➤ <i>SetBroadcastData</i> ➤ <i>Location</i> ➤ See below <i>Sending Always On</i> <i>Hiding Always Off</i>
Hiding manufacture number and other information	While watching TV, <i>Options</i> ➤ <i>SetBroadcastData</i> ➤ <i>Manufacture Number</i> ➤ <i>Off</i>

TV Link (Japanese)	
Saving links to Data Broadcasts or related information	While viewing Data Broadcast, tap link source • Link navigation varies by program. Follow onscreen instructions to save links.
Using TV links	[Start Here] <i>MENU</i> ➤ <i>TV</i> ➤ <i>TV Link</i> ➤ See below <i>Opening TV Links</i> <i>Select link</i> • Connection fees may apply. <i>Opening Properties</i> Highlight link ➤ <i>Options</i> ➤ <i>Details</i>
Deleting TV links	[Start Here] <i>MENU</i> ➤ <i>TV</i> ➤ <i>TV Link</i> ➤ See below <i>One Entry</i> Highlight link ➤ <i>Options</i> ➤ <i>Delete</i> ➤ <i>Yes</i> <i>All Entries</i> <i>Options</i> ➤ <i>Delete All</i> ➤ Enter Handset Code ➤ <i>OK</i> ➤ <i>Yes</i>



Subtitle & Sound

Changing subtitle settings	<p>[Start Here] While watching TV, <i>Options</i> ➤ <i>Subtitle/Sound</i> ➤ See below</p> <ul style="list-style-type: none"> May be unavailable depending on program content or viewing style (TV orientation, etc.).
	<p>Showing Subtitles Always <i>Display Subtitle</i> ➤ On</p>
	<p>Hiding Subtitles Always <i>Display Subtitle</i> ➤ Off</p>
	<p>Changing Subtitle Language <i>Subtitle Language</i> ➤ <i>Language 2</i></p>
	<p>Showing Subtitle Area Always <i>Auto Subtitle Off</i> ➤ Off</p>
	<p>Showing Subtitles at the Top <i>Subtitle Position</i> ➤ <i>Upper</i></p>
	<p>Increasing Subtitle Lines <i>Subtitle ScrollMode</i> ➤ On</p>
Changing sound settings	<p>[Start Here] While watching TV, <i>Options</i> ➤ <i>Subtitle/Sound</i> ➤ See below</p>
	<p>Selecting Sound Option <i>Sound Type</i> ➤ <i>Sound2</i></p> <ul style="list-style-type: none"> Available when multiple sounds are supported.
	<p>Listening to Sub Language <i>Sound Channel</i> ➤ <i>Sub</i></p>
	<p>Listening to Main & Sub Languages <i>Sound Channel</i> ➤ <i>Main + Sub</i></p>

Recording

Recording programs without Data Broadcasts	While watching TV, <i>Options</i> ➤ <i>SetBroadcastData</i> ➤ <i>Set Recording</i> ➤ <i>Image Only</i>
Saving Data Broadcasts to Memory Card	While watching TV, <i>Options</i> ➤ <i>SetBroadcastData</i> ➤ <i>Image Location</i> ➤ <i>Memory Card</i>
Disabling Time Shift recording automatic activation	<i>MENU</i> ➤ <i>TV</i> ➤ <i>Settings</i> ➤ <i>Set Call Time Shift</i> ➤ Off
Recording programs to handset	<i>MENU</i> ➤ <i>TV</i> ➤ <i>Settings</i> ➤ <i>Save Recording to</i> ➤ <i>Phone Memory</i>

Recorded Programs

■ Playback	
Splitting files by specifying a time point	During playback, <i>Options</i> ➤ <i>Split File</i> ➤ <i>Select Point</i> ➤ Drag finger left or right across TV image ➤ Tap TV image ➤ <i>Confirm</i>
Playing files repeatedly	<i>MENU</i> ➤ <i>TV</i> ➤ <i>TV Player</i> ➤ <i>Options</i> ➤ <i>Playback Pattern</i> ➤ <i>Repeat</i>
Playing split files	<i>MENU</i> ➤ <i>TV</i> ➤ <i>TV Player</i> ➤ <i>Highlight file</i> ➤ <i>Open</i> ➤ Select file



Playing video files transferred from Blu-ray Disc recorders	<p>MENU ➤ TV ➤ Recorder Contents ➤ Select file</p> <ul style="list-style-type: none"> During playback, press [8] to switch sound channels [L (Main), R (Sub) or L + R (Main + Sub)]. (Available for programs supporting sub language.) For more operations, see P.9-6 "Video Playback Window Description." In Recorder Contents file list, tap Options to rename files, change playback mode (repeat, random, etc.), check memory status, open properties or delete files.
---	--

Managing

Checking memory status	MENU ➤ TV ➤ TV Player ➤ Options ➤ Memory Remaining
Renaming files	MENU ➤ TV ➤ TV Player ➤ Highlight file ➤ Options ➤ Rename ➤ Enter name ➤ Done
Deleting files	<p>[Start Here] MENU ➤ TV ➤ TV Player ➤ See below</p> <p>Single Files Highlight file ➤ Options ➤ Delete ➤ Yes</p> <p>All Files Options ➤ Delete All ➤ Enter Handset Code ➤ OK ➤ Yes</p>
Copying files to Memory Card	<p>MENU ➤ TV ➤ TV Player ➤ Options ➤ Change to Phone ➤ Highlight file ➤ Options ➤ Copy to Card ➤ Yes</p> <ul style="list-style-type: none"> File is moved from handset to Memory Card when the number of copies made exceeds the limit.

Moving files to Memory Card	<p>MENU ➤ TV ➤ TV Player ➤ Options ➤ Change to Phone ➤ Highlight file ➤ Options ➤ Move to Card ➤ Yes</p> <ul style="list-style-type: none"> Files moved to Memory Card cannot be moved back to handset.
Opening file properties	MENU ➤ TV ➤ TV Player ➤ Highlight file ➤ Options ➤ Details

Markers

Playing files with Markers	<p>[Start Here] During playback, Options ➤ Set Marker ➤ See below</p> <p>Skipping between Markers Previous Marker or Next Marker</p> <p>Moving to Specific Markers Marker List ➤ Select number</p>
Using Marker List	<p>[Start Here] During playback, Options ➤ Set Marker ➤ Marker List ➤ See below</p> <p>Starting Playback Select number</p> <p>Deleting a Marker Highlight number ➤ Options ➤ Delete</p> <p>Deleting All Markers Options ➤ Delete All ➤ Yes</p>



TV Timer & TV Recording Timer

Opening/editing/ deleting Timer details	<p>[Start Here] While watching TV, <i>Options</i> ➤ <i>Rec./TimeShift</i> ➤ <i>Reservation List</i> ➤ See below</p> <p>Opening Entries Select entry</p> <p>Editing Entries Highlight entry ➤ <i>Options</i> ➤ <i>Edit</i> ➤ <i>Edit</i> ➤ <i>Save</i> <ul style="list-style-type: none"> Some entries may not be edited depending on the content. </p> <p>Deleting Entries Highlight entry ➤ <i>Options</i> ➤ <i>Delete</i> ➤ <i>Yes</i></p>
	<p>[Start Here] While watching TV, <i>Options</i> ➤ <i>Rec./TimeShift</i> ➤ <i>Reservation List</i> ➤ <i>Result</i> ➤ See below</p> <p>Opening Timer Log Select record</p> <p>Playing Recorded Programs Highlight record ➤ <i>Play</i></p> <p>Deleting Records Highlight record ➤ <i>Delete</i> ➤ <i>Yes</i></p>
	<p>[Start Here] While watching TV, <i>Options</i> ➤ <i>Advanced</i> ➤ <i>TV Alarm</i> ➤ See below</p> <p>Setting TV Alarm Time <i>Alarm Time</i> ➤ Select time</p> <p>Disabling Tone/Vibration/Small Light <i>Tone, Vibration or Light</i> ➤ <i>Off</i></p> <p>Setting Duration <i>Duration</i> ➤ Select time</p>

Prioritizing current
operation over TV
Timer/TV
Recording Timer

MENU ➤ *TV* ➤ *Settings* ➤ *TV Reserve Prior* ➤
Off



Watching

? TV won't activate

- Battery may be low. Charge battery or install a charged battery.

? Cannot watch TV

- Reception may be poor; change location to improve it. (TV signal strength is independent of handset signal strength.)
- Handset may not have been used for a period of time; retrieve Network Information.
- TV is disabled upon subscription termination.

? Area setup does not complete correctly

- Perform **Update All** in Channel Update. Area setup may not complete correctly depending on the area or service availability.

Recording

? Ringtone does not sound as set while recording

- When a Chaku-Uta® file, etc. is set as ringtone, default ringtone may sound for incoming transmissions while recording.

TV Recording Timer

? Could not start recording. appeared as recording result

- Recording failed due to low battery/memory, active function, etc.

? Recording aborted. appeared as recording result

- Recording was interrupted due to low memory, Memory Card removal, etc.

