

Date & Time	16-2
Display & Illumination	16-3
Language.....	16-3
Image & Text.....	16-3
Display & Backlight.....	16-3
Standby Display.....	16-4
Key Backlight.....	16-4
Key Illumination	16-4

Incoming Transmissions.....	16-5
Handset Response.....	16-5
Sounds	16-6
System Sounds	16-6
Additional Sound Settings	16-6
Connectivity	16-7
Network	16-7
IP Service.....	16-7
Reset.....	16-8
Restoring Default Settings.....	16-8

16

Handset Customization



Date & Time Settings

Date & Time

[Start Here](#) MENU ➔ Settings ➔ In Sound/Display menu, *Date & Time*

Setting the date and time	<i>Set Date/Time</i> ➔ Enter the year ➔ Enter the month ➔ Enter the day ➔ Enter the time ➔ <i>Accept</i>
Correcting Clock manually	<i>Time Correction</i> ➔ <i>Manual</i> ➔ <i>Yes</i> ➔ <i>Yes</i>
Disabling auto Clock correction	<i>Time Correction</i> ➔ <i>Auto Corr. Setting</i> ➔ <i>Off</i>
Setting auto Clock correction timing	<i>Time Correction</i> ➔ <i>Auto Corr. Setting</i> ➔ <i>Highlight On</i> ➔ <i>Details</i> ➔ Select item (<input type="checkbox"/> / <input checked="" type="checkbox"/>) ➔ <i>Save</i> ➔ <i>CLEAR/BACK</i>
Activating Daylight Saving	<i>Daylight Saving</i> ➔ <i>On</i>
Setting Time Zone	<i>Set Time Zone</i> ➔ Tap world map ➔ Select area ➔ <i>Accept</i>
Adding custom time zone	<i>Set Time Zone</i> ➔ <i>Custom</i> ➔ Enter city name ➔ <i>Done</i> ➔ Enter time difference ➔ <i>Accept</i>
Changing time format to 12 hour	<i>Time Format</i> ➔ <i>12 Hour</i>
Setting date format	<i>Date Format</i> ➔ Select option
Starting the Calendar week on Monday	<i>Calendar Format</i> ➔ <i>Monday-Sunday</i>



Y Display & Illumination Settings 1

Language

[Start Here](#) MENU ➔ Settings ➔ Sound/Display menu

Switching interface between Japanese and English

Language or 言語選択 ➔ English or 日本語

Image & Text

[Start Here](#) MENU ➔ Settings ➔ In Sound/Display menu, Display

Showing preloaded images for incoming calls, etc.

System Graphics ➔ Select item ➔ Preset Animation (or Pattern 1 to Pattern 3)

Showing Data Folder images for incoming calls, etc.

System Graphics ➔ Select item ➔ Select folder ➔ Select image ➔ Specify image area ➔ Assign

- Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

System Graphics ➔ Select item ➔ Customized Screen ➔ Assign

- Not available for Power On or Power Off.

Selecting image enhancement option for Standby and video playback

Vivid Mode ➔ Select option

Setting font of numbers entered in Standby

Dial Number ➔ Select pattern

Showing a message each time handset is powered on

Greeting Message ➔ Edit Message ➔ Enter message ➔ Done ➔ Switch On/Off ➔ On

Hiding caller info when Slider is closed

Caller Display ➔ Off

Display & Backlight

[Start Here](#) MENU ➔ Settings ➔ In Sound/Display menu, Display

Disabling display transition effects

Display Effects ➔ Off

Setting Display/key Backlight illumination time

Backlight ➔ Time Out ➔ Select time

Setting Display Brightness

Backlight ➔ Brightness ➔ Adjust level ➔ Accept

Canceling/activating Light Sensor

Backlight ➔ Brightness ➔ Uncheck or Check (/✓) ➔ Accept

Setting inactivity time after which Display turns off

Display Saving ➔ Select period

Setting inactivity time with Slider closed after which Display Backlight and Display turn off

CLS Disp. Time ➔ Select option

Specifying Backlight inactive period with Slider closed

Display Manner ➔ Lights out period ➔ At Start Time: or At End Time: ➔ Enter time ➔ Accept ➔ Save ➔ Switch On/Off ➔ On



Display & Illumination Settings **2**

Standby Display

[Start Here](#) MENU ➔ Settings ➔ In Sound/Display menu, Display ➔ Standby Display

Setting Clock/Calendar	Clock/Calendar ➔ Select type
Showing Network service provider name in Standby	Show Operator Name ➔ On
Selecting Mobile Widget display option	Show Widget ➔ Select option
Hiding Pedometer in Standby	Pedometer ➔ Off

Key Backlight

[Start Here](#) MENU ➔ Settings ➔ Phone/ tab

Disabling key Backlight illumination	Set Key Light ➔ Off
--------------------------------------	---------------------

Key Illumination

[Start Here](#) MENU ➔ Settings ➔ In Sound/Display menu, Sounds & Alerts

 
 












 
 
 












 
Setting Key Illumination pattern by event	Set Key Illumi ➔ Select item ➔ Key Pattern ➔ Select pattern
Disabling Key Illumination by event	Set Key Illumi ➔ Select item ➔ Switch On/Off ➔ Off



Incoming Transmission Settings

Handset Response

[Start Here](#) MENU ➔ Settings ➔ In Sound/Display menu, *Sounds & Alerts*

Setting ringtone volume	Volume ➔ Select item ➔ Adjust level ➔ Accept
Setting illumination color	Event Light ➔ Select item ➔ Light Color ➔ Select color
Changing Key Illumination patterns	Event Light ➔ Select item ➔ Key Pattern ➔ Select pattern
Selecting illumination option	Event Light ➔ Select item ➔ Switch On/Off ➔ On, Link to Sound or Off
Enabling/disabling illumination for missed transmissions	Status Light ➔ Select item ➔ Switch On/Off ➔ On or Off
Setting illumination color for missed transmissions	Status Light ➔ Select item ➔ Light Color ➔ Select color
Answering calls with other keys	Any Key Answer ➔ On <ul style="list-style-type: none"> • Use   -  ,  ,  ,  ,   or   in addition to .
Muting ringer with other keys	Any Key Answer ➔ Only Mute <ul style="list-style-type: none"> • Use   -  ,  ,  ,  ,   or   in addition to .



🔧 Sound Settings

System Sounds

[Start Here](#) MENU ➔ Settings ➔ In Sound/Display menu, *Sounds & Alerts*

Enabling Keypad Tones	<i>System Sounds</i> ➔ <i>Keypad Tones</i> ➔ Select tone
Setting S! Circle Talk tone	<i>System Sounds</i> ➔ <i>S! Circle Talk</i> ➔ Select tone
Setting other System Sounds	<i>System Sounds</i> ➔ Select item ➔ <i>Tone or Sound</i> ➔ Select folder ➔ Select tone/file • For files with limited usage period, tap <i>Yes</i> .
Disabling System Sounds	<i>System Sounds</i> ➔ Select item ➔ <i>Tone or Sound</i> ➔ <i>Off</i> • Not available for <i>S! Circle Talk</i> .
Setting System Sound duration	<i>System Sounds</i> ➔ Select item ➔ <i>Duration</i> ➔ Select time • Not available for <i>Keypad Tones</i> or <i>S! Circle Talk</i> . • For <i>Power On Sound</i> or <i>Power Off Sound</i> , enter time and tap <i>Accept</i> .
Setting System Sound volume	<i>Volume</i> ➔ <i>General Volume</i> ➔ Adjust level ➔ <i>Accept</i>

Additional Sound Settings

[Start Here](#) MENU ➔ Settings ➔ Sound/Display menu

Disabling Speaker when using Headphones	<i>Ringer Output</i> ➔ <i>Earphone</i>
Activating Speaker surround	<i>Sounds & Alerts</i> ➔ <i>Surround</i> ➔ <i>On</i>



Connectivity Settings

Network

[Start Here](#) MENU ➔ Settings ➔ Network tab

Selecting a Network manually	Select Network ➔ Manual ➔ Select Network
Adding preferred Networks	Select Network ➔ Set Preferred ➔ Select target location ➔ Insert ➔ Select Network
Adding preferred Networks to the end	Select Network ➔ Set Preferred ➔ Select Network ➔ Add to End ➔ Select Network
Deleting preferred Networks	Select Network ➔ Set Preferred ➔ Select Network ➔ Delete
Adding Networks	Select Network ➔ Add New Network ➔ Add ➔ Enter country code ➔ OK ➔ Enter Network code ➔ OK ➔ Enter name ➔ Done ➔ Select NW Type ➔ Select type <ul style="list-style-type: none"> After selecting Add New Network, Network list appears if Network has already been added. To add more, select Network and proceed.
Editing Networks	Select Network ➔ Add New Network ➔ Select Network ➔ Change ➔ Edit in the same manner as adding Networks
Deleting Networks	Select Network ➔ Add New Network ➔ Select Network ➔ Delete
Switching Network service between 3G and GSM manually	Select Service ➔ Manual ➔ Select service
Refreshing Network connection	Re-search Signal
Retrieving Network Information	Retrieve NW Info ➔ Yes
Checking Network status	Network Info
Editing connection names for mobile data communication	External Device ➔ Select name ➔ Edit ➔ Done
Clearing connection names for mobile data communication	External Device ➔ Options ➔ Reset ➔ Enter Handset Code ➔ OK ➔ Yes

IP Service

[Start Here](#) MENU ➔ Settings ➔ Phone/☎ tab ➔ Locks

Disabling IP Service	IP Service Setting ➔ Off ➔ Enter Handset Code ➔ OK <ul style="list-style-type: none"> When Off, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.
----------------------	--



Reset Settings

Restoring Default Settings

[Start Here](#) MENU ➔ Settings ➔ Phone/ tab ➔ Master Reset

Restoring default handset settings	<p>Reset Settings ➔ Enter Administrator Code ➔ OK ➔ Yes ➔ Yes</p> <ul style="list-style-type: none"> • Some default settings may not be restored.
Clearing all Phone Book entries, Data Folder files, etc.	<p>Reset All ➔ Enter Administrator Code ➔ OK ➔ Yes ➔ Yes</p> <ul style="list-style-type: none"> • Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) • Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications. • Handset Code and Administrator Code return to the default settings.

- A confirmation may appear before entering Administrator Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

