

USIM Card	17-2
About USIM Card	17-2
USIM Card Installation.....	17-3
Battery.....	17-4
Battery Installation.....	17-4
Software Update.....	17-5
Troubleshooting	17-6
Key Assignments	17-8
Pager Codes	17-10
Pager Code List	17-10

Character Codes.....	17-11
Character Code List	17-11
Weather Indicators	17-17
Weather Indicator List	17-17
Specifications	17-18
Memory Card Structure & Contents...	17-24
Menu List.....	17-25
Index	17-33
Warranty & Service.....	17-41
Customer Service	17-42

17


Appendix



About USIM Card

USIM Card is an IC card containing customer and authentication information, including the handset number. USIM Card must be inserted to use this handset. Save Phone Book entries on USIM Card Phone Book to use them on other SoftBank handsets. Depending on the USIM Card in use, some entry items may not be supported, and some limits (character entry, etc.) may be lower.

Precautions

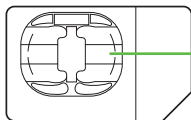

IC Chip

- Do not insert USIM Card into any other IC card device. SoftBank Mobile is not liable for resulting damages.
- Keep the USIM Card IC chip clean; malfunction may result. Clean with soft dry cloth.
- Do not attach labels to USIM Card. Malfunction may result.

Important

- USIM Card is the property of SoftBank Mobile.
- USIM Card will be reissued for a fee if lost or damaged.
- Return USIM Card to SoftBank Mobile upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice.
- Back up USIM Card files. SoftBank Mobile is not liable for lost files.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact SoftBank Mobile Customer Center, General Information (P.17-42).

USIM PIN

4-digit code (**9999** by default); activate PIN Entry to restrict usage.

PUK Lock

- Entering incorrect PIN three consecutive times activates PIN Lock, limiting handset use.

Canceling PIN Lock

- Contact SoftBank Mobile Customer Center, General Information (P.17-42) for your Personal Unblocking Key (PUK Code) and follow these steps:

Enter PUK Code ➡ OK ➡ Enter new PIN ➡ OK ➡ Re-enter new PIN ➡ OK
 ■ Write down PUK code.

PUK Lock

- Entering incorrect PUK Code ten consecutive times activates PUK Lock, disabling handset. Contact SoftBank Mobile Customer Center, General Information (P.17-42) for recovery.




USIM Card Installation

- Do not apply excessive force to insert/remove USIM Card.
- USIM Card must be inserted to use this handset.

Inserting


- 1 Remove battery (P.17-4)
- 2 Slide in USIM Card with IC chip facing down

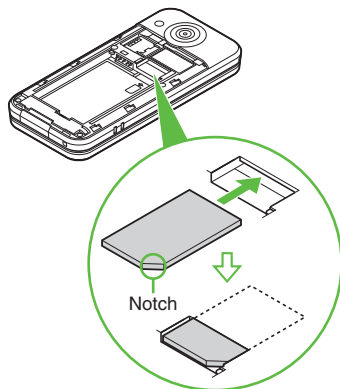

- Reinstall battery (P.17-4).

Removing

 - 1 Remove battery
- 2 Gently slide out USIM Card as shown



- Reinstall battery.
- Take care not to lose removed USIM Card.

After Repairs, USIM Card Replacement or Handset Upgrade/Replacement

- Some downloaded files may be inaccessible. In addition, S! Applications, BookSurfing® and Near Chat may be disabled after USIM Card replacement.



Battery Installation

About Battery

- Charge battery at least once every six months; an uncharged battery may become unusable or affect files/settings.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- Replace battery if operating time shortens noticeably.
- Clean device charging terminals with a dry cotton swab.

Lithium-ion Battery

- This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.




Li-ion00

- To recycle a used lithium-ion battery, take it to any shop displaying the symbol shown above.
- To avoid fire or electric shock, do not short-circuit or disassemble battery.


Inserting & Removing

1 Remove cover

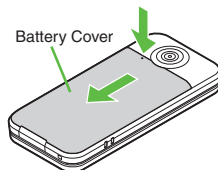


- Press and slide as shown.

2 Insert battery

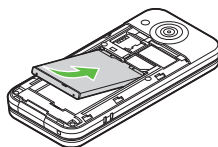

- With logo side up, fit tabs into battery cavity slots.


3 Close cover

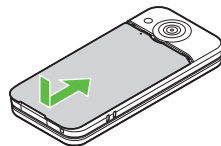

- Position and slide the cover gently as shown until it stops.

Removing

- Power handset off and lift battery as shown.

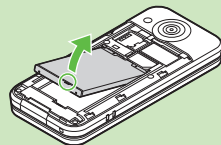

Software Update

Check for firmware updates and download as required.

Precautions


- Handset is disabled until update is complete. Update may take up to approximately 30 minutes.
- Update failure may disable handset. To reduce failure risk, make sure signal is strong and stable, and charge battery beforehand.
- Update will not start if other functions are in use. Before updating software (or before scheduled update time), end all active functions/applications.
- Disconnect USB Cable beforehand to reduce failure risk.
- Always back up important information. SoftBank Mobile cannot be held liable for damages from lost information, etc.

Updating Software

- Packet transmission fees do not apply to updates (including checking, downloading and rewriting).
- Touch Panel operations may be unavailable during updates; use handset keys.

1 ➔ **Settings** ➔ **Phone/** **tab** ➔ **Software Update**

2 **Software Update**

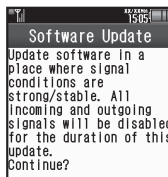

- Follow onscreen instructions.

Setting Update Period (Japanese)

In **Update Period**

- Follow onscreen instructions.

Update Result

In **Update Result**

Scheduled Update

A confirmation appears at scheduled update time. Press or wait a while for update to start.

When Updated

Update success notification appears and handset reboots.

After reboot, completion message appears and Information window opens.

Update Result

- While Information window appears, tap **Update Result**.

Reboot Failure

- If handset does not return to Standby after update, power handset off, reinsert battery, then restart it. If it still does not restart, contact SoftBank Mobile Customer Center, Customer Assistance (P.17-42).



Troubleshooting

General

Problem	Possible Cause	Solution
Handset won't power on	Was  pressed long enough?	Press  longer.
	Battery may need to be charged or replaced.	Charge battery or install a charged battery.
	Battery may not be properly installed.	Install battery properly (P.17-4).
Handset won't respond	Is Switch On/Off in PIN Entry On ?	If On , PIN is required. Enter PIN according to onscreen prompt.
Insert USIM Card appears	USIM Card may not be properly inserted.	Power handset off and check that USIM Card is properly inserted, then restart handset. If the message still appears, USIM may be damaged.
	The correct USIM Card may not be inserted.	Make sure the correct USIM Card is inserted. The inserted USIM Card may not be valid.
	There may be debris on IC chip/terminals.	Clean relevant parts with dry cloth and re-insert.
REFRESH appears and handset returns to Standby	Handset may have been dropped or subjected to shocks.	Handset failed to recognize USIM Card temporarily. This is not a malfunction.
Keypad won't respond	Keypad Lock may be active.	Cancel Keypad Lock (P.1-7).
	Function Lock may be active.	Cancel Function Lock (P.13-2).

Problem	Possible Cause	Solution
Battery strength indicator flashes when not charging	Ambient temperature may be outside 5°C to 35°C.	Use within an ambient temperature of 5°C - 35°C.
Saved entry/folder does not appear on handset	Entry/folder may be set to Secret.	Activate Show Secret Data (P.13-3).
Handset/AC Charger feels warm	Handset/AC Charger may warm while charging.	Unless handset/AC Charger is too hot to touch, warmth is considered normal. Always avoid prolonged skin contact to prevent burn injuries.
	Handset may warm during extended periods of use.	
	Handset may warm during Video Calls.	
Cannot access Memory Card files	Memory Card may not be properly formatted.	Use 941SH-formatted Memory Cards.
Clock settings are lost	Did you leave handset without battery?	Clock settings remain even when removing battery for replacement, etc. However, if handset is left with no battery or an exhausted one for an extended period of time (approximately one hour), Clock will need to be reset.



■ Charger/Battery

Problem	Possible Cause	Solution
Battery charges quickly	Remaining charge shortens charging time.	This is normal.
	Battery may be terminally exhausted or defective. (Small Light flashes red.)	Replace battery with a new one.
Battery charges slowly	Charging slows during Video Calls.	End the call to charge faster.
	Battery may be charging via USB.	Use AC Charger.
Battery won't charge	AC Charger may not be properly connected to handset.	Make sure connector is securely inserted and retry.
	AC Charger may not be firmly plugged in to AC outlet.	Remove plug from outlet, re-insert and retry.
	Battery may not be properly installed.	Install battery properly (P.17-4).
	Battery, AC Charger, or Charging Terminals, or Device Port may be obstructed by dust, etc.	Clean terminals, connector and Port with a dry cotton swab and retry.
	Charger, etc. may not be supported.	Use specified AC Charger, etc. only; others may damage battery.

Problem	Possible Cause	Solution
Battery Time seems shorter than usual	High power consuming operations are in use.	Keep Slider closed in Standby; reduce TV, S! Application, Media Player and camera use, and limit transmissions/external connections.
	Using handset in poor conditions may shorten Battery Time.	Avoid prolonged use of handset out-of-range or in poor signal conditions.
	Power hungry settings may be active.	Lower Brightness, select shorter Display Saving/ Backlight time, etc.



Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
	あいうえお あいうえお	アイウエオ アイウエオ	@./_-1 □ (space)	1	1
	かきくけこ	カキクケコ	ABCabc2	2	2
	さしすせそ	サシスセソ	DEFdef3	3	3
	たちつとっ	タチツテトッ	GHIghi4	4	4
	なにぬねの	ナニヌネノ	JKLjkl5	5	5
	はひふへほ	ハヒフヘホ	MNOmno6	6	6
	まみむめも	マミムメモ	PQRSpqrs7	7	7
	やゆよやゆよ	ヤユヨヤユヨ	TUVtuv8	8	8
	らりるれろ	ラリルレロ	WXYZwxyz9	9	9
	わをんー	ワヲンー	0	0	0
	＊ ＊	＊ ＊ _1	_____	✕ + P (pause) ? - ²	_____
Log, Pictogram List (double-byte), Symbol List ³					_____
	、。 ♯ (line break) ? ! □ (space)		、。 ♯ (line break) ?! □ (space)	#	_____

¹ - is available only in single-byte katakana entry.² Available for phone number entry; some characters may not be enterable in some windows.³ May not be enterable in some windows.

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
	Conversion ⁴	Cursor up/down; ⏮ (line break) when is pressed at the end of text			
	Cursor left/right				
	Switch entry modes (except during conversion)				
	Search Word ⁵	_____			
 (Long)	Toggle Personal Mode ⁵	_____	Toggle Personal Mode ^{5,6}	_____	
	Toggle case (for some characters)			_____	
	_____		Toggle mode (upper/ lower and lower case)		
Delete one character					
	Cancel conversion	_____	Cancel conversion ⁶	_____	Delete code
 (Long)	Delete before or after cursor				
Recover characters deleted with					
	Re-convert ⁷	_____	Re-convert ^{6, 7}	_____	
	OK				
	Non-Predictive suggestions ⁵	_____			
	Hiragana to Katakana/ Alphanumeric Conversion ⁵	_____			
 (Long)	Single Kanji Conversion ⁵	_____			

⁴Cursor moves up/down except during conversion.⁵Available during conversion.⁶Available only in single-byte alphanumeric entry.⁷Press immediately after inserting characters to re-convert them.

Pager Code List

Gray background indicates upper and lower case available. Press  to switch immediately after character entry.

Double-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&			*1
	8	や	(	ゆ	)	よ	*	#	Space		*2
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん			6	7	8	9	0

Single-byte Upper Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&			*1
	8	ヤ	(	ユ	)	ヨ	*	#	Space		*2
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン			6	7	8	9	0

Double-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	や		ゆ		よ					*2
	9										
	0										

Single-byte Lower Case

		Second Digit (Press Next)									
		1	2	3	4	5	6	7	8	9	0
First Digit (Press First)	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										*1
	8	ヤ		ユ		ヨ					*2
	9										
	0										

*1 Press   to insert  (line break) in mail message text, Notepad, etc.

*2 Press   to toggle upper and lower case modes.



First Three Digits	Last Digit										First Three Digits	Last Digit										First Three Digits	Last Digit									
	0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9		0	1	2	3	4	5	6	7	8	9
010											043	そ	た	だ	ち	ぬ	づ	つ	て	ば		171	辻	雨	卯	鵜	窺	瓦	確	白	渦	
011	!	!	!	!	!	!	!	!	!	!	044	と	だ	な	め	ね	づ	つ	て	ば		172	呟	雨	卯	鵜	窺	瓦	確	白		
012	!	!	!	!	!	!	!	!	!	!	045	と	だ	な	め	ね	づ	つ	て	ば		173	呟	雨	卯	鵜	窺	瓦	確	白		
013	!	!	!	!	!	!	!	!	!	!	046	と	だ	な	め	ね	づ	つ	て	ば												
014	!	!	!	!	!	!	!	!	!	!	047	と	だ	な	め	ね	づ	つ	て	ば												
015	!	!	!	!	!	!	!	!	!	!	048	と	だ	な	め	ね	づ	つ	て	ば		173										
016	!	!	!	!	!	!	!	!	!	!											174											
017	!	!	!	!	!	!	!	!	!	!	050	ア	ア	イ	ウ	エ	オ				130											
018	!	!	!	!	!	!	!	!	!	!	051	オ	カ	キ	ク	ケ	コ				131											
019	!	!	!	!	!	!	!	!	!	!	052	コ	サ	シ	ス	セ	ソ				132											
020	!	!	!	!	!	!	!	!	!	!	053	ソ	タ	チ	ツ	テ	ト				133											
021	!	!	!	!	!	!	!	!	!	!	054	ト	ダ	ニ	ネ	ノ	バ				134											
022	!	!	!	!	!	!	!	!	!	!	055	ビ	パ	ミ	フ	ヘ	ホ				135											
023	!	!	!	!	!	!	!	!	!	!	056	ポ	ヨ	ミ	ム	ヘ	ヤ				136											
024	!	!	!	!	!	!	!	!	!	!	057	ヨ	ロ	ミ	ル	ラ	ワ				137											
025	!	!	!	!	!	!	!	!	!	!	058	ロ	エ	ル	ガ	レ				138												
026	!	!	!	!	!	!	!	!	!	!										139												
027	!	!	!	!	!	!	!	!	!	!	060	A	B	G	Δ	Z	H	Θ	I		160											
028	!	!	!	!	!	!	!	!	!	!	061	K	Λ	M	N	三	O	Π	Σ	T	161											
029	!	!	!	!	!	!	!	!	!	!	062	Υ	Φ	X	Ψ	Ω				162												
030	!	!	!	!	!	!	!	!	!	!	063									163												
031	!	!	!	!	!	!	!	!	!	!	064	θ	ι	κ	λ	μ	ν	ξ	ο	π	ρ	164										
032	!	!	!	!	!	!	!	!	!	!	065	σ	τ	υ	φ	χ	ψ	ω														
033	!	!	!	!	!	!	!	!	!	!																						
034	H	I	J	K	L	M	N	O	P	Q	070	A	B	B	G	D	E	Ě	Ж	З	164											
035	R	S	T	U	V	W	X	Y	Z		071	I	Й	К	Л	М	Н	О	П	Р	С	165										
036						a	b	c	d	e	072	T	У	Ф	X	Ц	Ч	Ш	Щ	Ъ	Ы	166										
037	f	g	h	i	j	k	l	m	n	o	073	Б	Э	Ю	Я						167											
038	p	q	r	s	t	u	v	w	x	y	074									a	168											
039											075	б	в	г	д	е	ё	ж	з	и	й	169										
040	あ	あ	い	い	う	う	え	え	お		076	к	л	м	ч	п	р	с	т	у	170											
041	お	か	き	い	う	う	え	え	お		077	ф	х	ц	ч	ш	щ	ъ	ы	ь												
042	お	か	き	い	う	う	え	え	お		078	ю	я																			
043	お	か	き	い	う	う	え	え	お												170											
044	お	か	き	い	う	う	え	え	お																							
045	お	か	き	い	う	う	え	え	お																							
046	お	か	き	い	う	う	え	え	お																							
047	お	か	き	い	う	う	え	え	お																							
048	お	か	き	い	う	う	え	え	お																							
049	お	か	き	い	う	う	え	え	お																							
050	お	か	き	い	う	う	え	え	お																							
051	お	か	き	い	う	う	え	え	お																							
052	お	か	き	い	う	う	え	え	お																							
053	お	か	き	い	う	う	え	え	お																							
054	お	か	き	い	う	う	え	え	お																							
055	お	か	き	い	う	う	え	え	お																							
056	お	か	き	い	う	う	え	え	お																							
057	お	か	き	い	う	う	え	え	お																							
058	お	か	き	い	う	う	え	え	お																							
059	お	か	き	い	う	う	え	え	お																							
060	お	か	き	い	う	う	え	え	お																							
061	お	か	き	い	う	う	え	え	お																							
062	お	か	き	い	う	う	え	え	お																							
063	お	か	き	い	う	う	え	え	お																							
064	お	か	き	い	う	う	え	え	お																							
065	お	か	き	い	う	う	え	え	お																							
066	お	か	き	い	う	う	え	え	お																							
067	お	か	き	い	う	う	え	え	お																							
068	お	か	き	い	う	う	え	え	お																							
069	お	か	き	い	う	う	え	え	お																							
070	お	か	き	い	う	う	え	え	お																							
071	お	か	き	い	う	う	え	え	お																							
072	お	か	き	い	う	う	え	え	お																							
073	お	か	き	い	う	う	え	え	お																							
074	お	か	き	い	う	う	え	え	お																							
075	お	か	き	い	う	う	え	え	お																							
076	お	か	き	い	う	う	え	え	お																							
077	お	か	き	い	う	う	え	え	お																							
078	お	か	き	い	う	う	え	え	お																							
079	お	か	き	い	う	う	え	え	お																							
080	お	か	き	い	う	う	え	え	お																							
081	お	か	き	い	う	う	え	え	お																							
082	お	か	き	い	う	う	え	え	お																							
083	お	か	き	い	う	う	え	え	お																							
084	お	か	き	い	う	う	え	え	お																							
085	お	か	き	い	う	う	え	え	お																							
086	お	か	き	い	う	う	え	え	お																							

Character Codes									
First Three Digits	Last Digit								
0	1	2	3	4	5	6	7	8	9
198	叶	栳	栳	栳	栳	栳	栳	栳	栳
199	叶	栳	栳	栳	栳	栳	栳	栳	栳
200	叶	栳	栳	栳	栳	栳	栳	栳	栳
201	叶	栳	栳	栳	栳	栳	栳	栳	栳
202	叶	栳	栳	栳	栳	栳	栳	栳	栳
203	叶	栳	栳	栳	栳	栳	栳	栳	栳
204	叶	栳	栳	栳	栳	栳	栳	栳	栳
205	叶	栳	栳	栳	栳	栳	栳	栳	栳
206	叶	栳	栳	栳	栳	栳	栳	栳	栳
207	叶	栳	栳	栳	栳	栳	栳	栳	栳
207	叶	栳	栳	栳	栳	栳	栳	栳	栳
208	叶	栳	栳	栳	栳	栳	栳	栳	栳
209	叶	栳	栳	栳	栳	栳	栳	栳	栳
210	叶	栳	栳	栳	栳	栳	栳	栳	栳
211	叶	栳	栳	栳	栳	栳	栳	栳	栳
212	叶	栳	栳	栳	栳	栳	栳	栳	栳
213	叶	栳	栳	栳	栳	栳	栳	栳	栳
214	叶	栳	栳	栳	栳	栳	栳	栳	栳
215	叶	栳	栳	栳	栳	栳	栳	栳	栳
216	叶	栳	栳	栳	栳	栳	栳	栳	栳
217	叶	栳	栳	栳	栳	栳	栳	栳	栳
218	叶	栳	栳	栳	栳	栳	栳	栳	栳
219	叶	栳	栳	栳	栳	栳	栳	栳	栳
220	叶	栳	栳	栳	栳	栳	栳	栳	栳
221	叶	栳	栳	栳	栳	栳	栳	栳	栳
222	叶	栳	栳	栳	栳	栳	栳	栳	栳
223	叶	栳	栳	栳	栳	栳	栳	栳	栳
224	叶	栳	栳	栳	栳	栳	栳	栳	栳
225	叶	栳	栳	栳	栳	栳	栳	栳	栳
226	叶	栳	栳	栳	栳	栳	栳	栳	栳
226	叶	栳	栳	栳	栳	栳	栳	栳	栳
227	叶	栳	栳	栳	栳	栳	栳	栳	栳
228	叶	栳	栳	栳	栳	栳	栳	栳	栳
229	叶	栳	栳	栳	栳	栳	栳	栳	栳

First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit	First Three Digits	Last Digit
0 1 2 3 4 5 6 7 8 9		0 1 2 3 4 5 6 7 8 9		0 1 2 3 4 5 6 7 8 9		0 1 2 3 4 5 6 7 8 9		0 1 2 3 4 5 6 7 8 9	
326	接	357	中	386	な	413	評	413	評
327	仙	358	仲	387	奈	414	豹	414	豹
328	扇	359	吐	388	謎	415	敏	415	敏
329	燭	360	帖		軟				
330	選	361	暢	388	二	415	不	415	不
331	全	362	調	389	虹	416	府	416	府
332		363	直	390	如	417	膚	417	膚
332				390	ぬ	418	武	418	武
333	曾	364	追	390	巴	419	伏	419	伏
334	組	365	潰	391	祢	420	福	420	福
335	倉	366	嬌	392	粘	421	物	421	物
336	搜			393	腦	422	粉	422	粉
337	遭	366			は	422		422	
338	霜	367	刺	393	波	423	幣	423	幣
339		368	悽	394	派	424	僻	424	僻
340	捉	369	艇	395	排	425	片	425	片
341		370	郎	396	培	426	鞭	426	鞭
342		371	訂	397	陪				
343	他	372	鉄	398	柏	426	保	426	保
344	多	373	軌	399	爆	427	秘	427	秘
345	岱	374	塗	400	函	428	俵	428	俵
346	腿	374	堵	401	烟	429	抱	429	抱
347	宅	375	堵	402	反	430	蜂	430	蜂
348	諾	376	瞎	403	犯	431	蜂	431	蜂
349		377	瞎	404	頑	432	望	432	望
350	椰	378	盜	405	頑	433	望	433	望
351	担	379	盜	405	ひ	434	防	434	防
352	担	380	董	406	卑	435	本	435	本
353	綻	381	鐘	407	比	436	本	436	本
354	暖	382	鐘	408	比	436	本	436	本
354		383	鴉	409	訛	436		436	
355		384	鴉	410	鼻	437	味	437	味
356		385	鴉	411	時	438	鱗	438	鱗
		386	鴉	412	百	439	鱗	439	鱗

[illegible]

First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit										
	0	1	2	3	4	5	6	7	8		9	0	1	2	3	4	5	6	7		8	9	0	1	2	3	4	5	6	7	8
562	愆	惶	愆	愆	愆	愆	愆	愆	愆	598	梵	栳	栳	栳	栳	栳	栳	栳	栳	栳	634	瀏	瀟	瀟	瀟	瀟	瀟	瀟	瀟	瀟	瀟
563	愆	惶	愆	愆	愆	愆	愆	愆	愆	599	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	635	瀏	瀟	瀟	瀟	瀟	瀟	瀟	瀟	瀟	瀟
564	愆	惶	愆	愆	愆	愆	愆	愆	愆	600	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	636	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
565	愆	惶	愆	愆	愆	愆	愆	愆	愆	601	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	637	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
566	愆	惶	愆	愆	愆	愆	愆	愆	愆	602	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	638	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
567	愆	惶	愆	愆	愆	愆	愆	愆	愆	603	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	639	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
568	愆	惶	愆	愆	愆	愆	愆	愆	愆	604	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	640	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
569	愆	惶	愆	愆	愆	愆	愆	愆	愆	605	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	641	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
570	愆	惶	愆	愆	愆	愆	愆	愆	愆	606	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	642	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
571	愆	惶	愆	愆	愆	愆	愆	愆	愆	607	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	643	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
572	愆	惶	愆	愆	愆	愆	愆	愆	愆	608	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	644	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
573	愆	惶	愆	愆	愆	愆	愆	愆	愆	609	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	645	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
574	愆	惶	愆	愆	愆	愆	愆	愆	愆	610	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	646	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
575	愆	惶	愆	愆	愆	愆	愆	愆	愆	611	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	647	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
576	愆	惶	愆	愆	愆	愆	愆	愆	愆	612	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	648	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
577	愆	惶	愆	愆	愆	愆	愆	愆	愆	613	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	649	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
578	愆	惶	愆	愆	愆	愆	愆	愆	愆	614	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	650	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
579	愆	惶	愆	愆	愆	愆	愆	愆	愆	615	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	651	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
580	愆	惶	愆	愆	愆	愆	愆	愆	愆	616	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	652	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
581	愆	惶	愆	愆	愆	愆	愆	愆	愆	617	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	653	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
582	愆	惶	愆	愆	愆	愆	愆	愆	愆	618	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	654	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
583	愆	惶	愆	愆	愆	愆	愆	愆	愆	619	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	655	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
584	愆	惶	愆	愆	愆	愆	愆	愆	愆	620	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	656	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
585	愆	惶	愆	愆	愆	愆	愆	愆	愆	621	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	657	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
586	愆	惶	愆	愆	愆	愆	愆	愆	愆	622	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	658	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
587	愆	惶	愆	愆	愆	愆	愆	愆	愆	623	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	659	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
588	愆	惶	愆	愆	愆	愆	愆	愆	愆	624	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	660	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
589	愆	惶	愆	愆	愆	愆	愆	愆	愆	625	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	661	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
590	愆	惶	愆	愆	愆	愆	愆	愆	愆	626	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	662	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
591	愆	惶	愆	愆	愆	愆	愆	愆	愆	627	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	663	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
592	愆	惶	愆	愆	愆	愆	愆	愆	愆	628	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	664	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
593	愆	惶	愆	愆	愆	愆	愆	愆	愆	629	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	665	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
594	愆	惶	愆	愆	愆	愆	愆	愆	愆	630	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	666	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
595	愆	惶	愆	愆	愆	愆	愆	愆	愆	631	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	667	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
596	愆	惶	愆	愆	愆	愆	愆	愆	愆	632	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	668	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟
597	愆	惶	愆	愆	愆	愆	愆	愆	愆	633	栳	栳	栳	栳	栳	栳	栳	栳	栳	栳	669	炮	烟	烟	烟	烟	烟	烟	烟	烟	烟

[illegible]

Weather Indicator List

■ Basic Status

	Clear skies (day)
	Clear skies (night)
	Cloudy
	Rain
	Snow
	Thunder showers
	Chance of rain: 0%
	Chance of rain: 10%
	Chance of rain: 20%
	Chance of rain: 30%
	Chance of rain: 40%
	Chance of rain: 50%
	Chance of rain: 60%
	Chance of rain: 70%
	Chance of rain: 80%
	Chance of rain: 90%
	Chance of rain: 100%
	Then
	Partly/chance of

■ Pollen Count

	Low
	Moderate
	High
	Extreme

■ Cherry Blossom

	Flowering
	Almost full bloom
	Full bloom
	Beginning of petal fall

■ Fall Foliage

	No color change
	Colors appearing
	Peak
	Defoliating

■ Ultraviolet

	Low
	Moderate
	High
	Extreme

■ Typhoon

	Forming
	Approaching
	Caution necessary

■ Other

	Heavy rain
	Gale
	Notification



Specifications

SoftBank 941SH

Weight*	130 g
Continuous Talk Time*	210 minutes (3G) 220 minutes (GSM)
Continuous Standby Time*	350 hours (3G) 310 hours (GSM) (Slider closed)
Charging Time (power off)*	AC Charger: 140 minutes In-Car Charger: 140 minutes
Dimensions (W x H x D)*	53 x 119 x 16.6 mm (Slider closed, without protruding parts)
Maximum Output	0.25 W (3G) 2.0 W (GSM)

*Approximate value.

- Above values calculated with battery installed and Backlight Brightness set to **Level:2**.
- Continuous Talk Time is an average measured with a new, fully charged battery, in strong signal conditions without moving handset.
- Continuous Standby Time is an average measured with a new, fully charged battery, with Slider closed without calls or operations, in strong signal conditions without moving handset. In Japan (3G service area), the value is calculated with IP Service Setting, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting set to **Off**.
- Talk Time/Standby Time may vary with environment, status, settings, etc.

- Display employs precision technology, however, some pixels may appear brighter/darker.

Handset Materials

Parts	Materials & Finishing
Housing (Display side)	Nylon resin (aluminum insert-molded)/Acrylic UV curing painting (sealer: acrylic painting)
Housing ornament (metallic frame on Display side), lens cover ornament (metallic frame)	ABS resin/Metal deposition/Acrylic UV curing painting (sealer: acrylic painting)
Housing (Slider mechanism on Display back)	Magnesium alloy/Acrylic baking finish (sealer: epoxy baking finish)
Housing (Display back Speaker area, Keypad side, battery side), Battery Cover, lens cover	ABS resin/Acrylic UV curing painting (sealer: acrylic painting)
Slider stop damper (Display back)	Elastomeric resin
Display window, lens cover, Mobile Light cover	Acrylic resin
Screw cover (Display back)	PET
Lens cover ornament (grooved frame)	Acrylic UV curing resin
Infrared Port	ABS resin (infrared grade)
Antenna	Nylon resin/Brass/PA/SUS/NiTi alloy/Piano wire/Elastomeric resin

Parts	Materials & Finishing
Multi Selector (Cursor Keys)	Aluminum/Paint
Battery	Polyamide resin/PC resin/PC sheet
Mail Key, Yahoo! Keitai Key, Shortcuts & A/a Key, TV & Text Key, Start Key, Clear/Back Key, Power On/Off Key, Keypad, Side Keys	PC resin/Acrylic UV curing painting
Keypad base sheet	PC sheet/Urethane sheet/Silicone sheet
Side Key (Camera Key)	PC resin/Metal deposition/Acrylic UV curing painting
External Device Port Cover	Elastomeric resin/PC resin/Acrylic UV curing painting (sealer: acrylic painting)
Charging Terminals	SUS/Gold plating (sealer: nickel)
Screw (all pieces)	SWCH16A/Ni plating

Accessory

Battery

Voltage	3.7V
Battery Type	Lithium-ion
Capacity	800 mAh
Dimensions (W x H x D)*	35.2 x 54.9 x 3.9 mm (without protruding parts)

*Approximate value.



Basic Operations

■ Standby Shortcut

Savable Items	19 per sheet (shared with widgets)
----------------------	------------------------------------

Universal Operations, Etc.

■ Text Entry

User Dictionary	250 entries (5 per reading) Word: 30 characters Reading: 8 hiragana
Acquire Dictionary	5 dictionaries
Paste List	10 text strings
Recoverable Deleted Characters	30,720 single-byte characters
Dictionary	Meikyo Japanese Dictionary: Approximately 47,100 words/phrases Genius English-Japanese Dictionary: Approximately 45,700 words/phrases Genius Japanese-English Dictionary: Approximately 55,800 words/phrases

■ Phone Book

Entry	1,000 entries
Name/Reading	Last/First: 32 characters each
Phone Number	5 numbers (32 digits each)
Mail Address	5 addresses (128 characters each)
Category	16 Categories
Address	Postal Code: 20 characters Country: 32 characters Others: 64 characters each
Office	Office Name/Division/Post: 32 characters each
Homepage	1,024 bytes
Note	256 characters
Mail Groups	20 Groups (20 members each) Group name: 16 characters

Calling

Dialed Numbers	Dialed Numbers: 30 records Dialed Ranking: 10 records
Received Calls	30 records
Answer Phone/Caller Voice	20 messages or 90 seconds
Auto Answer List	10 numbers
Decoration Call	100 KB including 20 characters
Speed Dial/Mail	100 numbers/addresses

Messaging

Memory	Received Msg.	10 MB or 3,000 messages
	Drafts	
	Sent Messages	5 MB (or 1,000 messages for Sent Messages)
	Unsent Messages	
	Templates	220 MB (shared with Data Folder and S! Appli Library)
PC Mail/S! Mail Subject	512 single-byte characters	
PC Mail/S! Mail Message	Approximately 30,000 single-byte characters	
SMS Message	160 single-byte alphanumeric	
Auto Resend	2 times	
Attachment	20 files or 2 MB [*]	
Send Reservation	10 messages	
Signature	256 single-byte characters	
Recipient	20 numbers/addresses	
Folder	20 folders (20 sort keys each)	
Chat Folders	Memory	300 messages per folder
	Folder	10 folders (20 members each)

Graphic Mail	1 sound or Flash [®] file, or 40 images/My Pictograms (with 1 sound or Flash [®] file)	
Auto Reply	20 numbers/addresses Reply Message: 256 single-byte characters per mode	
Anti Spam Measures	Individual	20 entries
	Permitted List	20 entries

^{*}Limit may be lower depending on message text, etc.

■ PC Mail Settings

PC Mail Account	Account	3 accounts
	Account Name	20 characters
Set Receiving	User Name	128 characters
	Password	40 characters
	ReceivingServer	128 characters
Set Sending	Port Number	1 to 65535
	Sender Name	20 characters
	Mail Address	128 characters
PC Mail DL	Individual Address	20 addresses

Internet

Download (Yahoo! Keitai & PC Site Browser)	Yahoo! Keitai	300 KB per page 10 MB (100 MB via Keitai Wi-Fi) for progressive downloads
	PC Site Browser	1 MB per file
Download (Direct Browser)[*]	JPEG Images	5,000 KB
	Flash [®] Files	2 MB

^{*}1 MB each for files other than JPEG images and Flash[®] files. (Some media files are playable beyond 1 MB.)



History	300 pages for Yahoo! Keitai 300 pages between PC Site Browser and Direct Browser
URL Entry Log	10 URLs
Bookmarks* & Saved Pages	100 pages for Yahoo! Keitai 100 pages between PC Site Browser and Direct Browser
Tab	3 tabs at one time
Input Memory	20 entries
Streaming History	20 URLs
RSS Feeds	30 entries (60 KB per entry)

*Folders are counted as pages.

Digital TV

Recorded File	ISDB-T mobile Video profile (SD-Video standard)	
Recording Time (example)	Handset	Approximately 70 minutes
	Memory Card	Approximately 80 minutes on 256 MB Memory Card
Marker	99 Markers (10 per file)	
Split File	99 portions per file	
Time Shift Recording	30 minutes	
Reservation List	5 entries (24 hours each on 1 GB or larger Memory Card)	

Camera & Imaging

Mobile Camera

Effective Pixels	8 Megapixels
Auto Shut-off Time	Approximately 3 minutes

Photo Camera

Zoom	1x - 20.4x	
Picture Size (W x H dots)	8M	2448 x 3264
	5M	1944 x 2592
	3M	1536 x 2048
	Full HD	1080 x 1920
	Wallpaper	480 x 1024
	VGA	480 x 640
	QVGA	240 x 320
Scanner Image Size (W x H dots)	Free, 1200 x 640, 480 x 1488, 1280 x 960	
File Format	JPEG	
Memory	Approximately 80 files (at 8M, High Quality) on handset with no other files	
File Name	yymmdd_hhmmss	
Shooting Distance	Macro: 10 cm	
Background Save	3 files	
Portrait Auto Focus	VGA or larger	

Video Camera

Zoom	1x - 5.1x	
Record Size (W x H dots)	Extended Video	864 x 480 (Wide)
		640 x 480 (VGA)
		320 x 240 (QVGA)
		176 x 144 (QCIF)
		128 x 96 (SubQCIF)
	For Message	320 x 240 (QVGA) 176 x 144 (QCIF) 128 x 96 (SubQCIF)

File Format	3GP	
Recording Capacity per Shot	Extended Video	Approximately 30 minutes* on Memory Card
	For Message	2 MB or 295 KB
File Name	yymmdd_hhmmss	
Recording Distance	1.5 m in good light	
Still Image Capture	3 images	
Recording Pause Supported	QVGA or larger (Extended Video sizes only)	

*Varies with handset usage, location or settings.

Editing Images

Picture Editor	Resize (W x H dots)	Wallpaper (480 x 1024) Power On/Off (480 x 1024) Incoming Call (320 x 320) Alarm (480 x 208) Pictogram (96 x 96) VGA (480 x 640) QVGA (240 x 320) Cut
		52 x 52 dots or larger JPEG/PNG images
	Paste	16 characters
	Correction	52 x 52 dots or larger JPEG/PNG images
Composite	Merge Panorama	JPEG images between W 48 x H 64 dots and 240 x 320 dots

Video & Music

Supported Formats	WMA (.wma), AAC (.mp4/.3gp/.m4a), Secure AAC (SD-Audio standard) (Some files may not play depending on sampling frequency and bit rate)
------------------------------	--



All Music List	Music	Shows up to 350 files each
	Chaku-Uta®	
	WMA	
	SD AUDIO	Shows up to 999 files

S! Applications & Widgets

S! Applications

Memory	100 items or 220 MB (shared with Messaging Templates folder and other folders in Data Folder)
Remote Control	Approximately 5 m

Mobile Widget

Savable Items	4 widgets (S! Quick News & S! Friend's Status: 1, others: 3) per sheet x 4 sheets
---------------	---

Handy Extras

PIM/Life

Calendar/Tasks	Schedule: 1,000 entries Tasks: 300 entries Subject: 32 characters Description: 128 characters Location: 16 characters Set Holiday: 10 holidays
Alarms	5 entries, Subject: 9 characters
Wakeup TV	Auto Shut-off Approximately 30 minutes
Calculator	999,999,999,999
Expenses Memo	30 entries (999,999.99 yen each)
Osaifu-Keitai®	Remote Lock password: 5 - 16 single-byte alphanumerics

*Preset holidays are based on Japanese calendar as of September 2009.

Clock/Gauge

Stopwatch	23 hours 59 minutes 59.9 seconds in 0.1-second increments Lap time: 4 records	
Countdown Timer	99 minutes 59 seconds in 1-second increments	
World Clock	City name: 16 characters	
Pedometer	Today's Walking	Steps: 99,999
		Time: 23 hours
		59 minutes 59 seconds
		Exercise: 71.9 Ex
		Calories: 9,999.9 kcal
		Distance: 179.9 km
	Log	Fat burned: 999.9 g
		2 years
		Daily view: 9,999 steps per hour
		Weekly view: 99,999 steps per day
		All Days: 999 days
		Steps: 99,999,999
	Accumulated Data	Time: 99,999 hours
		59 minutes 59 seconds
		Exercise: 99,999.9 Ex
		Calories: 9,999,999.9 kcal
Distance: 999,999.9 km		
Fat burned: 999,999.9 g		
Average	Steps: 99,999	
	Time: 23 hours	
	59 minutes 59 seconds	
	Exercise: 71.9 Ex	
	Calories: 9,999.9 kcal	
	Distance: 179.9 km	
S! GPS Navi	My Location	Fat burned: 999.9 g
		50 entries

Doc./Rec.

Document Viewer	Supported Formats	PDF (.pdf) Microsoft® Excel® (.xls) Microsoft® Word (.doc) Microsoft® PowerPoint® (.ppt)
	File Size	10 MB
Notepad	500 entries	(8,192 characters each)
Voice Recorder	For Message	Approximately 20 minutes (message size limit: 2 MB) or 3 minutes (message size limit: 300 KB) per file
	Extended Voice	99 hours 59 minutes 59 seconds
Scan Barcode (Continuous Mode)	UPC/JAN	50 codes
	QR Code	16 codes
Create QR Code	Equivalent of 513 digits, 311 alphanumerics or 131 kanji	
Scan Text	256 characters	

Entertainment

S! Quick News

Savable Items	1 item for Special 5 items between News Flash and General
---------------	--

e-Books

Text Copy	20 characters
-----------	---------------

S! Friend's Status

Member	30 members
My Status	Name: 7 characters Comment: 15 characters Status Label: 4 characters
Status Templates	Template name: 12 characters

S! Circle Talk

Participant	11 members
Speak Time	30 seconds each
Member List	30 entries (10 members per Group)



■ Blog Tool

Blog Details	5 entries	
Blog Title	16 characters	
Blog Settings (Mail)	Email Address	128 characters
	Title	32 characters
	Text	128 characters
	Picture Size	S (320 x 320) M (640 x 640) L (1024 x 1024) Send
Blog Settings (Yahoo! Keitai & PC Site Browser)	URL for Posting	1,024 characters
	URL for Viewing	1,024 characters

Data Folder

Memory	220 MB (shared with Messaging Templates folder and S! Appli Library)
---------------	--

Memory Card

Backup File Name	yymmddXX` (XX: 2 digits/letters)
-------------------------	----------------------------------

`yymmdd for Contents Keys.

Connectivity & File Backup

■ Wi-Fi

Profile	10 entries
Authentication Method	Open System, Shared Key, WPA-PSK, WPA2-PSK, WPA/WPA2-PSK Auto
Encryption Method	No Authentication, WEP, TKIP, AES, TKIP/AES Auto
WEP Key	4 keys

■ Infrared

Infrared Transfer	IrMC 1.1	
	Range	Within 20 cm
IrSS Transfer (JPEG images)	Receive 2,500 KB or less; send 5,000 KB or less (after resizing)	

■ Bluetooth®

Communication System	Bluetooth® specification Ver. 2.1
Supported Profiles	Headset Profile
	Hands-Free Profile
	Dial-Up Networking Profile
	Object Push Profile
	File Transfer Profile
	Basic Imaging Profile
	Advanced Audio Distribution Profile
	Audio/Video Remote Control Profile
Output	Bluetooth® Power Class 2
Range	Within 10 m
Device Search	16 devices
Pairing	32 devices
Device Name	16 characters
Printing	JPEG/PNG images

■ S! Addressbook Back-up

Log	10 synchronization records
------------	----------------------------

Network

Add Network	5 Networks
	Country/Network code: 3 digits
	Name: 25 single-byte characters



Reference URLs

■ **SOFTBANK MOBILE Corp.**

<http://mb.softbank.jp/en/>

■ **S! Addressbook Back-up**

http://mb.softbank.jp/en/price_plans/basic_option.html

■ **Messaging Basics**

http://mb.softbank.jp/en/customer_support/mail.html

■ **Custom Handset Address**

<https://www.email.softbank.ne.jp/help/e/address.html>

■ **Yahoo! Keitai**

http://mb.softbank.jp/en/customer_support/web.html

■ **Ichi Navi**

http://mb.softbank.jp/en/price_plans/basic_option.html

■ **Secure Remote Lock**

http://mb.softbank.jp/en/price_plans/basic_option.html

■ **microSD™ Memory Card Compatibility**

From PC (Japanese)

http://k-tai.sharp.co.jp/peripherals/sd_support.html

From Handset (Japanese)

<http://shweb.sharp.co.jp/>

■ **Compatible Blu-ray Disc Recorders**

From PC (Japanese)

<http://www.sharp.co.jp/bd/spec/index.html>

■ **SVG-T**

From Handset (Japanese)

http://shweb.sharp.co.jp/svgt/index_pdc.html

■ **Association for Promotion of Digital Broadcasting**

From PC

<http://www.dpa.or.jp/english/>

From Handset (Japanese)

<http://www.dpa.or.jp/1seg/k/>

■ **SOFTBANK TELECOM Corp. (BB mobilepoint)**

From PC

<http://tm.softbank.jp/english/consumer/wlan/index.html>



Memory Card Structure & Contents

Memory Card Structure			Contents (Location when Viewed on Handset)
DCIM	XXXSHARP		Still images in DCIM
PRIVATE	MYFOLDER	Local Contents	SD Local Contents
		Mail	Messaging folder backups (Received Msg., Sent Messages and Drafts)
		My Items	Book
			e-Book files in Data Folder (Books)
			Bookmarks
			Yahoo! Keitai Bookmarks
			Character
			PNG files in Data Folder (Character)
			CSI
			Decoration Call files in Data Folder (Decoration Call)
			Custom Screens
			Customized Screen files in Data Folder (Customized Screen)
			Flash(R)
			Flash® Wallpaper files in Data Folder (Flash®)
			Flash(R) Ringtones
			Flash® ringtones in Data Folder (Flash® Ringtones)
			Games and More
			S! Applications
			Hot Status Template
			Template files in Data Folder (Status Templates)
			Mail Art
			Files in Data Folder (Mail Art)
			Message Templates
			Graphic Mail templates in Templates folder
			Music
			Music files in Data Folder (Music)
			Other Documents
			Other files in Data Folder (Other Documents)
			Pictograms
			GIF files in Data Folder (My Pictograms)
			Pictures
			Still images in Data Folder (Pictures)
			Sounds & Ringtones
			Melodies and other sound files in Data Folder (Ring Songs-Tones)
			Videos
			Video files in Data Folder (Videos)
			Widget
			Widget files in Data Folder (Widget)
			WMAudio
			WMA files for Media Player (WMA)
		SH_Folder	Application management files
		Utility	Backup files (Phone Book), etc.
	SHARP	MOBILE	Backup files (User Dictionary), etc.
SD_AUDIO			SD-Audio files for Media Player (SD AUDIO)



Menu List

Messaging

Function		Refer to
Received Msg.		P.5-12
Create Message		P.5-4
Retrieve New Msg.		P.5-24
Drafts		P.5-29
Templates		P.5-23
Sent Messages		P.5-12
Unsent Messages		P.5-29
Chat Folders		P.5-15
Server Mail Box	Mail List	P.5-24
	Retrieve All	P.5-24
	Delete All	P.5-27
	Mailbox Volume	P.5-30
Create New SMS		P.5-7
Settings	Address Settings	P.5-3
	General Settings	P.5-30
	S! Mail Settings	P.5-32
	PC Mail Settings	P.5-18
	SMS Settings	P.5-35
	Speed Dial/Mail	P.5-20
	Set Mail Group	P.5-16
Memory Status		P.5-26

Settings: General Settings

	Function	Refer to
Send/ Compose	Delivery Report	P.5-31
	Reply to Settings	P.5-31
	Reply With Text	P.5-31
	Auto Reply	P.5-26
	Set Quick Reply	P.5-26
	Auto Resend	P.5-31
	Sending Status	P.5-31
	Restrictions Setting	P.5-8
Receive	Message Notice	P.5-31
	Link to Feeling	P.5-32
	Animation View	P.5-31
	Anti Spam Measures	P.5-14
	Report Spam	P.5-30
	Scroll Unit	P.5-30
	Message List View	P.5-30
	Address View	P.5-30
	Received Msg. View	P.5-30
	Sent Msg. View	P.5-30
Auto Delete	Received Msg.	P.5-30
	Sent Messages	P.5-30

Settings: S! Mail Settings

Function		Refer to
Message DL		P.5-11
Signature		P.5-21
Picture Appearance		P.5-33
Auto Play File	Pictures	P.5-33
	Sounds	P.5-33
Create Msg. Size		P.5-33
Send File Settings		P.5-33
Picture Auto Resize		P.5-33

Settings: PC Mail Settings

Function	Refer to
PC Mail Account	P.5-18
PC Mail DL	P.5-33
Check New Mail	P.5-33
Word wrap	P.5-34

Settings: SMS Settings

Function	Refer to
Expiry Time	P.5-35
Message Center	P.5-35
Char-code	P.5-35



Yahoo!

Function	Refer to
Yahoo! Keitai	P.6-3
Menu List	P.6-3
Bookmarks	P.6-9
Saved Pages	P.6-9
Web Search	P.6-12
Enter URL	P.6-4
History	P.6-4
PC Site Browser	P.6-5
Direct Browser	P.6-5
Browser Settings	P.6-13

■ PC Site Browser

Function	Refer to
Homepage	P.6-5
Bookmarks	P.6-9
Saved Pages	P.6-9
Web Search	P.6-12
Enter URL	P.6-5
History	P.6-5
RSS Feed	P.6-10
Yahoo! Keitai	P.6-3
Direct Browser	P.6-5

Function	Refer to
Font Size	P.6-13
Scroll Settings	P.6-14
Cursor Settings	P.6-13
Downloads	P.6-13
Memory Operation	P.6-11
Security Settings	P.6-18
Download to	P.6-13
Initialized Browser	P.6-18
Reset Settings	P.6-18
Warning Message	P.6-14
Zoom Factor	P.6-13
Softkey Area	P.6-13

PC Site
Browser
Settings

■ Direct Browser

Function	Refer to
Homepage	P.6-5
Bookmarks	P.6-9
Saved Pages	P.6-9
Web Search	P.6-12
Enter URL	P.6-5
History	P.6-5
RSS Feed	P.6-10
Yahoo! Keitai	P.6-3
PC Site Browser	P.6-5

Function	Refer to
Font Size	P.6-13
Scroll Settings	P.6-14
Cursor Settings	P.6-13
Downloads	P.6-13
Memory Operation	P.6-11
Security Settings	P.6-18
Download to	P.6-13
Initialized Browser	P.6-18
Reset Settings	P.6-18
Zoom Factor	P.6-13
Softkey Area	P.6-13
Direct Browser Lock	P.6-14
Proxy Setting	P.6-14
Homepage Settings	P.6-14
Search Page	P.6-14

Set Direct
Browser

■ Browser Settings

Function	Refer to
Font Size	P.6-13
Scroll Unit	P.6-13
Cursor Settings	P.6-13
Downloads	P.6-13
Memory Operation	P.6-11
Security Settings	P.6-18
Download to	P.6-13
Initialized Browser	P.6-18
Reset Settings	P.6-18



S! Appli

Function	Refer to
S! Appli Library	P.10-2
Osaifu-Keitai	P.11-15
Notification History	P.10-2
Settings	P.10-7
Information	P.10-7

■ Settings

Function		Refer to
Application Volume		P.10-6
Backlight		P.10-7
Vibration		P.10-7
Synchronization		P.10-7
Notification Setting		P.10-7
Calls & Alarms		P.10-6
Screensaver	Switch On/Off	P.10-6
	Activation Time	P.10-6
	Stop Auto Start	P.10-6
Surround		P.10-6
Set to Default		P.10-7
Memory All Clear		P.10-7

Entertainment

Function		Refer to
S! Information Channel/ Weather	What's New	P.12-3
	Back Issue	P.12-3
	Registration/Cancel	P.12-3
	Get Latest Contents	P.12-14
	Notification	P.12-14
	Weather Indicator	P.12-3
S! Quick News		P.12-2
Free Contents	Tada-Melody	P.12-4
	Tada-Deco	P.12-4
	Tada-Hon	P.12-4
	Tada-Komi	P.12-4
	Tada-Game	P.12-4
	Tada-Utaban	P.12-4
S! Contents Store		P.12-4
Media Player	Music	P.9-5
	Videos	P.9-6
	Streaming	P.6-4
	MTP Mode	P.9-4
S! Friend's Status		P.12-6
S! Circle Talk		P.12-9
Near chat		P.12-11
Blog Tool		P.12-12
Digital Media Viewer		P.12-5
BookSurfing		P.12-5
e-Book Viewer		P.12-5

■ S! Information Channel/Weather: Weather Indicator

Function		Refer to
Weather		P.12-15
Manual Update		P.12-3
Settings	Standby Setting	P.12-15
	Weather Notif.	P.12-15
	Icon Update	P.12-15

■ S! Quick News

Function		Refer to
S! Quick News List		P.12-2
Settings	Automatic Update	P.12-14
	Show Image	P.12-14
	Check Schedule	P.12-14
	Change Skin	P.12-14
	Delete S! Quick News Lists	P.12-14

■ Media Player: Music

Function		Refer to
Last Played Music		P.9-8
My Music		P.9-5
SD AUDIO		P.9-5
WMA		P.9-5
Download Music		P.9-4
Settings	Sound Effects	P.9-8
	Playback Mode	P.9-8
	⓪Sound Output	P.9-8
	Delete All WMA	P.9-9



Media Player: Videos

Function		Refer to
Last Played Video		P.9-8
My Videos		P.9-6
Recorder Contents		P.9-6
SD VIDEO		P.9-6
Download Videos		P.9-4
Settings	Playback Mode	P.9-8
	Backlight	P.9-8
	Display Size	P.9-8
	Sound Effects	P.9-8
	Web Link Setting	P.9-8
	⓪Sound Output	P.9-8

Camera

Function	Refer to
Easy Auto Camera	P.8-3
Pro Auto Camera	P.8-5
Quick Camera	P.8-6
Fine Video Camera	P.8-16
Video Camera for Mail	P.8-17
Various Cameras	P.8-8
Album	P.8-18
Scan Barcode	P.11-34
Scan Card	P.11-36
Kanji Grabber	P.11-38
Review	P.8-21
Set Camera Key	P.8-28

Photo Camera (Example: Pro Auto Camera)

Function		Refer to
Switch Camera		P.8-6
Detect Personal		P.8-14
Self-timer		P.8-28
Picture Size		P.8-28
Focus Setting		P.8-28
Shutter Setting	Egao level	P.8-29
	Shutter Mode	P.8-28
	Shutter Sound	P.8-29
	Set Remote Shutter	P.8-28
Settings	Picture Quality	P.8-29
	ISO Sensitivity	P.8-29
	White Balance	P.8-29
	Exposure	P.8-29
	Shake Reducing	P.8-29
	Long Exposure	P.8-29
	Display Setting	P.8-29
	Set Send Key	P.8-29
Album		P.8-18
Save Setting	Save Pictures to	P.8-29
	Auto Save	P.8-29
	Background Save	P.8-29
Scene		P.8-8
Help		P.8-28
Mobile Light		P.8-29

Video Camera

Function		Refer to
Switch Camera		P.8-17
Simple Setting		P.8-16
Self-timer		P.8-30
Record Time/Size		P.8-31
Focus Setting		P.8-30
Shake Reducing		P.8-31
Settings	Video Quality	P.8-31
	Exposure	P.8-30
	Microphone	P.8-31
Review		P.8-21
Save Setting	Save Videos to	P.8-31
	Auto Save	P.8-31
	Video Encode	P.8-31
	Audio Encode	P.8-31
	Picture Setting	P.8-31
Display Size		P.8-31
Help		P.8-30
Mobile Light		P.8-31

Videos/Music

Function	Refer to
Videos/Music	P.9-2



Tools

■ PIM/Life

Function		Refer to
Calendar		P.11-2
Alarms		P.11-8
Wakeup TV		P.11-10
Relaxation Time		P.11-12
Tasks		P.11-6
Calculator		P.11-13
Expenses Memo		P.11-14
Osaifu-Keitai		P.11-15
Simulated Call	Receive Simulated Call	P.11-44
	Switch On/Off	P.11-19
	Set Caller	P.11-19
	Assign Tone	P.11-19
	Receive Timing	P.11-19
	For Silent Mode	P.11-44

■ PIM/Life: Osaifu-Keitai

Function		Refer to
Lifestyle-Appli		P.11-15
IC Card Settings	IC Card Status	P.11-44
	IC Card Lock	P.11-16
	Remote Lock	P.11-17
	Interface Settings	P.11-44
	Balance Info	P.11-43
	Set to Default	P.11-44

■ Clock/Gauge

Function	Refer to
Stopwatch	P.11-20
Countdown Timer	P.11-21
World Clock	P.11-22
Hour Minder	P.11-23
Pedometer	P.11-24
Compass	P.11-26
SI GPS Navi	P.11-27
Battery Meter	P.2-20

■ Doc./Rec.

Function		Refer to
Dictionary		P.3-14
Search		P.3-17
Document Viewer		P.11-30
Notepad		P.11-31
Scratch Pad		P.3-18
ASCII Art		P.11-32
Voice Recorder	Record Time	P.11-47
	Ring Songs/Tones	P.11-33
	Save Recording to	P.11-47
Barcode/ Scan	Scan Barcode	P.11-34
	Open Barcode	P.11-47
	Create QR Code	P.11-35
	Scan Card	P.11-36
	Kanji Grabber	P.11-38
	Scan Text	P.11-37
	Scanned Results	P.11-48
Phone Help		P.2-20

■ Connectivity

Function		Refer to
Wi-Fi		P.15-2
Bluetooth		P.15-12
Infrared	Switch On/Off	P.15-8
	Send All	P.15-9
	IrSS Key Setting	P.15-23
IC Transmission	1 File Reception	P.15-23
	Send All	P.15-11
USB Mode	Mass Storage	P.15-16
	Recorder Link	P.15-16
	MTP Mode	P.9-4
USB Charge		P.1-12
Memory Card		P.14-7
Backup/Restore		P.15-25

■ Connectivity: Wi-Fi

Function	Refer to
Switch On/Off	P.15-22
Create Profile	P.15-3
Profile List	P.15-22
Common Settings	P.15-22
Connect Information	P.15-22
Show MAC Address	P.15-22

■ Connectivity: Bluetooth

Function	Refer to
Switch On/Off	P.15-13
Add Device	P.15-13
Paired Devices	P.15-14
Send All	P.15-15
Setting Watch	P.15-24
My Device Settings	P.15-23
My Device Details	P.15-24



Data Folder

Function	Refer to
Pictures	P.8-22
DCIM	P.14-2
Ring Songs-Tones	P.11-33
S! Appli	P.10-2
Widget	P.10-3
Music	P.14-2
Videos	P.14-2
Lifestyle-Appli	P.11-15
Books	P.14-2
Customized Screen	P.3-4
Status Templates	P.14-2
Decoration Call	P.4-19
Flash@	P.14-2
Other Documents	P.14-2
Memory Status	P.14-2

Widget

Function		Refer to
Widget Store		P.10-3
Widget Contents		P.10-3
Widget History		P.10-8
Settings	Remove Contents	P.10-5
	Remove All Contents	P.10-9
	Auto Refresh	P.10-8
	AutoConnect Abroad	P.10-8
	Set Use Abroad	P.10-8
	Notification Setting	P.10-8
	Cookies	P.10-8
	Delete Cookies	P.10-8

TV

Function	Refer to
Digital TV	P.7-4
TV Player	P.7-9
TV-Image Folder	P.7-6
TV Link	P.7-15
TV Listing	P.7-7
Familink Remote	P.1-3
Reservation List	P.7-11
Settings	P.7-14
Recorder Contents	P.7-17

Settings

Function		Refer to
TV Alarm		P.7-18
Broadcast Data	Set Recording	P.7-16
	Image Location	P.7-16
	Notify Connection	P.7-15
	Location	P.7-15
	Manufacture Number	P.7-15
	Delete StationData	P.7-15
Screen Size(Portrait)		P.7-13
Screen Size(Landscape)		P.7-13
Set Landscape	Display Icon	P.7-14
	Display Panel	P.7-14
Panel On/Off		P.7-14
Sound Output		P.7-14
⑧Sound Output		P.7-14
Set Call Time Shift		P.7-16
Calls & Alarms		P.7-14
TV Reserve Prior		P.7-18
Save Recording to		P.7-16
Auto Exit Time		P.7-14
Smooth Mode		P.7-13

Phone

Function		Refer to
Phone Book		P.3-19
Add New Entry		P.3-19
Information		P.1-8
Call Log		P.4-10
Play Messages		P.4-5
Call Voicemail		P.4-15
S! Addressbook Back-up		P.15-19
My Details		P.2-20
Set Category		P.3-20
Mail Groups		P.5-16
Speed Dial/Mail		P.4-9
Ph.Book Settings	Sort Entries	P.3-21
	Select Phone Book	P.3-26
	Save New Entry	P.3-26
	New Number Prompt	P.3-24
	Vertical Display	P.3-24
	Horizontal Display	P.3-24
Call Log Setting		P.4-20
Manage Entries	Copy All	P.3-26
	Memory Status	P.3-26
	Change Mode(All)	P.3-26
	Delete All	P.3-26



Settings

■ Sound/Display

Function	Refer to
Mode Settings	P.2-26
Display	P.16-3
Customized Screen	P.3-4
Sounds & Alerts	P.3-5
Date & Time	P.16-2
言語選択 (Language)	P.16-3
Ringer Output	P.16-6
Earpiece Volume	P.4-17
Change Menu	P.2-9

■ Sound/Display: Display

Function		Refer to
Wallpaper		P.3-3
System Graphics		P.16-3
VeilView		P.2-26
Display Effects		P.16-3
Font Settings		P.3-2
Standby Display	Clock/Calendar	P.16-4
	Show Widget	P.16-4
	Show Operator Name	P.16-4
	Pedometer	P.11-45
Vivid Mode		P.16-3
Mini Battery		P.2-26
Greeting Message		P.16-3
Backlight		P.16-3
Display Saving		P.16-3
Display Manner		P.16-3
CLS Disp. Time		P.16-3
Caller Display		P.16-3
Dial Number		P.16-3

■ Sound/Display: Sounds & Alerts

Function	Refer to
Volume	P.16-5
Ringtone/videos	P.3-5
Machi-Uta	P.3-22
System Sounds	P.16-6
Vibration	P.3-5
Event Light	P.16-5
Set Key Illumi	P.16-4
Status Light	P.16-5
Any Key Answer	P.16-5
Surround	P.16-6

■ Sound/Display: Date & Time

Function	Refer to
Set Date/Time	P.16-2
Time Correction	P.16-2
Daylight Saving	P.16-2
Set Time Zone	P.16-2
Clock/Calendar	P.16-4
World Clock	P.11-22
Alarms	P.11-8
Set Holiday	P.11-39
Time Format	P.16-2
Date Format	P.16-2
Calendar Format	P.16-2

■ Phone/

Function		Refer to
User Dictionary		P.3-13
Set Key Shortcut		P.2-13
Motion Control		P.2-17
Vector Pad Settings	Scroll Speed	P.2-24
	Launch Spinguru Menu by	P.2-24
	Jog Speed	P.2-24
	Correct Vector Pad	P.2-24
Touch Panel	Touch Reaction	P.2-24
	Keypad Lock	P.1-7
	Correct Touch Panel	P.2-8
Set Key Light		P.16-4
Double Number	Switch On/Off	P.2-21
	Double Mode	P.2-23
	Password Entry	P.2-27
	Mode Name	P.2-27
	Reject By Line	P.2-27
	Show Missed	P.2-27
	Packet Warning	P.2-27
	Send Priority	P.2-27
Video/Music Menu Updates		P.9-2
Memory Card		P.14-7
Backup/Restore	Backup All Items	P.15-25
	Backup Selected Items	P.15-18
	Restore All Items	P.15-25
	Restore Selected Items	P.15-18
	Settings/Manage	P.15-25
Locks		P.13-2
Software Update		P.17-5
Master Reset	Reset Settings	P.16-8
	Reset All	P.16-8



Phone/☎: Memory Card

Function	Refer to
DPOF	Number of Copies P.8-27
	Settings P.8-32
	Check Settings P.8-27
	Reset Settings P.8-32
SD Local Contents	P.14-10
Format Card	P.14-7
Memory Status	P.14-2

Phone/☎: Locks

Function	Refer to
PIN Entry	P.13-2
Function Lock	P.13-2
IP Service Setting	P.16-7
Function Control	P.13-4
Application Lock	P.13-3
History Lock	P.13-3
Show Secret Data	P.13-3
Set Lock Message	P.13-5
Chg. Handset Code	P.2-19
Administrator Setting	P.2-19

Call

Function	Refer to
Call Time/ Data Counter	Call Timers P.4-11
	Data Counter P.4-20
	Call Time Counter P.4-20
	Minute Minder P.4-20
Answer Phone	Switch On/Off P.4-5
	Answer Time P.4-16
	Outgoing Message P.4-16
	Volume P.4-16
Voicemail/ Divert	Voicemail P.4-15
	Diverts P.4-14
	Cancel All P.4-15
	Status P.4-21
Video Call	Camera Picture P.4-23
	Incoming Picture P.4-23
	Outgoing Picture P.4-23
	Hold Guidance Pict P.4-23
	Backlight P.4-23
	Loudspeaker P.4-23
	Mute Microphone P.4-23
	Remote Monitor P.4-16
Show My Number	P.4-22
 Missed Calls	P.4-15
Int'l Calling	Int'l Prefix P.4-17
	Country Codes P.4-17
	Roaming Dial Assistant P.4-17
Call Barring	Bar Outgoing Calls P.4-22
	Restrict Destinations P.4-12
	Bar Incoming Calls P.4-22
	Reject Numbers P.4-21
	Change NW Password P.4-22

Function	Refer to
Decoration Call	Switch On/Off P.4-19
	Play in Receiving P.4-19
	Notice P.4-19
Slider Settings	Open to Answer P.4-23
	Close to P.4-23
Auto Answer	P.4-23
Call Waiting	P.4-21

Network

Function	Refer to
Select Network	P.16-7
Select Service	P.16-7
Re-search Signal	P.16-7
Offline Mode	P.2-18
Retrieve NW Info	P.16-7
Network Info	P.16-7
Wi-Fi	P.15-2
External Device	P.16-7



Index

A

AC Charger	1-4
Accessing Functions	2-3
Accessory	v
Administrator Code	2-19
After-Sales Services	17-41
Alarms	11-8
Canceling	11-9
Deleting	11-9
Editing entries	11-42
For Manner Mode	11-42
Link to World Clk	11-42
Album	8-18
Animation View	5-9
Answer Phone	4-5, 4-16
Antenna (for TV reception)	7-3
Anti Spam Measures	5-14, 5-28
Any Key Answer	16-5
AOSS™	15-3
Application Lock	13-3
ASCII Art	11-32
Auto Reply	5-10, 5-26
Auto Resend	5-2, 5-31
Auto Retry Function	5-2

B

Backlight	16-3
Backup	15-17
Settings/Manage	15-25
Bar Incoming Calls	4-22
Bar Outgoing Calls	4-22
Battery	1-4, 17-4
Battery Cover	1-2
Battery Meter	2-20
Blog Tool	12-12, 12-17
Bluetooth®	15-12

Blu-ray Disc recorders	15-16
Bookmarks	6-9
BookSurfing®	12-5

C

Calculator	11-13, 11-43
Calendar	11-2
Calendar Settings	11-39
Editing schedules	11-40
Call Barring	4-14, 4-22
Call Forwarding	4-14
Call Log	4-10, 4-19
Call Time Counter	4-20
Call Waiting	4-14, 4-21
Call Waiting (answering Line 2)	4-21
Caller ID	4-14, 4-22
Camera	8-2
Album	8-18
Capturing Still Images	8-5
Changing/saving camera settings	8-11
Photo Camera settings	8-28
Detect Personal	8-14
Recording Video	8-16
Review	8-21
Center Access Code	2-19
Change NW Password	4-22
Change PIN	13-5
Character Code List	17-11
Charging	1-4
Charging Terminals	1-2
Chat Folder	5-15, 5-29
Clock/Calendar	16-4
Compass	11-26
Composite	8-26
Countdown Timer	11-21
Create QR Code	11-35
Customer Service	17-42
Customized Screen (Japanese)	3-4

D

Data Broadcast (Japanese)	7-5
Change View (Data)	7-15
Returning to initial window	7-15
Set Recording	7-16
Data Counter	4-20
Data Folder	14-2
Files (attaching)	5-5, 14-3
Files (moving/copying)	14-4
Files (opening)	14-3
Files (renaming)	14-9
Folders (adding)	14-4
Selecting Multiple Files	14-4
Set Secret (folders)	14-4
Slide Show	14-3
Date & Time	16-2
Daylight Saving	11-22, 16-2
Decoration Call	4-8, 4-19
Delivery Report	5-9, 5-21, 5-31
Dialing from Call Log records	4-19
Dictionary	3-14
Digital Media Viewer	12-5
Digital TV (→ TV)	7-2
Adding Reception Areas	7-3
Area Setup	7-3
Auto Exit Time	7-14
AV Settings	7-13
Calls & Alarms	7-14
Change Area	7-13
Program Info. Search	7-13
Screen Size	7-13
Set Channels	7-3, 7-13
Set Call Time Shift	7-16
Smooth Mode	7-13
Sound Output	7-14
Sound Output	7-14
Subtitle/Sound	7-16



TV Alarm	7-18
Display	1-2, 1-8
Display (settings)	16-3
Display Effects	16-3
Display Saving	16-3
Document Viewer	11-30
Double Number	2-21, 2-27
Download Dictionary	3-13
DPOF	8-27
Add Date	8-32
Check Settings	8-27
For All Pictures	8-27
Index Print	8-32
Dual Mode	2-23

E

Earpiece	1-2
Earpiece Volume	4-17
e-Book Library	12-15
e-Book Viewer	12-5
e-Books (Japanese)	12-5, 12-15
Emergency Calls	4-2
English	16-3
Expenses Memo	11-14
External Device Connection	15-16
External Device Port	1-2

F

Face Arrange	8-25
Feeling Mail (receiving)	5-9
Feeling Mail (sending)	5-5
Focus (locking)	8-28
Focus Setting	8-28
Font Size	3-2
Format Card	14-7
Function Control	13-4
Function Lock	13-2

G

General Notes	xii
---------------------	-----

Graphic Mail	5-6
Group Calling	4-14, 4-21
Group Calling (opening another line)	4-21
Guide Usage Notes	ii

H

Handset Code	2-19
Handset Keys	1-3
Handset mail address	5-3
Handset Parts	1-2
Handset Power On/Off	1-6
Handset responses	3-5
Headphones (answering calls)	4-16
History Lock	13-3
Hour Minder	11-23
Assign Tone/Video	11-44
For Manner Mode	11-44
Link to World Clk	11-45
Vibration	11-44

I

IC Card Lock	11-16
IC Card Settings	11-16
IC Transmission	15-10
Ichi Navi	11-29
Indicators	1-10
Camera (Viewfinder)	8-6, 8-16
Display	1-10
Messaging (message list)	5-10
Music Playback Window	9-5
SI Quick News	12-2
Video Playback Window	9-6
Information window	1-8
Infrared	15-7
Receiving files	15-8
Sending files	15-9, 15-23
Infrared Port	1-2
Internal Antenna	1-2
International calls	4-4, 4-17
Internet	6-2

Accessing	6-3, 6-5
Basic Operations	6-6
Browser Settings	6-13
Enter URL	6-4, 6-5
History	6-4, 6-5
Saving Bookmarks/pages	6-9
Int'l Call	4-5
IP Service Setting	16-7
IrSS Transfer	15-7

K

Kanji Grabber	11-38
Key Assignments	17-8
Keypad Lock	1-7

L

Language	16-3
Large Font Menu	3-2
Light Sensor	1-2, 16-3
Link to Feeling	5-32
Link to World Clk	11-42, 11-45
Locks	2-19, 13-2
Loudspeaker	4-18, 4-23, 12-17

M

Machi-Uta	3-5
Mail Groups	5-16
Changing members	5-29
Deleting	5-29
Edit Name	5-29
Main Menu	2-6
Manner mode	2-18
Mass Storage	15-16
Master Reset	16-8
Format Card	14-7
Reset All	16-8
Reset Settings	16-8
Media Player	9-3
Delete All WMA	9-9
Playlists	9-7, 9-9, 9-10



Memory All Clear (S! Applications)	10-7
Memory Card	14-5
Format Card	14-7
Opening files	14-7
Memory Card Structure & Contents	17-24
Menu List	17-25
Camera	17-28
Data Folder	17-30
Entertainment	17-27
Messaging	17-25
Phone	17-30
S! Appli.....	17-27
Settings	17-31
Tools	17-29
TV	17-30
Videos/Music	17-28
Widget	17-30
Yahoo!	17-26
Menu Operations	2-6
Message List View	5-30
Message Notice	5-31
Messages (creating/sending) ... 5-4, 5-7, 5-19	
Attachments	5-22
Graphic Mail	5-23
Inserting signature manually	5-21
Messaging Settings	5-21
Previewing Outgoing Message	5-4
Recipient status	5-20
Recipients (editing)	5-20
Save to Drafts	5-21
Send Reservation	5-21
Sending from Drafts	5-29
Set Auto Play File	5-23
Set Sent Cancel	5-21
Signature	5-21
Speed Dial/Mail	5-20
Templates	5-23
Using sent messages	5-29
Messages (deleting)	5-19, 5-27
Auto Delete	5-30

Messages (forwarding)	5-29, 5-30
Messages (protecting)	5-12
Messages (receiving/checking)	5-9
Accessing new mail out of Standby	5-24
DL Size Limit	5-33
Mail List	5-24
Message List	5-10, 5-26
Message Window	5-10, 5-24
Retrieving complete S! Mail messages manually	5-11
Retrieving PC Mail	5-19, 5-34
Save to Data Folder	5-24
Messages (sorting)	5-14
Anti Spam Measures	5-14, 5-28
Messaging (→ SMS, S! Mail, PC Mail)	5-2
General Settings	5-30
PC Mail Settings	5-33
Receive (settings)	5-31
S! Mail Settings	5-32
Send/Compose (settings)	5-31
SMS Settings	5-35
Microphone	1-2
Minute Minder	4-20
Missed Call Notification	4-15
Mobile Light	1-2
Mobile Widget	10-3
Mode Settings	2-26
Motion Control	2-16
MTP Mode	9-4
Multi Job	2-14
Music (deleting)	9-9
Music (downloading)	9-4
Music (playing)	9-5, 9-8
My Details	2-20
Sending via Bluetooth®	15-25
Sending via IC Transmission	15-23
Sending via Infrared	15-23

N

Navi Appli	11-27
-------------------------	-------

Near Chat (Japanese)	12-11
Network Password	2-19
Notepad	11-31
Edit Text	11-46
Change Category	11-46

O

Offline Mode	2-18
Optional Services	4-14
Optional Services (checking status)	4-21
Osaifu-Keitai® (Japanese)	11-15
Balance Info	11-43
IC Card Settings	11-16
Locking	11-16
Set to Default	11-44

P

Pager Code List	17-10
PC (connecting handset)	15-16
PC Mail	5-2, 5-17
PC Mail (sending)	5-19
PC Site Browser	6-5
Pedometer	11-24
Pen Light	2-20
Personal Mode	3-7
Phone Book (deleting)	3-26
Phone Book (editing)	3-25
Phone Book (saving)	3-19
Phone Book (using)	3-21
Phone Book search	3-21
Phone Help	2-20
Picture Editor	8-22
PIN	17-2
PIN Entry	13-2
PIN Lock	17-2
Playlists	9-7, 9-9, 9-10
Printing	8-27
Printing (Bluetooth®)	8-27
Public wireless LAN services	15-6



Q

Quick Operations	2-3
Quick Silent	2-16

R

Received Msg. View	5-30
Record Caller Voice	4-18
Recorder Contents	9-6
Recorder Link	15-16
Reference URLs	17-23
Reject (calls)	4-16
Relaxation Time	11-12
Remote Lock (Osaifu-Keitai®)	11-17
Call Remote Lock	11-18
Count for Lock	11-44
Mail Remote Lock	11-17
Notice Settings	11-44
Remote Monitor	4-16
Reply	5-10, 5-19, 5-26
Auto Reply	5-26
Opening received message for reference	5-26
Set Quick Reply	5-26
Reply Assist Dictionary	3-13
Reset (→ Master Reset)	16-8
Reset All	16-8
Reset Settings	16-8
Retrieve NW Info	16-7
Retrieving Network Information	1-6
Review	8-21
RSS Feeds	6-10

S

S! Addressbook Back-up	15-19
Auto Sync Settings	15-25
Confirming password	15-25
Sync Log	15-25
S! Applications	10-2
S! Circle Talk	12-9, 12-17

Accepting requests	12-10
Initiating	12-10
IP Service Setting	16-7
Registering Members	12-9
S! Contents Store	12-4
S! FeliCa (→ Osaifu-Keitai®)	11-15
S! Friend's Status	12-6, 12-16
IP Service Setting	16-7
Opening Member Status	12-7
S! GPS Navi	11-27
S! Information Channel (Japanese)	12-3, 12-14
Weather Indicator	12-3
S! Mail	5-2
Attaching Files	5-5
Create Msg. Size	5-22, 5-33
Feeling Mail	5-5
Graphic Mail	5-6
S! Mail Settings	5-32
S! Mail (sending)	5-4
S! Quick News (Japanese)	12-2
Automatic Update	12-14
Deleting items	12-14
Safety Precautions	vi
SAR	xix
Saved Pages	6-9, 6-16
Scan Barcode	11-34
Open Barcode	11-47
Scanning during text entry	11-47
Using scan results	11-48
Scan Card	11-36
Using scan results	11-49
Scan Text	11-37
Scanning and pasting during text entry	11-50
Using scan results	11-50
Schedules (→ Calendar)	11-2
Scratch Pad	3-18
SD Local Contents	14-10
Search	3-17
Security Codes	2-19

Sent Msg. View	5-30
Set as Wallpaper	14-9
Set Date/Time	16-2
Set Key Light	16-4
Set Key Shortcut	2-13
Set Quick Reply	5-26
Set Sent Cancel	5-21
Set Time Zone	11-22, 16-2
Set to Default (S! Applications)	10-7
Shortcuts	2-13
Show My Number	4-22
Show Secret Data	13-3
Side Keys	1-3
Signature	5-21
Simple Menu	2-9
Simulated Call	11-19
Slide W paper	3-3
Slider Closed	1-2
Slider Open	1-2
Slider Positions	1-2
Small Light	1-2
SMS	5-2
SMS Settings	5-35
SMS (sending)	5-7
Snooze	11-8, 11-9
Softkeys	1-9
Software Update	17-5
Sounds & Alerts	3-5, 16-5, 16-6
Speaker	1-2
Specifications	17-18
Specifications (by function)	17-19
Basic Operations	17-19
Calling	17-19
Camera & Imaging	17-20
Connectivity & File Backup	17-22
Data Folder	17-22
Digital TV	17-20
Entertainment	17-21
Handy Extras	17-21
Internet	17-19



Memory Card	17-22
Messaging	17-19
Network	17-22
S! Applications & Widgets	17-21
Universal Operations, Etc.	17-19
Video & Music	17-20
Speed Dial/Mail	4-9, 5-20
Spinguru Menu	2-10
Standby	1-6
Standby Shortcuts	2-15
Status Icon List	1-8
Status Templates	14-2
Still images (capturing)	8-5
Easy Auto Camera	8-5
ISO Sensitivity	8-29
Long Exposure	8-29
Picture Size	8-28
Pro Auto Camera	8-5
Quick Camera	8-6
Shake Reducing	8-29
Shutter Sound	8-29
Using Various Cameras	8-8
White Balance	8-29
Still images (capturing & sending)	8-9
Still images (editing)	8-22
Additional editing options	8-32
Changing sizes	8-23
Face Arrange	8-25
Merge Panorama	8-26
Stopwatch	11-20
Strap Eyelet	1-2
Streaming	6-4
Swap Calls	4-21
System Graphics	16-3
System Sounds	16-6

T

Table of Contents	iii
Tasks	11-6
Deleting Tasks	11-7

Editing tasks	11-41
Opening Tasks	11-7
Text (editing)	3-12
Text Entry	3-6
Emoticons	3-10
Hiragana	3-7
Hiragana to Katakana/Alphanumeric Conversion	3-11
Input/Conversion	3-23
Inserting line breaks	3-22
Inserting Phone Book entry items	3-22
Inserting spaces	3-22
Katakana	3-8
Mail & Web Extensions	3-10
One-Hiragana Conversion	3-10
Personal Mode	3-7
Pictograms	3-8
Quick Conversion	3-11
Reset Log	3-22
Search Word	3-10
Single Kanji Conversion	3-7
Switching Entry Modes	3-6
Symbols	3-9
Undo conversion or recover deleted characters	3-22
Using Character Codes	3-22
Using Pager Code	3-22
When Target Word is Not Listed	3-7
Time Correction	16-2
Time Shift	7-12
Touch Panel (settings)	2-8, 2-24
Troubleshooting	17-6
TV (watching)	7-4
AV Mode	7-13, 7-14
Channels (saving)	7-13
Data Broadcast (Japanese)	7-5
Help	7-13
Program Info	7-7
TV Listing (Japanese)	7-7
Using wireless Headphones	7-14

TV Player	7-9
TV programs (recording/playing)	7-8, 7-9
Details	7-17
Marker List	7-17
Markers	7-17
Memory Remaining	7-17
Playback Pattern	7-16
Playing split files	7-16
Recorded programs (deleting)	7-17
Recorded programs (renaming)	7-17
Split File	7-16
TV Reserve Prior	7-18
TV Timers (watching/recording)	7-11
Setting Timer via Program Info	7-7
Timer entries (editing/deleting)	7-18
Timer log records (opening/deleting)	7-18
TV Alarm	7-18
Wakeup TV	11-10

U

USB Charge	1-5, 1-12
User Dictionary	3-13
Deleting entries	3-23
USIM Card	17-2
USIM PIN (→ PIN)	17-2
Utility Software	15-16

V

Vector Pad	2-2
Vector Pad Settings	2-24
VeilView	2-20
Vibration	3-5
Video (deleting)	9-10, 9-11
Video (downloading)	9-4
Video (playing)	9-6, 9-8
Video (recording)	8-16
Display Size	8-31
Microphone	8-31
Record Time/Size	8-31
Shake Reducing	8-31



Video (recording & sending)	8-17
Video Calling	4-6
Remote Monitor	4-16
Video Calls (answering)	4-6
Video Calls (placing)	4-7
Voice Calling	4-3
Voice Calls (answering)	4-3
Voice Calls (placing)	4-4
Voice Calls (placing while abroad)	4-5
Voice Recorder	11-33
Record Time	11-47
Save and Send	11-47
Save Recording to	11-47
Voicemail	4-14, 4-15
Volume (ringtones)	16-5

W

Wakeup TV	11-10
Wallpaper	3-3
Slide W paper	3-3
Warranty	17-41
Weather Indicator	12-3
Icon Update	12-15
Manual Update	12-3
Weather	12-15
Weather Indicator List	17-17
Widgets	10-3
Wi-Fi (Wireless LAN)	15-2
World Clock	11-22
WPS	15-3

Y

Yahoo! Keitai	6-3
----------------------------	-----

Objectives

Accessing Secret Files/Entries

Data Folder	14-4
Messaging folders	5-13
Phone Book	3-20
Schedules/tasks	11-4

Accessing the Internet

Direct Browser	6-5
From message text	5-25
From scan results	11-48, 11-50
Media Player	9-4
PC Site Browser	6-5
RSS Feeds	6-10
Yahoo! Keitai	6-3

Browsing/Viewing

Album	8-18
Digital Media Viewer	12-5
Direct Browser	6-5
Document Viewer	11-30
e-Books	12-5
PC Site Browser	6-5
S! Information Channel	12-3
S! Quick News	12-2
Yahoo! Keitai	6-3

Calculating

Calculator	11-13
Expenses Memo	11-14

Canceling

Alarm	11-9
Answer Phone	4-5
Call Forwarding	4-15
Customized Screen	3-22
Download Dictionary	3-13
Function Lock	13-2
Hour Minder	11-23
IC Card Lock	11-16
Keypad Lock	1-7
Large Font Menu	3-2
Manner mode	2-18
Offline Mode	2-18
S! Information Channel	12-3
Secret folders	5-28, 14-4
Simple Menu	2-9
Speed Dial entries	4-9
Voicemail	4-15

Changing

Administrator Code	2-19
Font Size	3-2
Font Weight	3-2
Handset Code	2-19
Handset mail address	5-3
Network Password	4-22
PIN	13-5

Changing Ringtones

Phone Book	3-20
Ringtone/videos	3-5
Via Data Folder	14-9

Composing/Sending Messages

Feeling Mail	5-5
From Call Log records	4-19
From Internet pages	6-12
From message text	5-25
From Phone Book	3-25
From received messages	5-10
From scan results	11-48, 11-50
From Scratch Pad	3-18
From sent messages	5-29
Graphic Mail	5-6, 5-23
Inserting ASCII Art	11-32
PC Mail	5-19
S! Mail	5-4
SMS	5-7

Copying

Calculation results	11-43
Data Folder files	14-4
From text entry window	3-12
Scan results	11-49, 11-51
Text (e-Books)	12-15
Text (Internet pages)	6-12
Text (Messaging)	5-25
Text (S! Information Channel pages)	12-15

Downloading

Content	12-4
Customized Screen	3-4
e-Books	12-5
Free content	12-4



Music.....	9-4
S! Applications	10-6
Video.....	9-4
Widgets	10-3
Exchanging Files	
Bluetooth®	15-12
IC Transmission.....	15-10
Infrared.....	15-7
Mass Storage.....	15-16
MTP Mode	9-4
Hiding Files/Entries	
Data Folder	14-4
Messaging folders	5-13
Phone Book	3-20
Schedules/tasks	11-39, 11-41
Inserting/Removing	
Battery.....	17-4
Memory Card.....	14-5
USIM Card	17-3
Locking/Restricting	
Application Lock.....	13-3
Call Log.....	13-3
Direct Browser	6-14
Function Control.....	13-4
Function Lock.....	13-2
Incoming/outgoing calls	4-22
Keypad Lock.....	1-7
Mail records	13-3
Osaifu-Keitai®	11-16
PIN Entry.....	13-2
Managing Schedules	
Calendar	11-2
Tasks.....	11-6
Measuring Time	
Countdown Timer.....	11-21
Stopwatch	11-20
Notifying Phone Number	
Opening My Details.....	2-20
Via IC Transmission	15-23
Via Infrared	15-23

Placing Calls

By entering phone numbers	4-4
From Call Log records	4-19
From Internet pages	6-12
From message text.....	5-25
From Phone Book	3-21
From scan results.....	11-48, 11-50
International calls	4-4
Speed Dial.....	4-9
Video Calls.....	4-7
While abroad.....	4-5

Playing

Answer Phone messages/Caller Voice	4-5
Files (Scan Barcode).....	11-48
Music.....	9-5
Recorded TV programs.....	7-9
Recorded TV programs from Timer log	7-18
Split files (TV).....	7-16
Streams.....	6-15
Video	9-6
Video (transferred from Blu-ray Disc recorders).....	9-6
Voice files	11-33
Voicemail messages	4-15

Rejecting

Calls from public phones.....	4-13
Calls from specified numbers.....	4-13
Calls from unsaved numbers.....	4-13
Undisplayable Caller ID.....	4-13
Withheld Caller ID	4-13

Resetting/Formatting

All settings.....	16-8
Handset.....	16-8
Memory Card	14-7

Saving

Backup	15-18
Captured still images.....	8-5, 8-6
Draft messages	5-21
Edited still images	8-22
Files (Internet).....	6-12

Files (S! Information Channel pages)	12-15
Graphic Mail templates	5-6
Mail attachments	5-24
Notepad entries.....	11-31
Phone Book entries.....	3-19
Recorded video	8-16, 8-17
Scan results	11-36, 11-47, 11-49
TV channels	7-13

Saving Phone Book Entries

Add New Entry	3-19
Data Folder files	14-9
During a call	4-18
From Call Log records.....	4-20
From message text.....	5-25
From received messages	5-25
From scan results.....	11-48, 11-50

Scanning

Business cards.....	11-36
Kanji	11-38
QR Codes	11-34
Text.....	11-37

Searching

Access points	15-4
Messages.....	3-17, 5-13
Music to download	9-4
Music to play	9-5
Notepad entries.....	11-46
Phone Book.....	3-21
Text (Internet pages)	6-12
TV program information.....	7-13
Video to play.....	9-6
Web Search.....	3-17

Sending via Mail

Data Folder files	5-5, 14-3
Notepad entries.....	11-46
QR Codes	11-35
Scan results	11-49, 11-50
Still images.....	8-9
URLs	6-12, 6-15
Video	8-17



Voice files	11-47
Setting Wallpaper	
From attached files	5-24
From scan results	11-48
From Sound/Display menu	3-3
Via Data Folder.....	14-9
Showing in Standby	
Clock/Calendar	16-4
S! Applications.....	10-6
Wallpaper	3-3
World Clock	11-22
Using as Alarm Clock	
Alarm	11-8
Hour Minder.....	11-23
Wakeup TV	11-10
Using Away from Home	
Alarm	11-8
Camera.....	8-2
Compass	11-26
Digital TV	7-2
Hour Minder.....	11-23
Osafu-Keitai®	11-15
Pedometer	11-24
Pen Light	2-20
Public wireless LAN services	15-6
Scratch Pad	3-18
Search	3-17
S! GPS Navi	11-27
Voice Recorder	11-33



Warranty & Service

■ Warranty

Warranty is provided when you purchase handset.

- Check the name of distributor and date of purchase.
- Read contents and keep in a safe place.
- The warranty term is described in the warranty.

■ After-Sales Services

See **P.17-6** "Troubleshooting" before contacting SoftBank Mobile for service or repairs.

If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (**P.17-42**) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, possible repairs are performed upon request at subscriber expense.

For other services, contact the distributor, the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (**P.17-42**).

Replacement parts are available for 6 years after termination of production.

- SoftBank Mobile is not liable for any damages resulting from use of this product.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of handset data. Keep a copy of Phone Book entries, etc. in a separate place.
- Disassembling or modifying handset may violate the Radio Law. Modified handset will not be repaired.



Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at **157**
for General Information or **113** for Customer Assistance

SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(International charges apply.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎0088-240-157
	Customer Assistance	☎0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎0088-241-157
	Customer Assistance	☎0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎0088-242-157
	Customer Assistance	☎0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎0088-250-157
	Customer Assistance	☎0088-250-113

