

Calendar & Tasks	13-2
Calendar	13-2
Tasks	13-4
Alarms	13-6
Using Alarms	13-6
Wakeup TV	13-8
Using Wakeup TV	13-8
Calculator	13-10
Using Calculator	13-10

Expenses Memo	13-11
Adding Expenses	13-11
Osaifu-Keitai®	13-12
Osaifu-Keitai® (Japanese)	13-12
Locking IC Card	13-13
Pretense Call	13-15
Faking Incoming Calls	13-15
Additional Functions	13-16
Troubleshooting	13-23

13

PIM/Lifestyle Tools



Calendar

Opening Calendar

- 1 **MENU** or  ➔ **Tools** ➔ In PIM/Lifestyle menu, **Calendar**



Calendar Window

Key Assignments

	Open previous page		Go to (Enter Date)
	Open next page		Find (By Category)
	Stamp ¹		Help
	Set Color ²		Toggle view
	Go to (Today) ³		Jump between weeks ^{4, 5}
	Find (By Subject)		Highlight date ⁵

¹Available in Month/3Month View.

²Available in Month/3Month/Week View

³In 6Month View, the current month is highlighted.

⁴In Week View, scroll time block.

⁵In 6Month View, highlight month.

Alternatively, tap Display to highlight date, etc.


Advanced

-   Changing default view  Changing date color  Editing schedules (And more on P.13-16 - 13-17)

Saving Schedules


Follow these steps to save subject, start/end date/time, Alarm and schedule details: Either Subject or Description must be saved per entry.

- 1 In Calendar window, select date

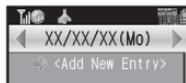


- 2 <Add New Entry>

- 3 Enter subject ➔ **Done** or 

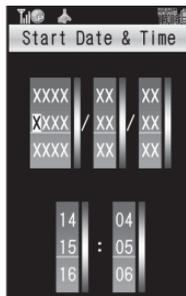

- 4 Enter start date/time ➔ **Accept** or 

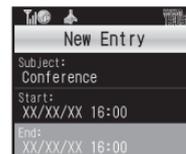

Schedule Entry Window

- 5 **End:** ➔ Enter end date/time ➔ **Accept** or 

- 6 **Alarm:**

- 7 **Alarm Time:** ➔ Select time ➔ **Confirm** or 

- 8 **Description:** ➔ Enter schedule details ➔ **Done** or 

- 9 **Save** or  ➔ **Saved**

All-Day Schedule

- In , **Check** or  ➔ **Accept** or 
➔ **From** 

Custom Alarm Time

- In , **Alarm Time:** ➔ **Other** ➔ Enter date/time ➔ **Accept** or  ➔ **Confirm** or  ➔ **From** 



At Alarm Time

Alarm activates; sounds/vibrates by related settings.



To stop Alarm, press **Stop** or .

Opening Schedule

While Alarm sounds/vibrates, **View** or 

When Another Function is Active

- Alarm may not activate until handset returns to Standby.

Incoming Calls

- Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

Opening Schedules/Tasks

- 1** In Calendar window, select date



Schedule List

- 2** Select schedule or task
- 3** **CLEAR/BACK** or  **→**
List returns

Opening Task List

In , highlight task **→ Options** or  **→ Go to Tasks**

Opening Related Message

After , **Options** or  **→ Related Mail**

Deleting Message from Schedule

After , **Edit** or  **→ Related Mail:**
→ Yes → Save or 

Accessing Secret Entries

[Calendar Window] **Options** or 
→ Unlock Temporarily → Enter Handset Code → OK or 

Deleting Schedules**One Entry**

- 1** In schedule list, highlight schedule **→ Options** or 
 - 2** **Delete**
 - 3** **This Appointment → Yes**
- All Entries of the Day**
- 1** In Calendar window, highlight date **→ Options** or 
 - 2** **Delete → All This Day → Yes**

Advanced

-  ● Searching entries ● Checking memory status ● Deleting all schedules ● Deleting entries by specifying week (Week View) ● Deleting entries by specifying month (Month/3Month View) ● Deleting entries in six months (6Month View) (P.13-17 - 13-18)



Tasks

Saving Tasks


Follow these steps to save subject, due date/time, Alarm and task details:
Either Subject or Description must be saved per entry.

- 1 **MENU** or ➔ **Tools** ➔ In PIM/Lifestyle menu, **Tasks**




- 2 **<Add New Entry>**

- 3 **Enter subject** ➔ **Done** or

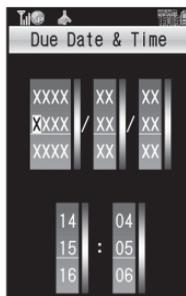

- 4 **Enter due date/time** ➔ **Accept** or

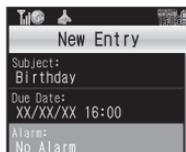

Task Entry Window

- 5 **Alarm:**



- 6 **Alarm Time:** ➔ **Select time** ➔ **Confirm** or

- 7 **Description:** ➔ **Enter task details** ➔ **Done** or

- 8 **Save** or ➔ **Saved**

Task with No Due Date/Time

In 4, **Check** or ➔ **Accept** or ➔ **From**

Custom Alarm Time

In 6, **Alarm Time:** ➔ **Other** ➔ **Enter date/time** ➔ **Accept** or ➔ **Confirm** or ➔ **From**

Advanced

Hiding entries Editing tasks Setting priority (And more on P.13-18 - 13-19)




Using Alarms

Setting Alarm

Follow these steps to set Alarm to sound at a specific time on a specific day of the week:

Set Snooze (Alarm repeats at set interval), Alarm Volume and Duration.

- 1** MENU or  ➔ **Tools** ➔ In PIM/Lifestyle menu, **Alarms**

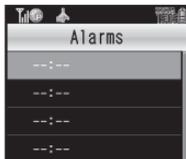

Alarm List

- 2** --:-- ➔ **Enter hour (24-hour format)** ➔ **Enter minutes** ➔ **Accept** or 




Alarm Menu

- 3** **Repeat:**



- 4** **Selected Days**

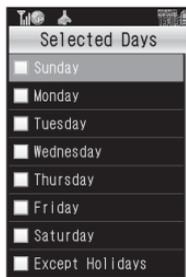

- 5** **Select day** (⇌) ➔ **Complete selection** ➔ **Confirm** or 

- 6** **Snooze:**

- 7** **Select interval**

• For custom intervals, select **Other**.

- 8** **Alarm Volume:**

- 9** **Adjust level**

- 10** **Duration:**

- 11** **Select time**

• For custom Duration, select **Other**.

- 12** **Save** or  ➔ **Saved**

• For more settings, repeat  - .

- 13**  or  ➔ **Alarm setting ends**

Selecting/Canceling All Days

In , **Options** or  ➔ **Check All** or **Uncheck All**

Excluding Holidays

In , select day (⇌) ➔ **Complete selection** ➔ **Except Holidays** ➔ **Confirm** or  ➔ From 

Activating Alarm Once or Daily

In , **Once** or **Every Day (All)** ➔ From 

Advanced

-  ● Editing entries ● Saving entry name ● Changing Alarm tone/video ● Setting handset to vibrate at Alarm Time (P.13-19)

At Alarm Time

Alarm activates; sounds/vibrates by related settings.



To stop Alarm, press **Stop** or any key.

When Another Function is Active

- Alarm may not activate until handset returns to Standby.

Incoming Calls

- Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.

When Snooze is Set

Alarm repeats at the set interval. Other Alarms do not activate while handset is Snoozing.

Canceling Snooze

While Snoozing, **Stop** or  ➔ **Yes**

- Snooze is automatically canceled after a period of time.

Canceling Alarm

1 In Alarm list, highlight entry
➔ **Options** or 

2 **Switch Off**

- Reactivate entry to use the same settings.

Reactivating Entry

In , **Switch On**

Deleting Alarm

One Entry

1 In Alarm list, highlight entry
➔ **Options** or 

2 **Reset Alarm** ➔ **Yes**

All Entries

1 In Alarm list, highlight entry
➔ **Options** or  ➔ **Clear All**

2 Enter Handset Code ➔ **OK**
or  ➔ **Yes**

Advanced

-  • Sounding Alarm tone even in Manner mode
- Activating Alarm based on World Clock time (P.13-19)




Using Wakeup TV

Setting Wakeup TV

Follow these steps to activate TV at a specific time on a specific day of the week:

- Complete Area Setup (P.8-3) beforehand.
- TV may not activate in poor signal conditions.

1 MENU or  ➔ **Tools** ➔ In PIM/Lifestyle menu, **Wakeup TV**

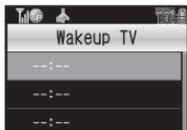

Wakeup TV List


2 --:-- ➔ Enter hour (24-hour format) ➔ Enter minutes ➔ **Accept** or 



Wakeup TV Menu

3 Repeat:

4 Selected Days

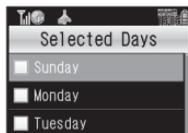

5 Select day (⇔) ➔ **Complete selection** ➔ **Confirm** or 

6 Channel:

7 Select channel

8 Save or  ➔ **Saved**
• For more settings, repeat **2** - **8**.

9  or  ➔ **Wakeup TV setting ends**

Selecting/Canceling All Days

In , **Options** or  ➔ **Check All** or **Uncheck All**

Excluding Holidays

In , select day (⇔) ➔ **Complete selection** ➔ **Except Holidays** ➔ **Confirm** or  ➔ From 

Activating TV Once or Daily

In , **Once** or **Every Day (All)** ➔ From 

Canceling Alarm

- Alarm activates at Wakeup TV time. To cancel Alarm, follow these steps:

[Wakeup TV Menu] **Alarm On/Off:** ➔ **Off** ➔ From 

Adjusting Alarm Volume

[Wakeup TV Menu] **Alarm Volume:** ➔ **Adjust level** ➔ From 




Advanced

-  ● Editing entries
-  ● Changing Alarm tone/video (P.13-20)

At Wakeup TV Time

TV activates after Alarm.

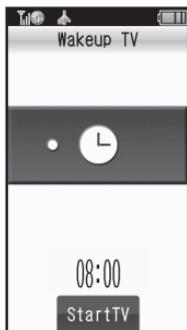

Stopping Alarm Instantly

- While Alarm sounds/vibrates, press **StartTV** or any key.

When Another Function is Active

- TV may not activate depending on the function.

After TV is On for a Period of Time

- Confirmation appears. Select **Yes** to exit TV.

Canceling Wakeup TV

- 1 In Wakeup TV list, highlight entry ➔ **Options** or
- 2 **Wakeup TV Off**
 - Reactivate entry to use the same settings.

Reactivating Entry

In , **Wakeup TV On**

Deleting Wakeup TV

One Entry

- 1 In Wakeup TV list, highlight entry ➔ **Options** or

- 2 **Reset Alarm** ➔ **Yes**

All Entries

- 1 In Wakeup TV list, highlight entry ➔ **Options** or ➔ **Clear All**

- 2 Enter Handset Code ➔ **OK** or ➔ **Yes**

Advanced

- Sounding Alarm tone even in Manner mode (P.13-20)



Using Calculator

1 MENU or  ➔ Tools ➔ In PIM/Lifestyle menu, Calculator



Calculator Window

Key Assignments	
+ (Add)	+ or 
- (Subtract)	- or 
x (Multiply)	x or 
÷ (Divide)	÷ or 
= (Sum)	= or 
C (Clear)	C or 
CM (Clear Memory)	CM or 
RM (Recall Memory)	RM or 
M+ (Add to Memory)	M+ or 
. (Decimal)	. or 
+/- (Positive/Negative Value)	+/- or 
% (Percentage)	% or 

Memory Calculation

- Numbers saved in Memory remain until handset power is turned off.

Incoming Calls

- Calculations are not affected. End the call to return to Calculator.

Using % Function

Use % or  to find definite percentage of a known value.

Example: Calculate 30% of 800,000

Enter 800,000 ➔ x ➔ 30 ➔ %

- 240,000 appears.

2 Use Keypad to enter digits ➔ Calculate

- Clear Memory before starting new Memory calculations.

3  or  ➔ Calculator ends

PIM/Lifestyle Tools

13

Advanced

-  Copying calculation results
-  Changing exchange rate for currency conversion
-  Converting currencies (P.13-20)



Adding Expenses

Entering Expenses

- 1 Enter amount →



- 2 Accept or



- 3 Select Category → Saved

Saving under Custom Category


In , *Other* → Enter name → *Done*
or → *OK* or

Checking Entries

- 1 MENU or → *Tools* → In PIM/Lifestyle menu, *Expenses Memo*



- 2 Totals

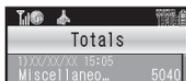

Expenses Memo List

- 3 CLEAR/BACK or → Menu returns

Saving Entries to Notepad

[Expenses Memo List] *Options* or → *Save to Notepad*

Deleting Entries

One Entry

- 1 In Expenses Memo list, highlight entry → *Options* or

- 2 *Delete Item* → *Yes*

All Entries

- 1 In Expenses Memo list, *Options* or → *Delete All*

- 2 Enter Handset Code → *OK* or → *Yes*

Advanced

Changing Category of saved entry Changing amount Renaming Categories (P.13-20)



Osaifu-Keitai® (Japanese)

Osaifu-Keitai® describes IC Card-equipped handsets that support e-money or credit functions/services. Osaifu-Keitai® encompasses a range of IC Card-based services on FeliCa-compatible SoftBank handsets. 931SH supports Osaifu-Keitai®. To use e-money, e-ticketing and reward points, etc., hold handset over a compatible reader/writer at shops, restaurants, and other retail outlets, etc.

Basics

Before using Osaifu-Keitai®, activate Lifestyle-Appli, complete registration, customize settings and charge accounts.

Starting Lifestyle-Appli

MENU or **⊙** ➔ **Tools** ➔ **In PIM/Lifestyle menu, Osaifu-Keitai** ➔ **Lifestyle-Appli** ➔ **Select application**

Lifestyle-Appli Precautions

- Contact Osaifu-Keitai® service providers for Lifestyle-Appli registration and usage details.
- Keep service passwords/customer service contact information, etc. in a separate place.


Using Osaifu-Keitai®

Follow these steps to conduct a transaction:

Example: Making an electronic payment

- Complete transactions without activating a Lifestyle-Appli. Make sure battery is adequately charged.
- Transactions are possible even when handset power is off or during calls or Internet transmissions.

- 1 Place  logo over reader/writer ➔ Confirm scan results**

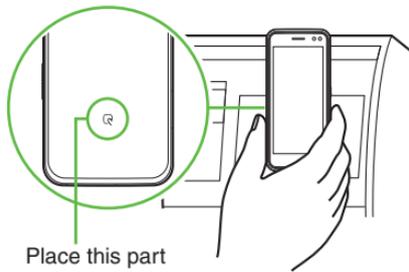

Place this part
over reader/writer

- Align handset parallel to reader/writer.

Important Osaifu-Keitai® Usage Note

SoftBank is not liable for damages resulting from accidental loss/alteration of IC Card data/settings.

When Placed Over Sensor

- If recognition is slow, move handset around slightly.
- Handset may respond automatically for some services.

Advanced

-  Enabling to view e-money balances
-  Moving applications up/down Balance Info list
-  Removing applications from Balance Info list (P.13-21)



Locking IC Card


IC Card Lock

Use this function to restrict access to/prevent unauthorized use of Osaifu-Keitai® on handset.

- MENU** or **Done** ➔ **Tools** ➔ In **PIM/Lifestyle** menu, **Osaifu-Keitai**



- IC Card Settings**

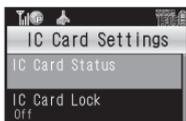

IC Card Settings Menu

- IC Card Lock** ➔ **On**
- Enter Handset Code** ➔ **OK** or **Done** ➔ **Yes**

Canceling IC Card Lock

In **Done**, **IC Card Lock** ➔ **Off** ➔ Enter **Handset Code** ➔ **OK** or **Done**

Remote Lock

Disable Osaifu-Keitai® remotely by mail or phone.

Mail Remote Lock	Send mail to activate Remote Lock
Call Remote Lock	Call from a specified phone to activate Remote Lock


Mail Remote Lock

Preparation on Handset

- In **IC Card Settings** menu, **Remote Lock** ➔ Enter **Handset Code** ➔ **OK** or **Done**



- Mail Remote Lock**

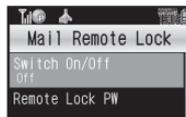

Mail Remote Lock Menu

- Remote Lock PW**
- Enter password** ➔ **Done** or **Done**
- Switch On/Off**
- On** ➔ **Save** or **Save**

Canceling Mail Remote Lock

In **Done**, **Off** ➔ **Save** or **Save**

■ **Activating Remote Lock via Mail**
If handset cannot receive mail IC Card Lock is not set.

- Send S! Mail** or e-mail to handset with password as **subject**
 - Leave other fields blank.
 - After handset receives message, IC Card Lock is set and notice is sent as a reply.

Advanced

- 👉 ● Customizing handset response to reader/writer commands ● Opening IC Card properties ● Changing IC Card Lock notice recipient (P.13-21)



Call Remote Lock

■ Preparation on Handset

- 1 In IC Card Settings menu, **Remote Lock** → Enter **Handset Code** → **OK** or 




- 2 **Call Remote Lock**



Call Remote Lock Menu

- 3 **Phone No. to Lck 1 or Phone No. to Lck 2**

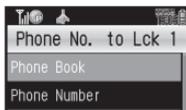

- 4 **Phone Book** → **Select entry** → **Select phone number**
 - Select **Phone Number** to enter directly.

- 5 **Switch On/Off**

- 6 **On** → **Save or** 

Enabling Activation via Public Phone

In , **Set Public Phone** → **On** → **From** 

Canceling Call Remote Lock

In , **Off** → **Save or** 

- **Activating Remote Lock via Phone**
If handset cannot receive calls IC Card Lock is not set.

- 1 **Using one of the specified phones, call handset**
 - Send Caller ID.
- 2 **Handset receives call** → **End the call**
 - The call is recorded as a Missed Call.
- 3 **Within three minutes, repeat 1 - 2 twice**



- After the third Missed Call, IC Card Lock is set; a message announces Remote Lock activation. Confirm the message and end the call.

If Series is Interrupted by Another Call

- Missed Call count is reset. Start over from the beginning.

Advanced

-   Changing required Missed Call count for Call Remote Lock
-  Restoring default Osaifu-Keitai® settings (P.13-21)




Faking Incoming Calls

Handset rings to emulate an incoming call.

- Pretense Call ringtone is fixed.
- Ringer may be muted by handset settings. To override Silent setting, see P.13-22.

Setting Pretense Call


- MENU** or  ➔ **Tools** ➔ In PIM/Lifestyle menu, **Pretense Call**

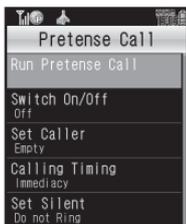

Pretense Call Menu

- Switch On/Off** ➔ **On**

- Set Caller**

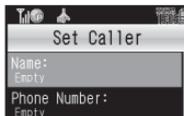

- Name:** ➔ Enter name ➔ **Done** or 

- Phone Number:** ➔ Enter phone number ➔ **Done** or  ➔ **OK** or 

- Save** or  ➔ PIM/Lifestyle menu returns

When Name and Phone Number are Unset

- Handset rings with Caller ID "Withheld."

Canceling Pretense Call

[Pretense Call Menu] **Switch On/Off**
➔ **Off** ➔ **Save** or 

Using Pretense Call

- (Long)**
 - Available regardless of Slider position.
 - Handset rings and incoming Voice Call window opens.
 - Ringtone stops after a period of time.
- In incoming Voice Call window, Answer** or 
 - Voice Call window opens. (Softkeys are dummies.)
- End Call** or  ➔ Pretense Call ends

Setting Wait Time

[Pretense Call Menu] **Calling Timing**
➔ **Select time** ➔ **Save** or 

When Calling Timing is Not *Immediacy*

- Press  / **CLEAR/BACK** or  /  during wait time to cancel Pretense Call activation.
- Pretense Call activation is canceled by incoming calls, Alarms, etc. during wait time.

Advanced

-  Starting via Pretense Call menu  Clearing caller information  Overriding Silent volume setting (P.13-22)



Calendar

View Settings

Changing default view	MENU or → Tools → In PIM/Lifestyle menu, Calendar → Options or → Calendar Settings → Default View → Select type
Changing date color	<p><small>[Start Here]</small> MENU or → Tools → In PIM/Lifestyle menu, Calendar → See below</p> <p>By Days of the Week Options or → Calendar Settings → Set Color → By Week → Select day → Select color</p> <p>By Date Highlight date → Options or → Calendar Settings → Set Color → By Date → Select color • Alternatively, highlight date and press to change color.</p> <p>Resetting "By Date" Colors Options or → Calendar Settings → Set Color → Reset Color → Select option → Yes</p>
Changing task view option	MENU or → Tools → In PIM/Lifestyle menu, Calendar → Options or → Calendar Settings → Tasks View → Select option
Adding stamps (Month View)	<p>MENU or → Tools → In PIM/Lifestyle menu, Calendar → Highlight date → Options or → Stamp → Select stamp</p> <p>• Alternatively, highlight date and press to add stamps.</p>
Hiding entries	MENU or → Tools → In PIM/Lifestyle menu, Calendar → Select date → Select entry → Edit or → Secret: → On → Save or

Removing/restoring preset holidays

MENU or → Tools → In PIM/Lifestyle menu, Calendar → Options or → Calendar Settings → Set Holiday → Highlight Private or Public tab → Select holiday (→)

Saving/Editing Entries

Setting Category/Location	<p><small>[Start Here]</small> MENU or → Tools → In PIM/Lifestyle menu, Calendar → Select date → Select entry → Edit or → See below</p> <p>Category Category: → Select Category → Save or </p> <p>Location Location: → Enter location → Done or → Save or </p>
Saving repetitive schedules	<p>MENU or → Tools → In PIM/Lifestyle menu, Calendar → Select date → Select entry → Edit or → Repeat: → Select frequency → Enter repeat time → Accept or → Save or </p> <p>• Repeat time is not available for <i>Every Year</i>.</p>
Saving S! Friend's Status information	<p><small>[Start Here]</small> MENU or → Tools → In PIM/Lifestyle menu, Calendar → Select date → Select entry → Edit or → S! Friend's Status: → Link Setting: → Linked → See below</p> <p>Availability Answer Status: → Edit → Confirm or → Confirm or → Save or </p> <p>• Set Category first.</p> <p>Comment Comment: → Enter text → Done or → Confirm or → Save or </p> <p>• Set Category first.</p>



Saving additional holidays	<p>Start Here MENU or ⊙ → Tools → In PIM/Lifestyle menu, Calendar → Options or ☒ → Calendar Settings → Set Holiday → Highlight Private tab → See below</p> <p>Adding Holidays <Empty> → Enter name → Done or ⊙ → Enter date → Accept or ⊙ → Select frequency → Save or ☒</p> <p>Editing Added Holidays Highlight holiday → Options or ☒ → Edit → Name: → Enter name → Done or ⊙ → Date: → Enter date → Accept or ⊙ → Select frequency → Save or ☒</p>
	<p>MENU or ⊙ → Tools → In PIM/Lifestyle menu, Calendar → Select date → Select entry → Edit or ⊙ → Select item → Edit in the same manner as saving schedules → Save or ☒</p>
	<p>Start Here MENU or ⊙ → Tools → In PIM/Lifestyle menu, Calendar → Select date → Select entry → Edit or ⊙ → Alarm: → See below</p> <p>Alarm Tone/Video Assign Tone/Video: → Select folder → Select tone/file → Confirm or ☒ → Save or ☒ • Select start point if required.</p> <p>Duration Duration: → Select time → Confirm or ☒ → Save or ☒</p>
Changing Alarm tone/video & duration	
Changing Alarm volume	<p>MENU or ⊙ → Tools → In PIM/Lifestyle menu, Calendar → Options or ☒ → Alarm Settings → Alarm Volume: → Adjust level</p>

Changing Vibration option	<p>MENU or ⊙ → Tools → In PIM/Lifestyle menu, Calendar → Options or ☒ → Alarm Settings → Vibration: → Select option</p>
Sounding Alarm tone even in Manner mode	<p>MENU or ⊙ → Tools → In PIM/Lifestyle menu, Calendar → Options or ☒ → Alarm Settings → For Manner Mode: → Ring → Yes</p>
■ Managing Entries	
Searching entries	<p>Start Here MENU or ⊙ → Tools → In PIM/Lifestyle menu, Calendar → See below</p> <p>By Subject Options or ☒ → Find → By Subject → Enter text → Done or ⊙ • Alternatively, press ☒ to search by subject.</p> <p>By Category Options or ☒ → Find → By Category → Select Category • Alternatively, press ☒ to search by Category.</p>
	<p>MENU or ⊙ → Tools → In PIM/Lifestyle menu, Calendar → Highlight date → Options or ☒ → Memory Status</p>
	<p>MENU or ⊙ → Tools → In PIM/Lifestyle menu, Calendar → Options or ☒ → Delete → All Appointments → Enter Handset Code → OK or ⊙ → Yes</p>
Checking memory status	
Deleting all schedules	



Deleting entries by specifying week (Week View)	<small>[Start Here]</small> MENU or → Tools → In PIM/Lifestyle menu, Calendar → See below
	Within One Week Highlight date → Options or → Delete → All This Week → Yes
	Up to the End of Previous Week Highlight date → Options or → Delete → Up to Last Week → Yes
Deleting entries by specifying month (Month/3Month View)	<small>[Start Here]</small> MENU or → Tools → In PIM/Lifestyle menu, Calendar → See below
	Within One Month Highlight date → Options or → Delete → All This Month → Yes
	Up to the End of Previous Month Highlight date → Options or → Delete → Up to Last Month → Yes
Deleting entries in six months (6Month View)	MENU or → Tools → In PIM/Lifestyle menu, Calendar → Options or → Delete → All This 6Months → Yes

Tasks

■ Task List

Hiding entries	MENU or → Tools → In PIM/Lifestyle menu, Tasks → Highlight task → Options or → Edit → Secret: → On → Save or
----------------	--

■ Saving/Editing Entries

Editing tasks	MENU or → Tools → In PIM/Lifestyle menu, Tasks → Highlight task → Options or → Edit → Select item → Edit in the same manner as saving tasks → Save or
Setting priority	MENU or → Tools → In PIM/Lifestyle menu, Tasks → Highlight task → Options or → Edit → Priority: → Select option → Save or
Changing Alarm tone/video & duration	<small>[Start Here]</small> MENU or → Tools → In PIM/Lifestyle menu, Tasks → Highlight task → Options or → Edit → Alarm: → See below Alarm Tone/Video Assign Tone/Video: → Select folder → Select tone/file → Confirm or → Save or • Select start point if required. Duration Duration: → Select time → Confirm or → Save or
Changing Alarm volume	MENU or → Tools → In PIM/Lifestyle menu, Tasks → Options or → Alarm Settings → Alarm Volume: → Adjust level



Changing Vibration option	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Tasks</i> → <i>Options</i> or → <i>Alarm Settings</i> → <i>Vibration:</i> → Select option
Sounding Alarm tone even in Manner mode	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Tasks</i> → <i>Options</i> or → <i>Alarm Settings</i> → <i>For Manner Mode:</i> → <i>Ring</i> → <i>Yes</i>

■ Managing Entries

Searching tasks	<small>(Start Here)</small> <i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Tasks</i> → <i>Options</i> or → <i>Find</i> → See below
	By Subject <i>By Subject</i> → Enter text → <i>Done</i> or
	By Due Date <i>By Due Date</i> → Enter date → <i>Accept</i> or
Sorting entries by priority	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Tasks</i> → <i>Options</i> or → <i>Sort</i> → <i>Priority</i>
Checking memory status	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Tasks</i> → <i>Options</i> or → <i>Memory Status</i>
Deleting all tasks	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Tasks</i> → <i>Options</i> or → <i>Delete</i> → <i>All Tasks</i> → Enter Handset Code → <i>OK</i> or → <i>Yes</i>

Alarms

Editing entries	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Alarms</i> → Select entry → Select item → Edit in the same manner as saving entries → <i>Save</i> or
Saving entry name	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Alarms</i> → Select entry → <i>Subject:</i> → Enter name → <i>Done</i> or → <i>Save</i> or
Changing Alarm tone/video	<small>(Start Here)</small> <i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Alarms</i> → Select entry → <i>Assign Tone/Video:</i> → See below
	Using Preset Tone or Data Folder File Select folder → Select tone/file → <i>Save</i> or • Select start point if required.
	Using Customized Screen Tone/Video <i>Customized Screen</i> → <i>Save</i> or
Setting handset to vibrate at Alarm Time	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Alarms</i> → Select entry → <i>Vibration:</i> → <i>On</i> or <i>Link to Sound</i> → <i>Save</i> or • Select <i>Link to Sound</i> to allow compatible SMAF files to control vibration.
Sounding Alarm tone even in Manner mode	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Alarms</i> → <i>Settings</i> → <i>For Manner Mode</i> → <i>Ring</i> → <i>Yes</i>
Activating Alarm based on World Clock time	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Alarms</i> → <i>Settings</i> → <i>Link to World Clk</i> → <i>On</i>



Wakeup TV

Editing entries	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Wakeup TV</i> → Select entry → Select item → Edit in the same manner as saving entries → <i>Save</i> or
Changing Alarm tone/video	<small>(Start Here)</small> <i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Wakeup TV</i> → Select entry → <i>Assign Tone/Video</i> : → See below Using Preset Tone or Data Folder File Select folder → Select tone/file → <i>Save</i> or • Select start point if required. Using Customized Screen Tone/Video <i>Customized Screen</i> → <i>Save</i> or
Sounding Alarm tone even in Manner mode	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Wakeup TV</i> → <i>For Manner Mode</i> → <i>Ring</i> → <i>Yes</i>

Calculator

Copying calculation results	While result appears, <i>Options</i> or → <i>Copy</i>
Changing exchange rate for currency conversion	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Calculator</i> → <i>Options</i> or → <i>Money Converter</i> → <i>Exchange Rate</i> → <i>Domestic</i> or <i>Foreign</i> → Enter rate → <i>Accept</i> or
Converting currencies	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Calculator</i> → Enter amount of money → <i>Options</i> or → <i>Money Converter</i> → <i>To Domestic</i> or <i>To Foreign</i> • Set Exchange Rate first.

Expenses Memo

Changing Category of saved entry	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Expenses Memo</i> → <i>Totals</i> → Select entry → Select Category
Changing amount	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Expenses Memo</i> → <i>Totals</i> → Highlight entry → <i>Options</i> or → <i>Change Amount</i> → <i>Edit</i> → <i>Accept</i> or
Renaming Categories	<i>MENU</i> or → <i>Tools</i> → In PIM/Lifestyle menu, <i>Expenses Memo</i> → <i>Edit Category</i> → Select Category → Enter name → <i>Done</i> or



Osaifu-Keitai®	
Enabling to view e-money balances	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Osaifu-Keitai → IC Card Settings → Balance Info → Enter Handset Code → OK or ● → Empty → S/ Appli or Lifestyle-Appli → Select application</p> <ul style="list-style-type: none"> For use with compatible Lifestyle-Applications. Start Lifestyle-Appli once before adding it to Balance Info list.
Moving applications up/down Balance Info list	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Osaifu-Keitai → IC Card Settings → Balance Info → Enter Handset Code → OK or ● → Highlight application → Options or → Move → Select location</p>
Removing applications from Balance Info list	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Osaifu-Keitai → IC Card Settings → Balance Info → Enter Handset Code → OK or ● → Highlight application → Options or → Delete</p>
Customizing handset response to reader/writer commands	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Osaifu-Keitai → IC Card Settings → Interface Settings → Enter Handset Code → OK or ● → Select item → Off</p>
Opening IC Card properties	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Osaifu-Keitai → IC Card Settings → IC Card Status</p>

Changing IC Card Lock notice recipient	<p>Start Here MENU or ● → Tools → In PIM/Lifestyle menu, Osaifu-Keitai → IC Card Settings → Remote Lock → Enter Handset Code → OK or ● → Mail Remote Lock → Notice Settings → Send Notice → See below</p> <p>Changing Recipient</p> <p>To Set Recipient → Set Recipient → Select method → Select/set number/address → CLEAR/BACK or → Save or </p>
	<p>Disabling Notice</p> <p>Off → CLEAR/BACK or → Save or </p>
Changing required Missed Call count for Call Remote Lock	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Osaifu-Keitai → IC Card Settings → Remote Lock → Enter Handset Code → OK or ● → Call Remote Lock → Count for Lock → Enter Missed Call count → Accept or ● → Save or </p>
Restoring default settings	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Osaifu-Keitai → IC Card Settings → Set to Default → Enter Handset Code → OK or ● → Yes</p>



Pretense Call

Starting via Pretense Call menu	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Pretense Call → Run Pretense Call → Yes</p> <ul style="list-style-type: none"> • Pretense Call starts immediately regardless of Calling Timing setting. • Settings remain even after starting Pretense Call during setup.
Clearing caller information	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Pretense Call → Set Caller → Reset or ☒/ → Yes → OK or \y1 → Save or \y1</p>
Overriding Silent volume setting	<p>MENU or ● → Tools → In PIM/Lifestyle menu, Pretense Call → Set Silent → Ring → Yes → Save or \y1</p>



Osaifu-Keitai®

Cannot use Osaifu-Keitai® (S! FeliCa)

- Battery may be low. Charge battery or install a charged battery.

Recognition via reader/writer takes time

- Check  logo area. Foreign articles can block/hamper recognition.

Call Remote Lock does not activate even after specified number of Missed Calls

- Missed Call count is reset by calls from other numbers. If series is interrupted, start over from the beginning.
- When Call Forwarding is active, Missed Calls may not be recorded.

Wakeup TV

TV does not activate with specified channel

- If Wakeup TV Time arrives while TV is active, channel does not switch to the specified one.