Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser or Direct Browser.

● Service requires a separate contract; retrieve Network Information to use these services.

● For more about Yahoo! Keitai, see SoftBank Mobile Website (**P.9-1**).

● Outside Japan, Yahoo! Keitai and PC Site Browser cannot be used over Wi-Fi.

Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. (Information fees may also apply.) To prevent automatic connection, select an appropriate option for *Script Settings*, *Flash® auto-download* and *Download Videos* in Security Settings (e.g., via Browser Settings for Yahoo! Keitai).

Security

Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

Opening Secure Pages

● A confirmation appears. Choose *Yes* and press ● to proceed.

● When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GMO GlobalSign, RSA Security, SECOM Trust Systems and Comodo Japan cannot be held liable for any damages associated with the use of SSL.

Using Yahoo! Keitai

Access Yahoo! Keitai sites via 3G Network or Wi-Fi.

● To use Wi-Fi, subscribe to Keitai Wi-Fi and complete related settings.
● Within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
● Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
● Internet pages may not open depending on connection/Server status, etc.

Using Yahoo! Keitai Main Menu

Browse Yahoo! Keitai sites from Yahoo! Keitai Main Menu.

1 ⓨ ➡ **Connection starts**

Cursor

Internet Page

● Yahoo! Keitai Main Menu opens.
● To disconnect, press ⓨ.

2 **Highlight menu item ➡ ●**
● Corresponding page opens.
● Repeat **2** to open additional links.

3 ☎ ➡ *Yes* ➡ ● ➡ **Page closes**

Returning to Previous Pages
  [Internet Page] ⓨ ➡ **Previous page opens**
  ■ Follow these steps to return to the initial page:
  [Internet Page] ⓔ ➡ *Forward* ➡ ●
Returning to Yahoo! Keitai Main Menu
  [Internet Page] ⓔ ➡ *Yahoo! Keitai* ➡ ●
User Authentication
● Follow these steps to open pages requiring authentication:
  Enter user ID or password ➡ ● ➡ ⓨ
Using History
  ● ➡ *Yahoo!* ➡ ● ➡ *History* ➡ ●
  ➡ **Select record ➡ ●**
Entering URLs Directly
  ● ➡ *Yahoo!* ➡ ● ➡ *Enter URL* ➡
  ● ➡ **Enter URL ➡ ●**
Accessing メニューリスト Directly
  ● ➡ *Yahoo!* ➡ ● ➡ *Menu List* ➡ ●
  ■ メニューリスト is a portal to Yahoo! Keitai content and services. (Includes a link to lists of sites supporting English.)
Switching between 3G and Wi-Fi Manually
  [Internet Page] ⓔ ➡ *Convenient Functions* ➡ ● ➡ *Switch Wi-Fi/3G*
  ➡ ● ➡ **Select network ➡ ●**

Browsing PC Sites

View PC Internet sites via PC Site Browser or Direct Browser. (Direct Browser requires Wi-Fi connection.)

- To use Wi-Fi, subscribe to Keitai Wi-Fi and complete related settings.
- When using PC Site Browser within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Browsing PC sites via PC Site Browser may incur high charges depending on subscribed price plan.
- Internet pages may not open depending on connection/Server status, etc.

1 ● ➡ *Yahoo!* ➡ ●

2 *PC Site Browser* or *Direct Browser* ➡ ●

3 *Homepage* ➡ ● ➡ **Connection starts**

Pointer

Internet Page

- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, press ⊙.

4 **Highlight menu item** ➡ ●
- Corresponding page opens.
- Repeat 4 to open additional links.

5 ⊙ ➡ *Yes* ➡ ● ➡ **Page closes**

Direct Browser
- Use this Wi-Fi-based browser to view PC sites without using SoftBank 3G Network service.

Returning to Previous Pages
 [Internet Page] ⊙ ➡ **Previous page opens**
 ■ Follow these steps to return to the initial page:
 [Internet Page] ⊚ ➡ *Forward* ➡ ●

Returning to Yahoo! JAPAN Home
 [Internet Page] ⊚ ➡ *Homepage* ➡ ●

User Authentication
 Enter user ID or password ➡ ● ➡ ⊙

Using History
 In 3, *History* ➡ ● ➡ Select record ➡ ●

Entering URLs Directly
 In 3, *Enter URL* ➡ ● ➡ Enter URL ➡ ●

Switching between 3G and Wi-Fi Manually (PC Site Browser)
 [Internet Page] ⊚ ➡ *Convenient Functions* ➡ ● ➡ *Switch Wi-Fi/3G* ➡ ● ➡ Select network ➡ ●
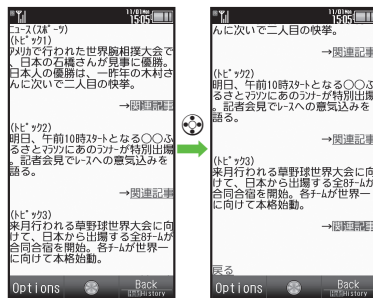
Basic Operations

Page Browsing

Scrolling Pages

If page content continues beyond view, use 🕹 to scroll pages.
Long Press 🕹 to scroll continuously.

Options Back History

Switching Frames

On framed pages, Long Press 🔲 to switch active frame.

Frames

- In pointer navigation, point to a frame and press ● to select it.
- Otherwise, use 🕹 to select one.
- Alternatively, tap a frame to select it.

Viewing Single Frame
[Internet Page] Select frame ➡ ✉ ➡ *Convenient Functions* ➡ ● ➡ *Frame In* ➡ ●
■ To return, press 🔙.

Tabbed Browsing

Open another page in a new tab and switch between tabs.

■ **Opening a New Tab**

1 **On a page, select menu item ➡ ✉ ➡ *Tab Menu* ➡ ●**
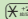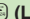
2 ***Open in New Tab* ➡ ●**

Tab

■ **Switching Tabs**

1 **✳ (Long) ➡ ◉ Select tab ➡ ●**
- In pointer navigation, point to a tab and press ● to open it.
- Alternatively, tap a tab to open it.

Closing Tabs
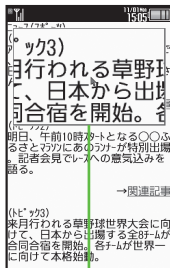✳ (Long) ➡ ◉ Select tab ➡ ● ➡ ✉ ➡ *Tab Menu* ➡ ● ➡ *Close Tab* or *Close All Other Tabs* ➡ ●

Selecting Items in Enlarged View

Enlarge area to select items with finger.

1. **On a page, Long Touch area**

Enlarged View

2. **Drag to highlight item in enlarged view ➡ Release**

Enlarging Areas in Pointer Navigation
[Internet Page] Point to area ➡
7🔘 (Long)
- Use 🔘 to move pointer in enlarged view; highlight item and press ● to execute it.
- To close enlarged view, press a key other than 🔘.

Selecting Text

Activate Drag Mode in pointer navigation to enable text selection. Select text to copy or look up words in dictionaries. Follow these steps to use a dictionary: (Text may not be selectable or linked page may open depending on site or page.)

1. **On a page, point to first character ➡ ● (Long)**
- Drag Mode activates.

2. **Highlight text range**

3. ●

4. (辞書∅) ➡ **Select dictionary ➡ ●**
- Dictionary opens with text inserted.
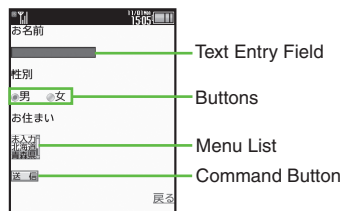
5. *Search* ➡ ● ➡ **Select word, etc. ➡ ●**

Starting Over
After ❸, point to first character ➡ ●
➡ From ❷

Additional Page Operations

Enter text or select/execute items.

Text Entry Field

Buttons

Menu List

Command Button

Text Entry

1 **On a page, select text entry field ➡ ⦿**

2 **Enter text ➡ ⦿**
● Internet page returns.

Using Entered Text (Input Memory)
[Internet page] Select text entry field
➡ ⦿ ➡ ⊠ ➡ *Insert/Font Size* ➡ ⦿
➡ *Input Memory* ➡ ⦿ ➡ Select text
➡ ⦿

Pull-down Menu Item Selection

1 **On a page, select menu list field ➡ ⦿**

2 **Select item ➡ ⦿**

When Multiple Selection is Supported
● Select items as needed and press ⦿.

Page Item Indicators

■ **Selection Items**
Buttons ◯ or boxes ☐ appear.

1 **On a page, select button or box ➡ ⦿**

● ◯/☐ changes to ◉/☑.

■ **Execution Items**
Execute the assigned command.

1 **On a page, select command ➡ ⦿**