The Vodafone 802N Quick Start Guide ❶

In just a few minutes we'll show you how easy it is to use the new features of your 802N. This advanced handset can take advantage of the faster 3G network, and we have specially enhanced it to make the most of the Vodafone live! multimedia service.

You'll see how quickly you can make video calls, take pictures and video clips with its built-in digital camera, send photos, sounds and video clips in MMS, and connect to Vodafone live!.

You'll also be able to personalise your handset by downloading new ringtones, games and wallpapers.

Getting started

1. Insert your USIM card:

Make sure the handset power is off. Slide off the back cover, and remove the battery. Slide your Vodafone USIM card (with the gold contacts facing downwards) into its slot, until it clicks into place. Replace the battery and cover. USIM card is an IC card that contains customer information such as the handset number. Without the USIM card, all network connection such as calls, emails, Web are unavailable.

2. Insert the miniSD memory card:

Open the side miniSD slot and slide the miniSD card in (miniSD memory card not included with handset).

3. Turn it on:

Make sure the battery is charged (see the User Manual for details). Open the handset, then press and hold the 🕾PWR key. (You do the same to turn it off again.)

The handset ❷
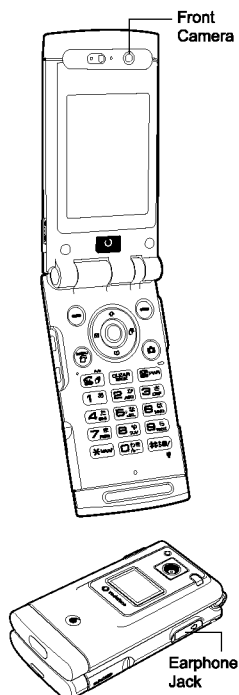
Keys and navigation

Multi Selector: press the left/right/up/down keys to move around icons and menu lists. In standby mode, up opens the Shortcut menu, down opens Phone Book, left opens Recieved Messages, and right opens call logs.

Centre Key: use to select an action or highlighted menu item, or select the middle icon at the bottom of the screen.

Softkeys: select whatever option is displayed in the bottom left or right of the screen. (In standby mode left opens **Messaging**, right opens **Vodafone live!**).

Start Key: makes or answers a call. In standby mode, goes to call logs.

Power/End Key: press to end a call, or to return to the standby screen. Press and hold to turn the handset on and off. During an incoming call, press to place the call on hold.

Menu/Task Menu Key: opens Main Menu in standby mode. Press to open Task Menu for activating multiple tasks.

Clear/Back Key: use to delete numbers and text, or to go back to a previous screen.

Camera Key: opens the Camera menu.

Front Camera

Earphone Jack

3G

The 3G network is designed to carry data faster, giving you new levels of speed and service. As well as enabling video calling (see below), you'll experience significantly faster downloads, you'll find richer content, and you can stream video and music too.

Voice calls

Make a call:

In standby mode, enter the number using the keypad and then press the ⬛ key. Press ⬛ to end the call.

To call from Redial list, press ⬛ or ◉ in standby mode (To open Received Calls list, press ⬤[Recv] from the Redial list). Scroll to the number you want and press the ⬛ key to start dialling. You can also press ◉ to access Phone Book from standby mode.

Answer a call:

Open the handset and press ⬛ or ◉ [Answer].

Make and receive video calls with your 802N. The other person you are calling must have a compatible 3G handset and be in a 3G area too.

Make and receive a video call

Make a call:

In standby mode, enter the number using the keypad and then press ⬤[TV]. To use your Redial list, press ⬛ or ◉ in standby mode. Select the number you want and press ⬤[TV]. You can also do the same from your Phone Book (press ◉ in standby mode).

Answer a call:

Press ⬤ [TV] to answer as a video call. To answer without sending your image, press ◉ [Answer] ⬛ .

With the built-in camera with digital zoom it's easy to take photos and video clips.
You can send these to family and friends as a picture or video message (MMS - see page 6)
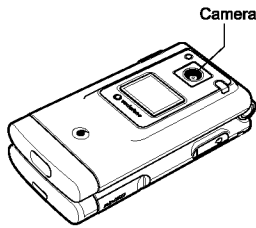
Camera

Take and send a photo or video clip

1. **Open Camera menu:**
   Press ⊙ in standby mode or select **Camera** from the Main Menu.
2. **Take a photo:**
   Select **Photo Mode** or **Digital Camera Mode** and press ⊙ . Use ⊙ to zoom in or out, and press ⊙
   [ON]/[OFF] to turn the camera light on and off.
3. **Take a video clip:**
   Select **Video Mode** or **Long Duration Mode** from the Camera menu. Press ⊙ **[Record]** to start
   recording then press ⊙ **[Stop]** to stop.
   Use ⊙ to zoom in or out, and press ⊙ **[ON]/[OFF]** to turn light on and off.
4. **Save and send the photo or video clip:**
   Press ⊙ **[Save]** then choose **[YES]** and press ⊙ **[Select]**. Edit title and press ⊙ **[Set]**. Select location
   to save the photo or video clip.
   To send the photo or video clip, Press ⊙ **[Func]** and select **Create Message**. See page 6 for details.
5. **Settings:**
   With the camera active, press ⊙ **[Func]** to change settings.

With MMS you can send more than just text messages - you can send pictures, video clips and
sounds as well!

Create and send a new message

1. **Start a new message:**
   Press ⊙ **[✉]** in standby mode (or select **Messaging** in the Main Menu) then select **Create
   Message**.
2. **Enter the text:**
   Press ⊙ **[Edit]** and use the keypad to write your text. Press ⊙ **[Chars]** in the Message screen to cycle
   through entry modes. To enter pictographs or symbols, press ⊙ **[Func]**. When you have finished
   entering text, press ⊙ **[Set]**. A new text entry field is automatically created. Select the blank entry field
   and press ⊙ **[Edit]** to create a new slide.
3. **Add a photo or sound file:**
   In **Create Message** screen, use ⊙ to scroll down to the toolbar, then scroll sideways to select 🖼 icon
   or 🔊 icon. Press ⊙ **[Add Image]** or ⊙ **[Add Sound].** Select an image or sound then press
   ⊙ **[Select]** to attach to message and return to **Create Message**.
4. **Preview:**
   Press ⊙ **[Function]** and select **Preview** to see and hear your message. Press ⊙ to return to the
   Create Message screen.

Create Message
Size:13 KB   MMS
To:

Subject:

Settings
Message Type:MMS

Edit   Function
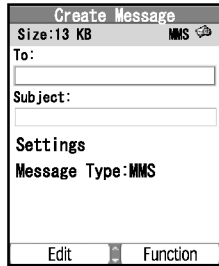
5. Address your message:

In Create Message screen, use ⊙ to scroll down to the toolbar then select the ✈ icon and press ⊖ **[Recipient]**. Select the **To:** entry field. Press ⊖ **[Edit]** to enter an address using the keypad. To search a recipient from **Phone Book** or **Messaging Log**, press ⊖ **[Function]** then select **Look-up Address**.

6. Enter subject:

Use ⊙ to select **Subject:** entry field and press ⊖ **[Edit]**. Enter subject using keypad.

7. Send your message:

Press ⊖ **[Function]** then select **Send** and press ⊖ **[OK]**.

Messaging tips

1. Received messages:

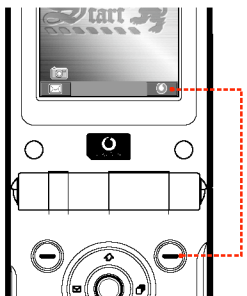Received messages are saved in **Messaging>Received Messages**.

2. Sending to more than one person:

Select the **To:** entry field, press ⊖ **[Function]** and select **Add Recipient**. Select send type (**To:**, **Cc:**, or **Bcc:**). Add more mobile numbers or email addresses.

Vodafone live!

Vodafone live! brings you new and exciting ways to communicate, to access information, music and games, and to personalise your handset.

Connect to

1. Connect:

In standby mode, press ⊖ [◉] to access the Vodafone live! main menu. To exit, press the CLEAR/BACK key.

2. Browsing:

Simply highlight the item you want to select, then press ⊖ **[Select]** to open that page. Press CLEAR/BACK to go back a page. Press ⊖ **[Function]** to open the Function menu. For English menus, scroll down to the bottom of the Vodafone live! menu and select **English**.

3. Bookmarks:

To bookmark a page, press ⊖ **[Function]** then select **Save>Mark page** and press ⊖ **[OK]**. To go directly to a favorite page, press 🔲 then select **Vodafone live!>Bookmarks**. Select a bookmarked page and press ⊖ **[Open]**.

4. New contents:

Vodafone live! is always evolving to bring you new and better services - keep checking to see what's new.

Note: your view of the main screen may be slightly different.

Change your 802N whenever you want by downloading new real music ringtones, videos, games, applications and background wallpaper from Vodafone live!. You can also stream (view or listen only) video and audio...

Download to your handset

1. Wallpaper, screensavers and ringtones:
Press 🖐 in standby mode and select **Data Folder>Pictures>More Pictures.** Use 🔄 to select **[YES]** and press ⦿ **[Select]** for images and wallpaper. For ringtones and sounds, select **Data Folder>Sounds & Ringtones>More Sounds.** Use 🔄 to select **[YES]** and press ⦿ **[Select]**. Follow the on-screen instructions to download.

2. V-appli:
For games, press 🖐 in standby mode and select **Vodafone live!**. Open a V-appli site and follow the on-screen instructions to download.

3. Videos:
Press 🖐 in standby mode and select **Data Folder>Videos>More Videos.** Use 🔄 to select **[YES]** and press ⦿ **[Select]**. Follow the on-screen instructions. Your video will automatically start playing. The downloaded file is saved to **Main Menu>Data Folder>Videos>Inbox.**

3G downloading

In 3G areas you should find that downloads happen faster - which makes a big difference for video and music clips.

For more information see the User Guide. Or contact your local Customer Services.

Handset hints

1. Manner mode:
In standby mode, press and hold the [#] key. Press and hold the [#] key again to restore the ring tone.

2. Media player:
Use Media Player to play sound and video files, either downloaded from Vodafone live! or pre-installed in the 802N. Also playback video clips recorded on the handset. To open Media Player, press 🖐 in standby mode and select **Media Player**.