4

Phone Book

Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

1 *MENU* or ● ➡ *Phone* ➡ *Add New Entry*

2 *Last Name:* ➡ **Enter last name** ➡ *Done* or ● ➡ *First Name:* ➡ **Enter first name** ➡ *Done* or ●

● Characters entered for names (reading for kanji) appear.

3 *Add Phone Number:* ➡ **Enter phone number** ➡ *Done* or ● ➡ **Select type**

● To save additional phone numbers, repeat **3**.

4 *Add Email Address:* ➡ **Enter mail address** ➡ *Done* or ● ➡ **Select type**

● To save additional mail addresses, repeat **4**.

5 *Category:* ➡ **Select Category**
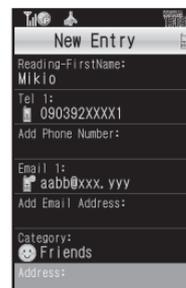
Phone Book Entry Window

6 *Save* or ＼Y'／
● Entry is saved to Phone Book.

Incoming Calls while Creating Entry
● Contents are temporarily saved. End the call to return.
Selecting Mode in Dual Mode (P.2-27)
　[Phone Book Entry Window] *Mode:*
　➡ **Select mode**

Advanced

@

⬚ ●Saving other information ●Setting Light Color ●Changing vibration pattern ●Editing Phone Book entries ●Setting incoming mail ring time ●Renaming Categories ●Moving Categories (**P.4-8** - **4-9**)

4

Phone Book

4-2

Personal Ringtone

Set tone for calls from saved numbers.

1 **In Phone Book entry window, select item, e.g., *Tone-Voice Call:***

> Tily@ ▲
> For Voice Call
> Assign Tone
> Set Play Point
> Remove Tone/Video
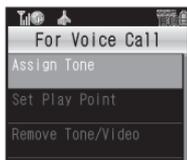
2 ***Assign Tone* ➡ Select folder**

3 **Select tone/file**

Saving Secret Entries

Restrict access to Phone Book entries by saving them as Secret entries.

1 **In Phone Book entry window, *Secret:***

2 ***On***

Accessing Secret Folders
ⓐ or ⓠ ➡ *Options* or ▨ ➡ *Unlock Temporarily* ➡ Enter Handset Code ➡ *OK* or ⓞ

Customizing Response by Category

1 ***MENU* or ⓞ ➡ *Phone* ➡ *Category Control***

> Tily@ ▲
> Category Control
> No Category
> Family
> Friends
> Business
> Shopping
> VIPs

Category Control Menu

2 **Highlight Category ➡ *Options* or ▨ ➡ Select item**

3 **Select item ➡ Select item, e.g., *Assign Tone* ➡ Customize responses ➡ *Confirm* or ▧**
● Customize responses in the same way as Phone Book entries.
● Not available for USIM Card.

Responses Set by Phone Book Entry
● Settings for each entry take priority.

Saving Numbers After Calls

After a call, save number to Phone Book.

> Save this number to your Phone Book?
> Yes
> No

1 **When confirmation appears, *Yes***

> Save to Phone Book
> As New Entry
> As New Detail

2 ***As New Entry* ➡ Complete other fields ➡ *Save* or ▧**

Saving to an Existing Entry
In 2, *As New Detail* ➡ Select entry ➡ Complete other fields ➡ *Save* or ▧

4
Phone Book

4-3

Using Phone Book

4

Phone Book

Dialing via Phone Book

1 **`⚃` or `◉` ➜ Highlight katakana row**

Entry Search Window (By a-ka-sa-ta-na)
● When using Double Number in Dual Mode (**P.2-27**), Line indicators appear.

2 **Select entry**

3 **Select phone number**

4 ***Call***

Placing Video Calls
In ④, *Video Call*
Dialing with Slider Closed
In ②, highlight entry ➜ *Call*
■ When multiple numbers are saved, select one to proceed.

Changing Search Method

1 **In entry search window, *Options* or `⊠` ➜ *Ph.Book Settings***

2 ***Sort Entries***
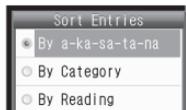
3 **Select method**
● Phone Book Search Methods:

By a-ka-sa-ta-na	Shows entries with Readings that start with katakana in the specified row
By Category	Opens entries in the specified Category
By Reading	Shows all entries in Reading order (katakana, alphabetical then numerical)

Changing Search Method Temporarily
[Entry Search Window] *Switch* or `☰` (press repeatedly to toggle search methods)

Opening from Other Functions

Example: Enter a recipient via Phone Book when sending a message.
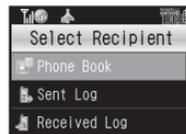
Select Recipient Window

1 ***Phone Book***
● Entry search window opens.

2 **Select entry**

3 **Select phone number or mail address**

● Recipient is entered.
● Omit ❸ if only one number or address is saved.

Advanced

●Changing view for entry search window ●Messaging via Phone Book ●Deleting Phone Book entries (And more on **P.4-8 - 4-10**)

About SAB

Back up Phone Book content in SAB; add Phone Book changes to SAB anytime. Edit SAB online via PC; add SAB changes to Phone Book anytime. Restore lost or altered Phone Book content from SAB.

Backup/Restore

Synchronize

Phone Book

Birthday Notification

Server

Edit on PC

Import from/Export to PC
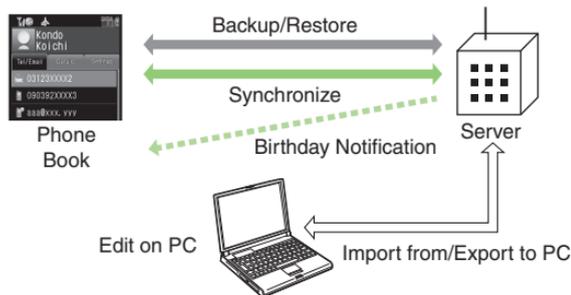
- SAB requires a separate contract and basic monthly fee.
- Use SAB to add Phone Book content to a new compatible SoftBank handset; some conditions apply (**P.4-6**).
- Use a PC to edit SAB online.
- For more about SAB, see the corresponding Website (**P.19-18**).
- Sync commands (Backup, Restore and Synchronize) all incur transmission fees.

SAB Sync Commands & Features

Backup/ Restore	**Backup**	Export Phone Book content to SAB[1]
	Restore	Import SAB content to Phone Book[2]
Synchronize	**Synchronize**	Synchronize Phone Book and SAB[3]
	Sync from Client	Add Phone Book changes to SAB[4]
	Sync from Server	Add SAB changes to Phone Book[5]
Edit on PC	**Import from PC**	Upload PC address book info to SAB
	Export to PC	Export SAB content to PC address book
Send Notice[6]	**Birthday Notification**	SAB sends reminders via SMS to handset
	Email Address Notification[7]	Send new handset mail address to specified addresses
	"Disaster Message Board" Message Notification[8]	Send emergency message board update to specified addresses
Spam Filter	**Tomodachi Email Filter**[9]	Always accept messages from mail addresses saved in SAB

[1] Any existing SAB content is deleted.
[2] Any existing Phone Book content is deleted.
[3] If the same entry item is edited in Phone Book and SAB, SAB content is referenced.
[4] Unrelated SAB changes remain.
[5] Unrelated Phone Book changes remain.
[6] Access this function via handset or a PC.
[7] Backup resets notification setting; handset address is sent to all addresses.
[8] Backup resets notification setting; updates are not sent to any address.
[9] Export Phone Book content to SAB beforehand.

Service Usage Outline

Complete Contract

Visit a SoftBank Shop, dial 157 from a SoftBank handset for SoftBank Customer Center, General Information or access My SoftBank (Japanese) via Yahoo! Keitai.

↓

Receive User ID & Password

After subscription, user ID and password arrive via SMS.
● User ID and password are required to use SAB via a PC.

↓

Use SAB

Export Phone Book content to SAB.

Precautions

■ **Unsynchronizable Items**

SAB restoration cancels these Phone Book settings:
■ Picture, Tone/Video, Light, Vibration

■ **Unintentional Phone Book or SAB Content Deletion**
● When no Phone Book content exists, selecting *Synchronize*, *Sync from Client* or *Backup* deletes all SAB content.
● When no SAB content exists, selecting *Synchronize*, *Sync from Server* or *Restore* deletes all Phone Book content.

■ **Phone Book ⇔ SAB Content Capacity Disparities**

When the number of savable items varies between Phone Book and SAB entries, Synchronization reflects lower limit.

■ **Contract Termination**

SAB content is deleted upon contract termination.

■ **SAB Transfers to New Handsets**
● **SAB-Compatible 3G Handsets**
SAB remains as last saved and is fully accessible.
● **Other 3G Handsets**
SAB remains as last saved and is accessible via PC.
● **V3/V4/V5/V6/V8 Series**
Service contract is terminated and SAB content is deleted.

■ **When Double Number is Active**

Regardless of usage mode setting, all Phone Book content is backed up.

Backup & Restore

Backup (Phone Book → SAB)

Any existing SAB content is deleted.

1. *MENU* or ● ➡ *Phone* ➡ *S! Addressbook Backup*

   [screen: S! Addressbook / Start Sync / Sync History / Set Auto Sync]
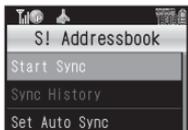
   S! Addressbook Menu

2. *Start Sync* ➡ *Backup*

3. *Yes* ➡ Enter Handset Code ➡ *OK* or ●
   - Backup starts; when completed, details appear.

4. *OK* or ● ➡ **Backup complete**

Canceling Backup
Cancel or 🔽 ➡ *Yes*

Restore (SAB → Phone Book)

Any existing Phone Book content is deleted.

1. **In S! Addressbook menu,** *Start Sync* ➡ *Restore*

2. *Yes* ➡ Enter Handset Code ➡ *OK* or ●
   - Restore starts; when completed, details appear.

3. *OK* or ● ➡ **Restore complete**

Canceling Restore
Cancel or 🔽 ➡ *Yes*

Synchronizing Phone Book

Synchronize Options:

Synchronize	Synchronize Phone Book and SAB
Sync from Client	Add Phone Book changes to SAB
Sync from Server	Add SAB changes to Phone Book

If this is your first use of SAB (new handset), Synchronization is performed via Synchronize regardless of selection.

1. **In S! Addressbook menu,** *Start Sync* ➡ Select option

2. *Yes* ➡ Enter Handset Code ➡ *OK* or ●
   - Synchronization starts; when completed, details appear.

3. *OK* or ● ➡ **Synchronization complete**

Canceling Synchronization
Cancel or 🔽 ➡ *Yes*

4

Phone Book

Advanced

🖐 ●Confirming user ID & password ●Auto synchronization ●Opening log (**P.4-11**)

Phone Book

■ View Settings

Changing view for entry search window	**Start Here** *MENU* or ● ▶ *Phone* ▶ *Ph.Book Settings* ▶ See below
	Portrait Orientation *Vertical Display* ▶ *List+Preview(business card)*
	Landscape Orientation *Horizontal Display* ▶ *Name+Email*
Assigning images to Phone Book entries for incoming transmissions	**Start Here** *MENU* or ● ▶ *Phone* ▶ *Add New Entry* ▶ *Picture:* ▶ See below
	Assigning Images *Assign Picture* ▶ Select image
	Capturing Images *Take Picture* ▶ Frame image on Display ▶ 🔲 or ● ▶ 🔲 or ●
Hiding confirmation after calls to/from unsaved numbers	*MENU* or ● ▶ *Phone* ▶ *Ph.Book Settings* ▶ *New Number Prompt* ▶ *Incoming Call* or *Outgoing Call* ▶ *Off*

■ Phone Book Entry

Saving other information	**Start Here** *MENU* or ● ▶ *Phone* ▶ *Add New Entry* ▶ See below
	Address *Address:* ▶ Select item ▶ Complete field ▶ *OK* or \ᵞ²
	Office *Office:* ▶ Select item ▶ Enter text ▶ *Done* or ● ▶ *OK* or \ᵞ²
	Homepage *Homepage:* ▶ Enter URL ▶ *Done* or ● ▶ Select type
	Note *Note:* ▶ Enter text ▶ *Done* or ●
	Birthday *Birthday:* ▶ Enter date ▶ *Accept* or ●
	Location Information *Location Info.:* ▶ Enter Location Information
Setting Light Color	*MENU* or ● ▶ *Phone* ▶ *Add New Entry* ▶ Select item, e.g., *Light-Voice Call:* ▶ *Switch On/Off* ▶ Select option ▶ *Light Color* ▶ Select color
Changing vibration pattern	*MENU* or ● ▶ *Phone* ▶ *Add New Entry* ▶ Select item, e.g., *Vibration-Message:* ▶ *Switch On/Off* ▶ Select option ▶ *Vibration Pattern* ▶ Select pattern ▶ *CLEAR/BACK* or ◻◻◻

4

Phone Book

4-8

Editing Phone Book entries	m **or** j **▶ Highlight katakana row ▶ Highlight entry ▶** *Options* **or** B **▶** *Edit* **▶ Select item ▶ Edit ▶** *Save* **or** Y • Edit Reading after editing names.
Setting incoming mail ring time	m **or** j **▶ Highlight katakana row ▶ Highlight entry ▶** *Options* **or** B **▶** *Edit* **▶** *Tone-New Message:* **▶** *Duration* **▶ Enter time ▶** *Accept* **or** % **▶** *Save* **or** Y • Available for compatible ringtones.
Renaming Categories	*MENU* **or** % **▶** *Phone* **▶** *Category Control* **▶ Select Category ▶** *Edit Name* **▶ Enter name ▶** *Done* **or** %
Moving Categories	*MENU* **or** % **▶** *Phone* **▶** *Category Control* **▶ Highlight Category ▶** *Move* **or** Y **▶ Select target location** • View for *By Category* Phone Book search changes accordingly.

■ Using Entries

Messaging via Phone Book	Start Here m **or** j **▶ Highlight katakana row ▶ Select entry ▶ See below**
	Phone Numbers **Select phone number ▶** *Create Message* **▶** *S! Mail* **or** *SMS* **▶ Complete message ▶** *Send* **or** Y
	Mail Addresses **Select address ▶ Complete message ▶** *Send* **or** Y
Placing Decoration Calls via Phone Book	m **or** j **▶ Highlight katakana row ▶ Select entry ▶ Select phone number ▶** *Deco. Call* **▶** *Deco. Call File* **▶** *Deco. Call Folder* **▶ Select file ▶** *Call Type* **▶** *Voice Call* **or** *Video Call* **▶** *Call* **or** B • When placing a Decoration Call for the first time, a confirmation appears.
Initiating S! Circle Talk via Phone Book	m **or** j **▶ Highlight katakana row ▶ Select entry ▶ Select phone number ▶** *Call S! Circle Talk* **▶** *Call* **or** % • Set My Status to *Online* first.
Placing international calls via Phone Book	m **or** j **▶ Highlight katakana row ▶ Select entry ▶ Select phone number ▶** *Int'l Call* **▶ Select country ▶** *Call* **or** % **▶** *Call*
Using Location Information via Phone Book	m **or** j **▶ Highlight katakana row ▶ Select entry ▶ Highlight** *Settings* **tab ▶ Highlight** ✆ **▶** *Options* **or** B **▶** *Set to Destination* **▶ Follow onscreen instructions**

4

Phone Book

4-9

■ **Managing Entries**

Deleting Phone Book entries	**One Entry** m or b ➜ Highlight katakana row ➜ Highlight entry ➜ *Options* or A ➜ *Delete* ➜ *Yes*
	All Entries *MENU* or % ➜ *Phone* ➜ *Manage Entries* ➜ *Delete All* ➜ Select entry type ➜ *Yes* ➜ Enter Handset Code ➜ *OK* or %
Checking memory status	*MENU* or % ➜ *Phone* ➜ *Manage Entries* ➜ *Memory Status*
Copying Phone Book entries	**One Entry (Handset → USIM Card)** m or b ➜ Highlight katakana row ➜ Highlight entry ➜ *Options* or A ➜ *Manage Entries* ➜ *Copy Entry to USIM* ➜ *Yes*
	One Entry (USIM Card → Handset) m or b ➜ *Options* or A ➜ *Ph.Book Settings* ➜ *Select Phone Book* ➜ *USIM Memory* ➜ Highlight katakana row ➜ Highlight entry ➜ *Options* or A ➜ *Manage Entries* ➜ *Copy Entry to Phone*
	All Entries *MENU* or % ➜ *Phone* ➜ *Manage Entries* ➜ *Copy All* ➜ Select method ➜ *Yes* ● If handset/USIM Card memory is low, some entries may not be copied.

Editing Categories on USIM Card	**Start Here** *MENU* or % ➜ *Phone* ➜ *Category Control* ➜ *Options* or A ➜ *Change to USIM* ➜ See below
	Renaming Categories Select Category ➜ *Edit Name* ➜ Enter name ➜ *Done* or %
	Moving Categories Highlight Category ➜ *Move* or Y ➜ Select target location
	Changing Icons Select Category ➜ *Change Icon* ➜ Select type
Changing default storage media for new entries	*MENU* or % ➜ *Phone* ➜ *Ph.Book Settings* ➜ *Save New Entry* ➜ *USIM Memory* or *Ask Each Time*
Switching reference Phone Book	*MENU* or % ➜ *Phone* ➜ *Ph.Book Settings* ➜ *Select Phone Book* ➜ *USIM Memory* or *Both*

■ **Mode Settings**
Activate Double Number first.

Changing mode of all entries at once	*MENU* or % ➜ *Phone* ➜ *Manage Entries* ➜ *Change Mode(All)* ➜ Select mode ➜ Enter Handset Code ➜ *OK* or %
Changing mode of multiple entries	m or b ➜ *Options* or A ➜ *Manage Entries* ➜ *Multiple Selection* ➜ Select entry (☑ ⇔ ☐) ➜ *Options* or A ➜ *Change Mode* ➜ Select mode
Changing mode of entries by Category	m or b ➜ Select Category ➜ *Options* or A ➜ *Manage Entries* ➜ *Change Mode(Category)* ➜ Select mode ➜ Enter Handset Code ➜ *OK* or % ● Set search method to *By Category* first.

Phone Book

S! Addressbook Back-up

Confirming user ID & password	**Y′** or **\Y″** ➡ **メニューリスト** ➡ **My SoftBank** ➡ **English** ➡ **Password confirmation for S! Address Book** ➡ **Follow onscreen instructions**
Auto synchronization	**[Start Here] MENU** or **⦿** ➡ **Phone** ➡ **S! Addressbook Backup** ➡ **Set Auto Sync** ➡ **Enter Handset Code** ➡ **OK** or **⦿** ➡ **See below** **Activating** **Set On/Off** ➡ **On** **Changing Auto Sync Frequency** **Set On/Off** ➡ **On** ➡ **Set Frequency** ➡ **Select frequency** ➡ **Enter/select date/time/day of the week** ➡ **Accept** or **⦿** ● For **After Editing Ph.Book(10 min.)**, omit steps for date, time, etc. **Changing Auto Sync Command** **Set On/Off** ➡ **On** ➡ **Set Sync Mode** ➡ **Select command**
Opening log	**MENU** or **⦿** ➡ **Phone** ➡ **S! Addressbook Backup** ➡ **Sync History** ➡ **Select record**

4

Phone Book

Phone Book

Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images do not appear for incoming Decoration Calls including image/video.
- Images may not appear when another function is active, etc.

Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Ringtones do not sound for incoming Decoration Calls with sound.
- Memory Card with source files may be removed; reinsert the card to restore settings.

Cannot enter 16 characters for Category names

- Character entry limit for Category names may be lower depending on the USIM Card in use.