Calendar & Tasks	9-2
Calendar	9-
Tasks	9-
Alarms	9-
Using Alarms	9-
Wakeup TV	
Using Wakeup TV	9-9
Relaxation Time	9-1
Playing Animation with Music &	
Illumination	9-1
Calculator	9-12
Using Calculator	9-1
Expenses Memo	9-1
Adding Expenses	
Osaifu-Keitai®	9-1
Osaifu-Keitai® (Japanese)	9-1
Locking IC Card	9-1
Simulated Call	9-18
Faking Incoming Calls	9-1
Stopwatch	9-19
Using Stopwatch	9-1
Countdown Timer	9-20
Using Countdown Timer	9-2
World Clock	9-2 <sup>-</sup>
Opening World Clock	9-2
Hour Minder	9-2
Using Hour Minder	

Pedometer	9-23
Using Pedometer	9-23
Compass	9-25
Using Compass	9-25
S! GPS Navi	9-26
Using S! GPS Navi	9-26
Document Viewer	9-29
Opening PC Documents	9-29
Notepad	9-30
Saving Text	9-30
ASCII Art	9-31
Using ASCII Art	9-31
Voice Recorder	9-32
Recording/Playing Voice	9-32
Scan Barcode	9-33
Scanning Barcodes	9-33
Create QR Code	9-34
Creating QR Codes	9-34
Scan Card	9-35
Scanning Business Cards	
Scan Text	9-36
Scanning Text	9-36
Kanji Grabber	9-37
Using Kanji Grabber	9-37
Additional Functions	9-38
Troubleshooting	9-51

9

Handy Extras



# Calendar

## **Opening Calendar**

● **Tools ●** • In PIM/ Life menu, *Calendar* **●** •



Calendar Window

# Toggling View

Press v to toggle Calendar window.



Month View





6Month View



Week View

# Key Assignments

#### All Views

Open Previous Page	<b>★</b> +☆
Open Next Page	# , 🚵
Open Help	□ <sup>6</sup>

#### ■ Month/3Month View

Select Date	<b>③</b>
Go to Current Date	5 %L

## ■ 6Month View

Go to Current Month	5 %
Select Month	••••

#### ■ Week View

Select Date	<b>⊙</b>
Select Time Block	(•)



<sup>(</sup>b) Changing default view Jumping to specified date Changing date color Selecting task view option Adding stamps (Month/3Month View) Hiding schedules Saving additional holidays Removing/restoring holidays (P.9-38)

#### Saving Schedules

Follow these steps to save subject, start/ end date/time. Alarm and schedule details: (Enter Subject or Description to save entry.)

In Calendar window, select date **→** (•)



- <Add New Entry> ▶ ●
- Enter subject **→** (●)



Enter start date/time **→** (•)



- End: 

   (•) 

  Enter end date/time 

  ◆ (●)
- Alarm: **→** (•)
- Alarm Time: 

  ◆ Select time **→** (**•**) **→** (**v**)
- Description: 

  ◆ Enter schedule details 

  ◆ 

  ●
- (y) **▶** Saved

All-Day Schedule In  $\bigcirc$ .  $\bigcirc$   $\Rightarrow$   $\bigcirc$   $\Rightarrow$  From  $\bigcirc$ **Custom Alarm Time** In ②, Alarm Time: ▶ ● Other ▶ ● **Enter date/time ●** ● **> >** From 3

## At Alarm Time

Alarm activates; sounds/vibrates by related settings.



## Stopping Alarm to Return to Standby

 While Alarm sounds/vibrates, press (•). or sign.

#### Stopping Alarm to Open Schedule

• While Alarm sounds/vibrates, press a key other than ( ), ( or )

#### When Another Function is Active

 Alarm may not activate until handset returns to Standby.

#### Incoming Calls

 Active Alarm stops for incoming calls. Information window opens after handset returns to Standby.





Schedule List

- Select schedule or task **→** (•)
- Standby returns

Opening Task List In ②, select task ⇒ 🖾 ⇒ Go to Tasks

**→** (**•**)

**Accessing Secret Entries** 

*Temporarily* **→ ● >** Enter Handset Code **→** ( •)

# **Opening Related Message**

Open schedule-related messages saved from Messaging message list.

- In schedule list, select schedule **→** (●)
- - Related message opens.
  - To return to schedule window, press ......

**Deleting Message from Schedule** After ①, ⊙ ⇒ Related Mail: ⇒ ⊙ ⇒ Yes **♦** (**9**) **♦** (**12**)

## **Deleting Schedules**

- One Entry
- In schedule list, select schedule **→** (□)
- Delete **→** (•) **→** This Appointment 

  ◆ (•) 

  → Yes
- All Entries of the Day
- In Calendar window, select date **→** (□)
- Delete 


  ◆ (•) 

  → All This Day 
   →
   (•)
   →
   Yes
   →
   (•)

# Tasks

#### Saving Tasks

Follow these steps to save subject, due date/time, Alarm and task details: (Enter Subject or Description to save entry.)

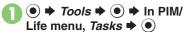









Enter due date/time 

◆ ●








- Alarm Time: 

  ◆ (•) 

  ◆ Select time **→ (•) (•)**
- Description: 

  ◆ Enter task details **→** (•)
- Saved



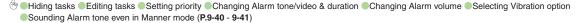

#### At Alarm Time

Alarm activates; sounds/vibrates by related settings.



#### Stopping Alarm to Return to Standby

While Alarm sounds/vibrates, press ,
 or .

#### Stopping Alarm to Open Task

• While Alarm sounds/vibrates, press a key other than •, • or •.

## When Another Function is Active


Alarm may not activate until handset

#### **Incoming Calls**

returns to Standby.

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

#### **Opening Tasks**

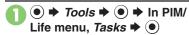



Task List

- Use to open completed or uncompleted task list.
- Select task → ●



Standby returns

#### **Accessing Secret Entries**

After ①, ☑ → Unlock Temporarily
→ ⊙ → Enter Handset Code → ⊙

Marking Tasks as Completed

After ①, select task ▶ 🐑

#### **Deleting Tasks**

- One Entry
  - \rceil In task list, select task 🕈 🖻
- Delete → ●
- 🚯 This Task ♦ 💿 ♦ Yes ♦ 💿
- All Completed Tasks
- In task list, 🖾
- Delete → •
- All Comp. Tasks → →
  Yes → ●




# **Using Alarms**

#### **Setting Alarm**

Follow these steps to set Alarm to sound at a specific time on a specific day of the week:

(Set Snooze--Alarm repeats at set interval--Alarm Volume and Duration.)

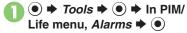




Alarm List










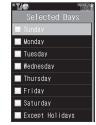





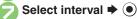


• For custom intervals, select Other.










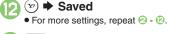

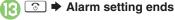



xcluding Holidays
In ⑤, select day ▶ ⑥ (□/☑) ▶
Complete selection <b>⇒</b> Except
Holidays







#### **Stopping Alarm**

Press a key.

#### When Another Function is Active

 Alarm may not activate until handset returns to Standby.

#### **Incoming Calls**

 Active Alarm stops for incoming calls.
 Information window opens after handset returns to Standby.

#### When Snooze is Set

Alarm repeats at the set interval. Other Alarms do not activate while handset is Snoozing.

# **Canceling Snooze**

While Snoozing, **● Yes ●**

 Snooze is automatically canceled after a period of time.

#### **Canceling Alarm**

👔 In Alarm list, select entry 🖈 🖾



 Reactivate entry to use the same settings.

## **Reactivating Entry**

In ②, Switch On ▶ ●

## **Deleting Alarm**

## One Entry

In Alarm list, select entry 🕈 🖾

Reset Alarm → ●

Yes **→** •

All Entries

\rceil In Alarm list, select entry Þ 🖾

Clear All → ●

Enter Handset Code → ●

→ Yes → ●

# Using Wakeup TV

#### **Setting Wakeup TV**

Follow these steps to activate TV at a specific time on a specific day of the week:

- Complete TV Area Setup beforehand.
- TV may not activate in poor signal conditions.
- **→** *Tools* **→ →** In PIM/ Life menu, Wakeup TV → •




Wakeup TV List

● **⇒** Enter hour (24-hour format) → Enter minutes **→** (•)




Wakeup TV Menu

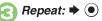






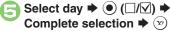




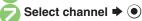



• For more settings, repeat @ - 3.

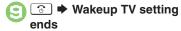



#### **Canceling Alarm**

 Alarm activates at Wakeup TV time. To cancel Alarm, follow these steps:

[Wakeup TV Menu] Alarm On/Off: ▶ (•) **→** Off **→** (•) **→** From (3)

**Adjusting Alarm Volume** 

[Wakeup TV Menu] Alarm Volume: >

Adjust level 
 From 
 From 



# At Wakeup TV Time

TV activates after Alarm.



#### Stopping Alarm Instantly

• While Alarm sounds/vibrates, press a key.

# When Another Function is Active

• TV may not activate depending on the function

#### After TV is On for a Period of Time

• Confirmation appears. Choose Yes and press (•) to exit TV.

## Canceling Wakeup TV

In Wakeup TV list, select entry **→** (□)



• Reactivate entry to use the same settings.

# In ②, Wakeup TV On → • **Deleting Wakeup TV**

Reactivating Entry

One Entry

In Wakeup TV list, select entry **▶** 🖾

Reset Alarm **→** •

Yes **→** (●)

**All Entries** 


In Wakeup TV list, select entry **▶** 🖾

Enter Handset Code **→ (●)** Yes → (•)

# **Playing Animation with Music & Illumination**

Play preset animations or downloaded Flash® files with music and illumination. Set playback time, volume and illumination pattern as needed.



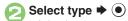

- Animation appears.
- For *Flash*®, select a file and press •.
  - Key LEDs do not illuminate for soundless Flash® files.

# Setting Relaxation Time

Follow these steps to set playback time, volume and Key Illumination pattern:


- ① ◆ Tools ◆ ② ◆ In PIM/ Life menu, Relaxation Time ◆ ③
- Settings → ●



- Playback Time → ●
- S Volume → ●
- 🕞 Adjust level 🕈 💿



- S Key Pattern → ●
- Select pattern → → ∞
- **③** → Standby returns

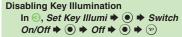




# **Using Calculator**






Calculator Window

Use Keypad to enter digits Calculate

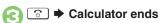

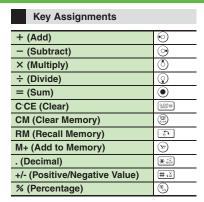

### **Memory Calculation**

- Clear Memory before starting new Memory calculations.
- Numbers saved in Memory remain until handset power is turned off.

#### **Incoming Calls**

 Calculations are not affected. End the call to return to Calculator

#### **Using % Function**

Use ( ) to find definite percentage of a known value.

Example: Calculate 30% of 800,000 Enter  $800.000 \Rightarrow x \Rightarrow 30 \Rightarrow \%$ **240,000** appears.




**Advanced** 

Copying calculation results Changing exchange rate for currency conversion Converting currencies (P.9-42)

# Adding Expenses

## **Entering Expenses**

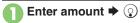







Select Category **→** (•) **→** Saved

Saving under Custom Category In  $\bigcirc$ , Other  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Enter name  $\Rightarrow$   $\bigcirc$ 

# **Checking Entries**

Life menu, Expenses Memo **→** (•)



Totals **→** (•)



Expenses Memo List

Standby returns

Saving Entries to Notepad [Expenses Memo List] 

→ Save to Notepad **→** (●)

All expense details are saved as a single entry.

# **Deleting Entries**

- One Entry
- In Expenses Memo list, select entry **→** (□)
- Delete Item **→** (•)
- Yes **▶** (•)
- **All Entries**
- In Expenses Memo list, ₪
- Enter Handset Code **→** (•) Yes → (•)

# Osaifu-Keitai® (Japanese)

Osaifu-Keitai® describes IC Card-equipped handsets that support e-money or credit functions/services. Osaifu-Keitai® encompasses a range of IC Card-based services on FeliCa-compatible SoftBank handsets. 933SH supports Osaifu-Keitai®. To use e-money, e-ticketing and reward points, etc., hold handset over a compatible reader/writer at shops, restaurants, and other retail outlets, etc.

#### Basics

Before using Osaifu-Keitai®, activate Lifestyle-Appli, complete registration, customize settings and charge accounts.

#### Starting Lifestyle-Appli

● **Tools →** In PIM/Life menu, **→** ( ) **→** Select application **→** ( )

#### Lifestyle-Appli Precautions


- Contact Osaifu-Keitai<sup>®</sup> service providers for Lifestyle-Appli registration and usage details
- Keep service passwords/customer service contact information, etc. in a separate place.

# Using Osaifu-Keitai®

Follow these steps to conduct a transaction: Example: Making an electronic payment

- Lifestyle-Appli activation is not necessary.
- Transactions are possible even when handset power is off (if battery is adequately charged).
- Calls/Internet transmissions do not affect. transactions



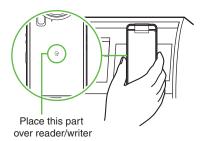

Align handset parallel to reader/writer.

#### Important Osaifu-Keitai® Usage Note

 SoftBank is not liable for damages resulting from accidental loss/alteration of IC Card data/settings.

#### When Placed Over Sensor

- If recognition is slow, move handset around slightly.
- Handset may respond automatically for some services.

#### **Advanced**




🖢 🕒 Enabling to view e-money balances 🔍 Checking e-money balance on External Display 🕒 Moving applications up/down Balance Info list 🔍 Removing applications from Balance Info list (P.9-43)

# **Locking IC Card**

#### **IC Card Lock**

Restrict access to/prevent unauthorized use of Osaifu-Keitai® on handset.

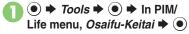








IC Card Settings Menu



Canceling IC Card Lock
In ⑤, IC Card Lock ▶ ⑥ ▶ Off ▶ ⑥
▶ Enter Handset Code ▶ ⑥



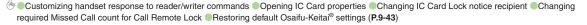

## **Remote Lock**

Disable Osaifu-Keitai® remotely by mail or phone.

Mail Remote	Send mail to activate
	Remote Lock
Call Remote	Call from a specified phone to activate Remote Lock
Lock	to activate Remote Lock

# **Mail Remote Lock**

- Preparation on Handset
- In IC Card Settings menu, Remote Lock 

  ◆ (•) 

  Enter Handset Code **→** (●)







Mail Remote Lock Menu

- Remote Lock PW 

  ◆ 

  ●
- Enter password **→** ●
- On **→** ( ) **→** ( ) ·

# **Canceling Mail Remote Lock**

(a) **b** (21)

## Activating Remote Lock via Mail

If handset cannot receive mail IC Card Lock is not set.

- Send S! Mail or e-mail to handset with password as subject
  - After handset receives message, IC Card Lock is set and notice is sent as a reply.

- Call Remote Lock
- Preparation on Handset
- In IC Card Settings menu,

  Remote Lock → → Enter

  Handset Code → ●







Call Remote Lock Menu

Phone No. to Lck 1 or Phone No. to Lck 2 ▶ ●



- Phone Book → Select entry → → Select phone number →
  - Select Phone Number to enter directly.
- 🕞 Switch On/Off 🕈 💿
- **⑥** On **→ ⑨ →** 🐨

Enabling Activation via Public Phone
In ⊕, Set Public Phone → ● → On
→ ● → From ⊖

Canceling Call Remote Lock
In  $\bigcirc$ , Switch On/Off  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  Off  $\Rightarrow$   $\bigcirc$   $\Rightarrow$   $\bigcirc$ 

- Activating Remote Lock via Phone
  If handset cannot receive calls IC Card
  Lock is not set
- Using one of the specified phones, call handset

   Send Caller ID.
- Handset receives call ▶
  End the call
  - The call is recorded as a Missed Call.
- Within three minutes, repeat

  O 2 twice



 After the third Missed Call, IC Card Lock is set; a message announces Remote Lock activation. Confirm the message and end the call.

## If Series is Interrupted by Another Call

 Missed Call count is reset. Start over from the beginning.



# **Faking Incoming Calls**

Handset rings to emulate an incoming call.

- Save name and phone number to show as Caller ID.
- Ringer may be muted by handset settings. To override Silent setting, see P.9-44.

#### **Setting Simulated Call**

(•) **→** *Tools* **→** (•) **→** In PIM/ Life menu, Simulated Call ightharpoons (ullet)



Simulated Call Menu







- Name: 

  ◆ (•) 

  ◆ Enter name
- Phone Number: 

  ◆ 

  ◆ Enter phone number **→ ● Y**/
- Assign Tone **→** (•) **→** Select tone/file **→** (•)
- → PIM/Life menu returns

When Name and Phone Number are Unset Handset rings with Caller ID "Withheld."

Canceling Simulated Call [Simulated Call Menu] Switch On/Off

**→ (•) →** Off **→** (•) **(•)** 

**Setting Wait Time** 

[Simulated Call Menu] Receive Timing

**♦** (**0**) **♦** Select time **♦** (**0**) **♦** (**1**2)

# **Using Simulated Call**

Available with clamshell open.



- (Long)
- Handset rings and incoming Voice Call window opens.
- Ringtone stops after a period of time.
- In incoming Voice Call window, press 🗈
  - Voice Call window opens. (Softkeys) are dummies.)
- ⇒ Simulated Call ends

# When Receive Timing is Not Immediately • Press or during wait time to

- cancel Simulated Call activation.
- Simulated Call activation is canceled by incoming calls. Alarms, etc. during wait time.



# **Using Stopwatch**


Stopwatch stops when battery runs low.





Stopwatch Window

- Stopwatch stops
   Press to resume.
  - Press to resume.
- ③ → Yes → → Stopwatch ends
  - Records are deleted when Stopwatch ends.

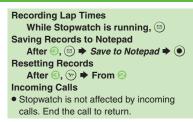



Timer Entry Window



• Tap +10min, +1min or +30sec as needed.







Countdown Timer Window

- Press (a) to change time.
- Countdown starts • Press • to stop/resume countdown.
- Set time elapses **→** Tone sounds
- ③ **→** Yes **→** (•) **→** Countdown Timer ends

# **Using Timer Records**

After ①, ◎ → Select record → ● → ● From ②

**Resetting Countdown Timer** Stop countdown and (2)

**Incoming Calls** 

 Countdown is not affected by incoming calls. End the call to return

# When Set Time Elapses

Tone sounds.



#### Stopping Tone Instantly

• Press • or a Side Key. (Tone stops automatically after a period of time.)

## When Timer Time Elapsed during a Call

Tone sounds after the call



# **Opening World Clock**

① ◆ Tools ◆ ○ ◆ ⊙ Clock/Gauge ◆ World Clock



Select area 
● ●

Select area 
● ●

World Clock ends

Advancing One Hour (Daylight Saving)

[Set Time Zone Window] 

■ To cancel, press 

Adding Custom Time Zone

[Set Time Zone Window] 

■ Enter city name 

■ → + or - → 

Enter time difference 

●

# **Opening World Clock in Standby**

- Settings → In Phone menu, Display → ●
- Standby Display ▶ ●



- Clock/Calendar → ●
- World Clock (L), etc. → •





Set Time Zone Window



# **Using Hour Minder**

## **Setting Hour Minder**


Follow these steps to activate the hourly time signal at selected hours:





Hour Minder Menu



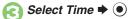



# Select hour ▶ ● (□/☑) ▶ Complete selection ▶ ☞

- Saved

# Adjusting Hour Minder Volume

In ②, Advanced → ● → Volume: →
● → Adjust level → ● → ♡ →
From ⑤

**Changing Hour Minder Duration** 

In ②, Advanced → ● Duration:

 → ● Select time → ● 

 From □

■ For custom Duration, select *Other*.

Selecting/Canceling All Hours

In ②, ◎ → Check All or Uncheck All

**→** (**•**)

#### At Hour Minder Time

Hour Minder activates; sounds/vibrates by related settings.



### Stopping Tone Instantly

· Press a key.

When Another Function is Active

• Hour Minder does not activate.

**Incoming Calls** 

Active Hour Minder stops for incoming calls.

## **Canceling Hour Minder**

In Hour Minder menu, Switch On/Off → ● → Off



#### Advanced



Handy Extras

© Changing Hour Minder tone/video
Setting handset to vibrate at Hour Minder Time
Sounding Hour Minder tone even in Manner mode
Activating
Hour Minder based on World Clock time (P.9-44)

# **Using Pedometer**

## **Getting Started**

- Count based on a pace of approximately 100 steps per minute over even terrain.
- Accuracy may be affected by course, terrain, walking style, etc.
- Avoid holding the handset; use a body worn case or a strap, or place handset inside a pocket or bag.
  - Avoid sudden/erratic movements.
- Steps are not counted in the following cases:
  - While handset is off
  - For the first few steps
  - While handset vibrates
- Handset use may affect accuracy.
- Use Pedometer only as a rough guide.

#### **Adjusting Counter Sensitivity**

- **Tools ● O Clock/Gauge**
- Pedometer → Settings →
   Step Sensitivity → →
- Select option **→**
- Select Low when steps seem overcounted; select High when they seem undercounted

## **Saving Body Information**

Weight and pace entry required to view full Pedometer data.





Pedometer Menu

- Settings → Body Info.

  → ●
- 🕞 Enter Handset Code 🕈 💿



Body Info Menu

- Height → ► Enter height → ●
- Weight → ► Enter weight → ●
- Pace → → Yes or No → ●

   Choose Yes to enter pace automatically based on height.
- Enter pace → → 🐨
- Editing Body Information
  [Body Info Menu] Select item → ●

  The Enter value → → ∞
  - For Pace, automatic calculation confirmation appears (when height is entered).

# **Activating Pedometer**

- **②** On **→ ③**

Canceling Pedometer In ②, Off ▶ ●



#### Pedometer Indicator

When Pedometer is active, today's step count appears in Standby.



### **Viewing Step Count Records**

- In Pedometer menu, *Today's Walking* → ●
- 20



Steps Window

- Press (x) to toggle daily/weekly view.
- Press ★益 to open previous day/ week, or ★並 to open next day/week.
   (Alternatively, tap ◆★ or ➡).

- Select time/date 

   Hourly/daily step counts appear.

Resetting Today's Step Count
In ②, ③ ▶ Reset Day's Data ▶ ●

▶ Yes ▶ ●
Resetting Log

[Steps Window] ⑤ → Walk Data

Reset → ⑥ → Enter Handset Code

→ ⑥ → Yes → ⑥

■ Today's data is also reset.

# **Setting Targets**

Information window opens, etc. when target is achieved for these items:



- In Pedometer menu, Settings

  → → Target → •
- Target Settings 

  Select item 

  Enter value/time 

  Output

  Enter value/tim
  - Other target settings may consequently change.

#### **Editing Targets**

[Pedometer Menu] Settings → ● →
Target → ● → Target Settings → ●
→ Select item → □ → Enter value/
time → ●

#### When Target is Achieved

 A tone sounds and Information window opens. (Select *Goal Achievement* and press to open Pedometer Calendar.)
 Follow these steps to mute achievement tone:

[Pedometer Menu] Settings → ● →
Target → ● → Goal Announce →
● → Off → ●

#### About Exercise (Ex)

 Ex and MET indicate amount and intensity of physical activity, respectively.
 Ex for walking is calculated by multiplying 3 METs by walking duration (hour).

# **Advanced**



Handy Extras


9 Changing Pedometer indicator Using Pedometer Calendar Checking accumulated data Resetting accumulated data Customizing achievement notice (P.9-44)

# **Using Compass**

Available in clamshell open or Viewer position.

## **Opening Compass**



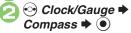




Compass Window

• Compass opens; use as a rough guide.

# **Adjusting Compass**

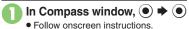

#### **Compass Indicator**

When map is open, compass indicator appears; follow these steps to hide it:
● → Tools → ● → ○ Clock/Gauge
→ S! GPS Navi → ● → NAVI
Settings → ● → Compass Indicator
→ ● → Off → ●



# **Using S! GPS Navi**

Use this GPS navigation service to pinpoint current location, find routes to destinations, and more.

- Provide current location to administrator upon request.
- Available in clamshell open or Viewer position.

#### **Precautions**

- Location Information accuracy may be affected when GPS satellite/radio station signal reception is poor. Use S! GPS Navi under the open sky.
- SoftBank is not liable for any damages resulting from the provided Location Information.

#### Positioning

• Pinpoints current location using signals transmitted from GPS satellites.

#### **Location Information Accuracy**

- Probable distance from the actual position is classified into three levels, from Accuracy 1 (low) to Accuracy 3 (high).
- A confirmation appears when accuracy level is 1 or 2; follow these steps:
   Yes or No → ●

# Starting Navi-Appli





S! GPS Navi Menu



• To disable confirmation, press (2) before (3).



# Opening Navi Appli List [S! GPS Navi Menu] Navi Appli List

■ To activate Navi Appli, select one and press .



#### **Opening Location Log**

In S! GPS Navi menu, Location Logs → ●



- Select record 

  ◆ 

  Output

  Details appear.
- List returns 

  ♣ List returns

## **Pinpointing Current Location**

In S! GPS Navi menu, Locate Me → ●



- Yes 

  Positioning starts

  Map of your current location appears.

#### **Using My Location**

# Saving Location Information

Follow these steps to save current location as a new entry:

In S! GPS Navi menu, My Location List ▶ ●



My LocationList Menu

- New Entry → ●
- Name → ► Enter name
- 🔼 Location Info 🕈 💿
- From Current Loc. 

  ◆ ●

  Positioning complete
- When accuracy level is 1 or 2, choose *No* and press to proceed to •.

## Saving as Home In ②, 自宅 ◆ ● ➡ From ② Saving from Location Log

In ⑤, From Location Logs ♦ ⑥ ♦
Select record ♦ ⑥ ♦ ◎

- Opening Entries
- In My LocationList menu, select entry ▶ ●
- Location Info → ●



- Deleting Entries
- In My LocationList menu, select entry
- ② ⇒ Delete ⇒ ⊙ ⇒ Yes

#### Advanced

\* Sending current location via mail Changing map source URL Disabling positioning Selecting Location Information transmission option Using My Location & Location Log Saving Location Log records to My Location Deleting Location Log records (P.9-45)

#### Using Ichi Navi (Japanese)

Locate other S! GPS Navi-compatible handset users or lost handset.

- Ichi Navi requires a separate contract and initial settings.
- If Double Number is active, service uses Line A regardless of usage mode setting.
- For more about Ichi Navi, see SoftBank Mobile Website (P.15-23).



Handset connects to the Internet.
 Follow onscreen instructions.

## **Providing Location Information**


Provide current location to administrator upon request.

- Location may be provided automatically upon administrator's request without confirmation.
- May be unavailable depending on subscription. For details, contact the nearest SoftBank Shop or SoftBank Mobile Customer Center, General Information (P.15-42).

# Location Information request arrives



 A confirmation appears. (Message shown above is for reference only.)

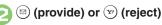

#### Information

Information window opens after your location is provided manually (by pressing 

(a)) upon Location Information request or automatically upon administrator's request. Select the item and press (a) to open log.





# **Opening PC Documents**

Supported File Formats:

• •
PDF (.pdf)
Microsoft® Excel® (.xls)
Microsoft® Word (.doc)
Microsoft® PowerPoint® (.ppt)
Some files may not appear correctly.

- Download files via the Internet.
- When transferring files from PCs, save to corresponding Memory Card folder (P.15-24).





Select file **→** •

Key Assignments		
■ Handset Keys		
View Whole Page	•	
Scroll	<b>•••</b>	
View Upper Left	1 :	
Toggle Full Screen View On/Off	2 **	
View Upper Right	∃ 🐇	
Zoom Out	¥ <sup>2</sup> / <b>□</b>	
Continuous Zoom Out	☐ (Long) (Long)	
View Center	5 %	
Zoom In	<b>6</b> ₩ / <b>3</b>	
Continuous Zoom In	(Long)	
View Lower Left	7 # PORS	
Jump to Page	8 * TU/	
View Lower Right	9 6	
Open Help	□ <sup>½</sup>	
Next Page	# , 🔅	
Previous Page	<b>★</b> +\*	
Fit Width	<i>₽</i>	

**Rotate 90 Degrees** 


(Y/)

■ Touch panel	
Scroll Around	Drag file
View Whole Page	Whole
Zoom Out/Zoom In	Pinch/spread fingers
Jump to Page	<b>1</b>
Next Page	H
Previous Page	Ħ
Rotate 90 Degrees	V/H

Zooming In/Out with Loupe (Magnifier) In open file, <sup>®</sup> (Long) → Specify portion → 🖾 → Zoom Out or Zoom In **⇒** ●



## **New Notepad Entry**

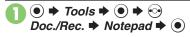



Notepad List





- Enter text ▶ ●
- Select Category 

  ◆ ◆

  Saved

# Sorting Entries Temporarily [Notepad List] (2)

- Press to toggle sort options (Modified, Created, Category and Accessed).
- Changing Landscape Notepad List View
  [Notepad List] Select entry ◆ ⑤ ◆
  Setting/Manage ◆ ⑥ ◆ Landscape
  Display ◆ ⑥ ◆ Select option ◆ ⑥
  Inserting Notepad Text during Text Entry
  In a text entry window, ⑥ ◆
  Notepad ◆ ⑥ ◆ Call Notepad ◆ ⑥

#### **Opening Notepad**

Select entry ⇒ ●

In Notepad list, select entry

→ ●



List returns

## **Deleting Entries**

# One Entry

- In Notepad list, select entry

  → □
- Delete Item → Yes → ●

#### Selected Entries

- In Notepad list, select entry ⇒

  Setting/Manage ⇒ ●
- Multiple Selection 

  Select entry 

  (□/√) 

  Complete selection 

  □
  - Participation 

    Delete 

    Output

    Delet

#### Unchecking All In ©. Uncheck

In ⓒ, Uncheck All ▶ ◉

## All Entries

- In Notepad list, select entry →

  Setting/Manage →

  O
- Delete All → → Enter Handset Code → ● → Yes → ●

#### **Advanced**



Handy Extras


\* Editing Notepad Searching text within all entries Inserting Notepad text into message text Sending entries via S! Mail Creating text files Importing text files Checking memory status Opening properties (P.9-46)

# **Using ASCII Art**

# **Inserting ASCII Art**

In message text entry window, ≅ → Call ASCII Art → ●



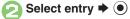




Previewing ASCII Art
In ⊘, select entry ⇒ ☺
■ Press ⊙ to insert ASCII Art.

# **Editing Entries**





**ASCII Art List** 

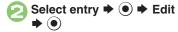



# **Deleting Entries**

- In ASCII Art list, select entry

  → □ → Delete → ●
- Yes → ●



# **Recording/Playing Voice**

## Recording

- Recording stops if battery runs low while recording.
- Record conversations during calls via Record Caller Voice.





Recording Window





 For Extended Voice, recording is saved automatically.



#### **Playback**

In recording window, ☐ →
Ring Songs Tones → ●





Playback Operations	
Adjust Volume	<b>③</b>
Pause/Resume	•
Stop	CLEAR EN



# Scanning Barcodes

Scan UPC/JAN (1D barcodes) or QR Codes (2D barcodes).

- Membership file or password may be required when scanning barcodes.
- Some barcodes may not be scanned.







Scan Barcode **→ ●** 



Frame barcode in center of **Display** 



Scan Window

 Use Focus Adjustment Bar as a guide (better focus in darker blue).



Scan starts

• Press ( to stop scan.

# Tone sounds ◆ Scan results appear



#### **Split Data**

- After scanning, confirmation appears. Follow onscreen prompt(s).
- Scan results do not appear until all split data is scanned.

#### Starting Over



# **Kev Assignments in Scan Window**

Toggle Focus Mode	3 ₺
Switch to Photo Camera	7 s
Focus Lock	ŷ.
Mobile Light On/Off	# 52
Adjust Brightness	•
Open Help	□ *½


#### Advanced

🖖 ®Scanning during text entry 🌑 Scanning continuously 🌑 Reading saved barcode images 🌑 Saving scan results 🖲 Saving to Notepad 🜑 Saving linked info to Phone Book Opening saved scan results Using linked info Using images as Wallpaper Saving images & melodies Copying text (And more on P.9-47 - 9-48)



# **Creating QR Codes**

Create QR Codes from these items on handset:

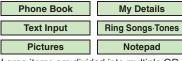

Large items are divided into multiple QR Codes.

#### **Procedure**

Follow these steps to create QR Codes from Data Folder files:





Create QR Code → ●





- Select folder 

  Select file or entry 

  Select
  - QR Code is created.



 QR Code is saved to Data Folder (Pictures).

## From Phone Book Entries

In ⑤, Phone Book → ⑥ → Select entry → ⑥ → ⑤

From My Details

From Entered Text

In ⑤, Text Input **→** ⑥ **→** Enter text **→** ⑥ **→** ⑤

Switching Storage Media

In ⑤, ◎ ♦ Save to ♦ ● Phone

or *Memory Card* → ● ● ● Attaching to S! Mail

In ⑤, ⊚ **→** Send As Message **→ ⑥** 

**◆ Complete message ◆ ②**

#### **Incoming Calls**

 QR Code creation is not affected by incoming calls. End the call to return.



Scan business cards and save names. addresses, etc. to Phone Book.

- English business cards may not be scanned correctly.
- Some cards may not be scanned.











Scan Window

- Scan starts
  - Press ( to stop scan.







• New Phone Book entry is saved.

#### If Text Exceeds Phone Book Entry Item **Character Limit**

 Confirmation appears. Follow these steps to delete overage:

Yes **▶** (•)

**Switching Storage Media** 

After ⑤, Ø → Save to → ⑥ → 

Saving Scanned Image as Phone Book **Picture** 

After ⑤, ∅ → Add Image → ⑥ → On **⇒** ( • ) **⇒** ( • )

Starting Over

After  $\bigcirc$ ,  $\bigcirc$   $\Rightarrow$  Yes  $\Rightarrow$   $\bigcirc$   $\Rightarrow$  From  $\bigcirc$ 

# Key Assignments in Scan Window

Toggle Focus Mode	3 ₺
Switch to Photo Camera	7 # PORS
Focus Lock	ψ.
Mobile Light On/Off	#,3
Adjust Brightness	••
Open Help	□ <sup>6,8</sup>

# **Scanning Text**

Scan text and save it to Notepad, etc. Available Modes:

	Capture text in full screen and scan a selected line
Line	Capture a few lines of text and scan a selected line


- To toggle mode, press 🐨 in scan window.
- Some text cannot be scanned.







- To change mode, press 😇 in scan window.
- Frame text in center of Display

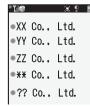



Scan Window

- Scan starts
   Press ৩ to stop scan.





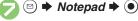

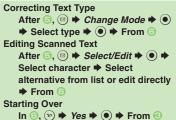

# Key Assignments in Scan Window

Toggle Focus Mode	3 ᢤ
Switch to Photo Camera	7 3
Focus Lock	Ĉ.
Mobile Light On/Off	# 50
Adjust Brightness	<b>⊙</b>
Open Help	_ vg





Scanning and pasting during text entry
 Scanning more text
 Saving scan results
 Saving linked info to Phone Book
 Opening saved scan results
 Using linked info
 Pasting to message text
 Copying text
 (P.9-49 - 9-50)

### Using Kanji Grabber

Scan a word of up to ten kanji and look it up in dictionaries.

Some text cannot be scanned.





Kanji Grabber → ●

Frame kanji in Loupe



Scan wind

- Scan results (kanji) appear.
- **6**0
- Select dictionary → →
  Search → ●
- Select word, etc. 

  ◆ 

  Definition/translation window opens.

Starting Over In ⑤, ఄ Þ From ⑧ Key Assignments in Scan Window

Toggle 2x Magnification On/Off	¥7)
Toggle Focus Mode	3 °
Switch to Photo Camera	7 #
Focus Lock	$\vec{c}$
Mobile Light On/Off	# , 🛱
Adjust Brightness	<b>⊙</b>
Open Help	□ <sup>½</sup>

**Advanced** 



Calendar		
■ View Settings		
Changing default view	● * Tools * ● * In PIM/Life menu,  Calendar * ● * ③ * Calendar Settings * ● * Default View * ● * Select type * ●	
Jumping to specified date	● → Tools → ● → In PIM/Life menu,  Calendar → ● → □ → Enter date → ●	
	Start Here        → Tools        → In PIM/Life menu,  Calendar        → See below	
Changing date color	By Days of the Week  (a) ⇒ Calendar Settings ⇒ ● ⇒ Set Color ⇒ (b) ⇒ By Week ⇒ ● ⇒ Select day ⇒ ● ⇒ Select color ⇒ ●	
	By Date Select date ⇒ Ч∃ ⇒ Select color ⇒ ● • Not available in 6Month View.	
	Resetting "By Date" Colors  ③	
Selecting task view option	● * Tools * ● * In PIM/Life menu,  Calendar * ● * ③ * Calendar Settings *  • * Tasks View * ● * Select option * ●	
Adding stamps (Month/3Month View)	● → Tools → ● In PIM/Life menu,  Calendar → ● → Select date → ② → Select  stamp → ●	
Hiding schedules	● Tools ● In PIM/Life menu,  Calendar ● Select date ● Select  entry ● ● ● Secret: ● On ● ●  • ♥	

	Start Here
Saving additional holidays	Adding Holidays <empty> ▶ ● ⇒ Enter name ⇒ ● ⇒ Enter date ▶ ● ⇒ Select frequency ▶ ● ⇒ ⊙</empty>
	Editing Added Holidays  Select holiday © Dedit Name:  Enter name ODATE:  Date:  Enter name Date:  Select frequency Date:
Removing/ restoring holidays	<ul> <li>Tools</li> <li>In PIM/Life menu,</li> <li>Calendar</li> <li>Set Holiday</li> <li>Select holiday</li> <li>(□/√)</li> </ul>

### ■ Saving/Editing Schedules

Setting Category/ Location	Start Here	
	Category  Category:   Select Category  Select Category  Select Category  Select Category  Select Category  Select Category	
	Location  Location:   ♠ ● ► Enter location → ● ♥	
Creating Categories	Start Here ● → Tools → ● → In PIM/Life menu,  Calendar → ● → □ → Calendar Settings →  ● → Set Category → ● → See below	
	Renaming Categories  Select Category	
	Changing Icons Select Category	
	Resetting  ③ → Reset Settings → ● → Enter Handset  Code → ● → Yes → ●	
Saving repetitive schedules	● Tools ● In PIM/Life menu, Calendar ● Select date ● Select entry ● ● Repeat: ● Select frequency ● Enter repeat time ● ● ♡	
	Repeat time is not available for <i>Every Year</i> .	

Saving S! Friend's Status information	Start Here ● → Tools → ● In PIM/Life menu, Calendar → ● → Select date → ● → Select entry → ● → ● → S! Friend'sStatus: → ● → Link Setting: → ● → Linked → ● → See below Availability Answer Status: → ● ← Edit → ♥ → ♥ ♥	
Otatus Illiorillation	Set Category first.	
	Comment: → ● → Enter text → ● → ♡ → ♡  • Set Category first.	
Editing entries	● Tools ● No In PIM/Life menu,  Calendar ● Select date ● Select  entry ● ● Select item ● Edit in  the same manner as saving schedules ● ♡	
	Start Here	
Changing Alarm tone/video & duration	Alarm Tone/Video  Assign Tone/Video:   Select tone/file  Select start point if required.	
	Duration  Duration:   Select time   Duration:   Durat	
Changing Alarm volume	● * Tools * ● * In PIM/Life menu, Calendar * ● * □ * Alarm Settings * ● Alarm Volume: * ● * Adjust level * ●	
Selecting Vibration option	● * Tools * ● * In PIM/Life menu,  Calendar * ● * □ * Alarm Settings * ●  * Vibration: * ● * Select option * ●	



	● → Tools → ● → In PIM/Life menu,
	Calendar → ● → 🖾 → Alarm Settings → ●
tone even in	For Manner Mode: ⇒ ● Ring ⇒ ● ⇒
Manner mode	Yes ⇒ ●

■ Managing Schedules		
	Start Here ● → Tools → ● In PIM/Life menu,  Calendar → ● → See below	
Searching entries	By Subject  ⑤ ♣ ▶ Enter subject ▶ ●	
	By Category	
Checking memory status	● → Tools → ● → In PIM/Life menu,  Calendar → ● → Select date → □ → Memory  Status → ●	
Deleting all entries	● Tools ● In PIM/Life menu,  Calendar ● ● □ Delete ● ■ All  Appointments ● ● Enter Handset Code ●  ● Yes ● ●	
	Start Here ● → Tools → ● In PIM/Life menu,  Calendar → ● → See below	
Deleting entries by specifying week (Week View)	Within One Week Select date ⇒ ② ⇒ Delete ⇒ ● → All This Week ⇒ ● → Yes ⇒ ●	
()	Up to the End of Previous Week Select date   □ → Delete → ● → Up to Last Week → ● → Yes → ●	

	Start Here ● → Tools → ● In PIM/Life menu,  Calendar → ● → See below	
Deleting entries by specifying month (Month/3Month View)	Within One Month Select date → ② → Delete → ● → All This Month → ● → Yes → ●	
(month/omonth view)	Up to the End of Previous Month Select date ⇒ ② → Delete → ● → Up to Last Month → ● → Yes → ●	
Deleting entries in six months (6Month View)	● * Tools * ● * In PIM/Life menu, Calendar * ● * ② * Delete * ● * All This 6Months * ● * Yes * ●	

### Tasks

### Task List

	● → Tools → ● → In PIM/Life menu, Tasks →
Hiding tasks	● Select task ⇒ 🖾 ⇒ Edit ⇒ • Secret:
	→ • On → • • • • • • • • • • • • • • • • • •

### ■ Saving/Editing Tasks

Editing tasks	● * Tools * ● * In PIM/Life menu, Tasks * ● * Select task * ⊕ * Edit * ● * Select item * ● * Edit in the same manner as saving tasks * ⊕
Setting priority	● Tools ● In PIM/Life menu, Tasks ● Select task ● □ ► Edit ● ● Priority: ● ● Select priority ● ● ♡

	Start Here	
Changing Alarm tone/ video & duration	Alarm Tone/Video  Assign Tone/Video:   Select folder  Select tone/file  Select start point if required.	
	Duration  Duration:   Select time   Duration:   Durat	
Changing Alarm volume	● → Tools → ● In PIM/Life menu, Tasks → □ → □ → Alarm Settings → ● → Alarm Volume: → ● → Adjust level → ●	
Selecting Vibration option	<ul> <li>Tools</li> <li>In PIM/Life menu, Tasks</li> <li>In PIM/Life men</li></ul>	
Sounding Alarm tone even in Manner mode	● Tools ● ● In PIM/Life menu, Tasks ● ● ⊕ Alarm Settings ● ● For Manner Mode: ● ● Ring ● ● Yes ● ●	

■ Managing	Tasks

Searching tasks	
	By Subject By Subject
	By Due Date
	By Due Date ⇒ ● ➤ Enter date ⇒ ●
Sorting tasks by priority	<ul> <li>Tools</li> <li>In PIM/Life menu, Tasks</li> <li>Sort</li> <li>Priority</li> </ul>
Checking memory	Tools  In PIM/Life menu, Tasks
status	● ⇒ 🖾 → Memory Status ⇒ ●
	● → Tools → ● → In PIM/Life menu, Tasks →
Deleting all tasks	
ŭ	Enter Handset Code → ● Yes → ●

### Alarms

Editing entries	● * Tools * ● * In PIM/Life menu, Alarms  • • Select entry • • Select item • • Edit in the same manner as saving entries  • • • • • • • • • • • • • • • • • • •	
Saving entry name	● * Tools * ● In PIM/Life menu, Alarms • • Select entry • • * Subject: • • *  Enter name • • • ♡	
	Start Here	
Changing Alarm tone/video	Using Preset Tone or Data Folder File  Select folder → ● ⇒ Select tone/file → ● ⇒ ⊙  • Select start point if required.	
	Using Customized Screen Tone/Video  Customized Screen	
Setting handset to vibrate at Alarm Time	● Tools ● In PIM/Life menu, Alarms ● Select entry ● Vibration: ● ● On or Link to Sound ● ● ♥  • Select Link to Sound to allow compatible SMAF files to control vibration.	
Sounding Alarm tone even in Manner mode	● Tools ● ● In PIM/Life menu, Alarms ● Settings ● For Manner Mode ● Ring ● Yes ●	
Activating Alarm based on World Clock time	● Tools • ● In PIM/Life menu, Alarms • Settings • ● Link to World Clk • On • ●	

### Wakeup TV

Editing entries	● * Tools * ● In PIM/Life menu, Wakeup  TV • ● * Select entry • ● * Select item * ● Edit in the same manner as saving entries • •
Changing Alarm tone/video	Start Here
	Using Preset Tone or Data Folder File Select folder → ● → Select tone/file → ● → ∞  • Select start point if required.
	Using Customized Screen Tone/Video  Customized Screen
Sounding Alarm	Tools  In PIM/Life menu, Wakeup  In PIM/Life menu, Wakeup
tone even in Manner mode	TV → ● → For Manner Mode → ● → Ring → ● → Yes → ●

### Calculator

Copying calculation results	While result appears, <sup>(2)</sup> → <i>Copy</i> → <b>(</b>
Changing exchange rate for currency conversion	Tools  In PIM/Life menu, Calculator  Money Converter  Exchange Rate  Domestic or Foreign  Enter rate
Converting currencies	● Tools ● In PIM/Life menu,  Calculator ● Enter amount of money  ⇒ Money Converter ● To Domestic  or To Foreign ● ●  Set Exchange Rate first.



## Expenses Memo

Changing Category of saved entry	● Tools ● In PIM/Life menu,  Expenses Memo ● Totals ● Select Category ●
Changing amount	● Tools ● ● In PIM/Life menu,  Expenses Memo ● ● Totals ● ●  Select entry ● ② ● Change Amount ● ●  Edit ●
Renaming Categories	● Tools ● ● In PIM/Life menu,  Expenses Memo ● ● Edit Category ● ●  Select Category ● ● Enter name ●

### Osaifu-Keitai<sup>®</sup>

Enabling to view e-money balances	● Tools ● In PIM/Life menu, Osaifu-Keitai ● IC Card Settings ● ● Balance Info ● Enter Handset Code ● ● $   $
Checking e-money balance on External Display	With clamshell closed,
Moving applications up/down Balance Info list	● Tools ● In PIM/Life menu, Osaifu-Keitai ● IC Card Settings ● Balance Info ● Enter Handset Code ● Select application ● Move ● Select target location ●

Removing applications Balance Info		● Tools ● In PIM/Life menu,  Osaifu-Keitai ● IC Card Settings ● Balance Info ● Enter Handset Code ● Select application ● ③ Delete ● ●
Customizing handset resp to reader/wri commands	ponse	● Tools ● In PIM/Life menu,  Osaifu-Keitai ● IC Card Settings ● Interface Settings ● Enter Handset  Code ● Select item ● Off ●
Opening IC	Card	● * Tools * ● * In PIM/Life menu, Osaifu-Keitai * ● * IC Card Settings * ● * IC Card Status * ●
		Start Here       ● $\rightarrow$ Tools       ● $\rightarrow$ In PIM/Life menu,         Osaifu-Keitai       ● $\rightarrow$ IC Card Settings       ● $\rightarrow$ Remote Lock       ● $\rightarrow$ Enter Handset Code       ● $\rightarrow$ Mail Remote Lock       ● $\rightarrow$ Notice Settings         ● $\rightarrow$ Send Notice       ● $\rightarrow$ See below
Changing IC Lock notice recipient		Changing Recipient  To Set Recipient → ● → Set Recipient → ●  Select method → ● Select/enter number/address → ● → → ♥  • Omit step of pressing  when selecting Phone  Book as setting method.
		Disabling Notice Off • • • • • • • •
Changing requ Missed Call co Call Remote L	ount for	● * Tools * ● * In PIM/Life menu, Osaifu-Keitai * ● * IC Card Settings * ● ** Remote Lock * ● * Enter Handset Code ** ● * Call Remote Lock * ● * Count for Lock * ● * Enter Missed Call count * ● ** • • • • • • • • • • • • • • • • • •
Restoring de Osaifu-Keitai settings		● * Tools * ● * In PIM/Life menu, Osaifu-Keitai * ● * IC Card Settings * ● * Set to Default * ● * Enter Handset Code * • * Yes * ●



Starting via Simulated Call menu	● Tools ● In PIM/Life menu,  Simulated Call ● Receive Simulated Call ● Yes ●  • Simulated Call starts immediately regardless of Receive Timing setting. • Settings remain even after starting Simulated Call during setup.
Clearing caller information	● Tools ● In PIM/Life menu, Simulated Call ● Set Caller ● © □  Yes ● ♥ ♡ ♥ ♡
Overriding Silent volume setting	● Tools ● In PIM/Life menu, Simulated Call ● For Silent Mode ●  Ring ● Yes ●   Yes

Hour	Minder

Changing Hour Minder tone/video	● Tools ● ● ○ Clock/Gauge Hour Minder ● Advanced ● Assign Tone/Video: ● Select folder ● ● Select tone/file ● ● ♡ ● ○ • Select start point if required.
Setting handset to vibrate at Hour Minder Time	● Tools ● ● Clock/Gauge Hour Minder ● Advanced ● Vibration: ● On or Link to Sound ● ♥ ♥ ♥  • Select Link to Sound to allow compatible SMAF files to control vibration.
Sounding Hour Minder tone even in Manner mode	● Tools ● ⊖ Clock/Gauge Hour Minder ● Advanced ● For Manner Mode: ● Ring ● Yes ● ⊕
Activating Hour Minder based on World Clock time	Minder Advanced Link to  World Clk: Average On Very Very Clark

### Pedometer

Changing Pedometer indicator	● Settings ● In Phone menu, Display ● Standby Display ● Pedometer ● Select item ● ●
Using Pedometer Calendar	● Tools ● ● → Clock/Gauge  Pedometer ● ● Pedometer Calendar ● ●  Select date ● ● Degree of achievement appears. ● Press ★ or ★ to view previous or next month.
Checking accumulated data	● * Tools * ● * • Clock/Gauge * Pedometer * ● * Accumulated Data * • • Change in body information is reflected in the data.
Resetting accumulated data	● * Tools * • • • ○ Clock/Gauge * Pedometer * • Accumulated Data * • * Code * • * Yes * • • Averages are also reset.
	Start Here
Customizing	Changing Tone  Goal Sound → ● Select pattern → ●
achievement notice	Changing Tone Volume  Goal Volume
	Selecting Vibration Option  Vibration
	Changing Duration  Duration → ● → Select time → ●  For custom Duration, select Other and press ●.

S! GPS Navi	
Sending current location via mail	● * Tools * • • • ○ Clock/Gauge * \$! GPS  Navi * • * Location Mail * • *  Positioning complete * • Complete  message * • ○  • When accuracy level is 1 or 2, choose No and press •  after positioning, then complete message.
	Start Here ● → Tools → ● → ♂ Clock/Gauge → S! GPS Navi → ● → NAVI Settings → ● → Map URL Settings → ● → See below
Changing map	Adding URLs <not set=""> → ● ≠ Enter URL → ●</not>
source URL	Setting Destination URL Select URL
	Viewing/Editing/Deleting URLs Select URL ⇒ ⊚ ⇒ Display, Edit or Delete ⇒ ● • Follow onscreen prompts.
Disabling positioning	● Tools ● ● ○ Clock/Gauge > S! GPS  Navi ● NAVI Settings ● ●  Positioning Lock ● On ● Enter  Handset Code ●
Selecting Location Information transmission option	● Tools ● ● ⊖ Clock/Gauge → S! GPS  Navi ● ● NAVI Settings ● ● Send  Location Info ● ● Select option ● ●

Using My Location & Location Log	Start Here
	Opening Map
	Showing Routes via Navi Appli  (a) ⇒ Go to ⇒ (b) ⇒ Yes ⇒ (c)  • Follow onscreen instructions.
	Inserting into Message Text  ② → As Msg. Text → ● Complete message  → ⊙
	Saving to Phone Book  (a) ⇒ Save to Ph.Book ⇒ ● → As New Entry  (b) ⇒ Complete other fields ⇒ ∞  • To add to an existing entry, select As New Detail.
Saving Location Log records to My Location	● Tools ● ● ○ Clock/Gauge S! GPS  Navi ● Location Logs ● Select  record □ Set as My Location ● Name ● ■ Enter name ● □
Deleting Location Log records	● Tools ● ● ○ Clock/Gauge S! GPS  Navi ● Location Logs ● Select  record □ Delete or Delete All ●   Yes ■ ●  Omit record selection step when deleting all records.
Suppressing Information window after providing Location Information automatically	● * Tools * ● * • Clock/Gauge * S! GPS Navi * ● * NAVI Settings * ● * Inform Location * ● * Do not Show * ● * Enter Handset Code * ●

Notepad	
Editing Notepad	Start Here ● → Tools → ● Doc./Rec. → Notepad → ● → Select entry → □ → See below
	Editing Text  Edit Text → ● ⇒ Edit ⇒ ●
	Changing Category  Change Category   Select Category
Searching text within all entries	● * Tools * • • • • Doc./Rec. * Notepad  • • Select entry * □ * Search * • •   Enter text * •
Inserting Notepad text into message text	● Tools ● ⊖ Doc./Rec. Notepad ● Select entry ⑤ Send ● As Message Text ● S! Mail or SMS ● Complete message ○ ● SI Mail Composition window opens automatically depending on character count.
Sending entries via S! Mail	● * Tools * • • • Doc./Rec. * Notepad  • • Select entry * ○ * Send * • •  Via Message * • Complete message * •
Creating text files	<ul> <li>Tools</li> <li>Select entry</li> <li>Setting/Manage</li> <li>Create Text File</li> <li>Save here</li> <li>Tools</li> <li>Setting/Manage</li> <li>Enter name</li> </ul>
Importing text files	Tools Doc./Rec. Notepad  Select entry Doc./Rec. Notepad  Import Text File Doc./Rec.
Checking memory status	● * Tools * ● * ◆ Doc./Rec. * Notepad  • • * Select entry * ○ * Setting/Manage  • • * Memory Status * •

Opening properties	<ul> <li>Tools</li> <li>O Doc./Rec.</li> <li>Notepad</li> <li>Details</li> <li>Details</li> </ul>
Voice Recorder	
	● ⇒ Tools ⇒ ● ⇒ ⇔ Doc./Rec. ⇒ Voice Recorder ⇒ ● ⇒ □ ⇒ Record Time ⇒ ● ⇒
Saving longer	Extended Voice > ( ) > ( ) Recording
recordings	starts ⇒ ● → Recording ends
<b>g</b> -	Insert Memory Card to record in Extended Voice
	mode. (Recording is saved automatically.)
	Tools      O      Doc./Rec.      Voice
Sending Voice files	Recorder → ● → ● Recording starts → ●
via S! Mail	Recording ends ⇒ Save and Send ⇒ ●
	Complete message ⇒ (y)
	<ul> <li>Available in For Message mode.</li> </ul>
	Tools  T
	Recorder ⇒ ( ) ⇒ ( ) ⇒ Save Recording to ⇒
Switching storage	● ⇒ Select option ⇒ ●
media	Available in <i>For Message</i> mode.
	Set to Ask Each Time to select media after every
	recording.



Scan Barcode	
	Start Here In a text entry window,
Scanning during text entry	Pasting All Scan Results
	Pasting a Part of Scan Results  ② → Select first character → ● → Highlight text range → ●
Scanning continuously	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● □ Continuous Scan ● On ● Frame barcode in center of Display ● • Choose Yes to continue scanning or No and press ● to view scan results.
Reading saved barcode images	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Open Barcode * ● * Select file * ●
Saving scan results	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * ② * Save * ●
Saving to Notepad	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * ⑤ * Notepad * ●

Saving linked info to Phone Book	● Tools ● Doc./Rec. ■ Barcode/ Scan ■ Scan Barcode ● Frame barcode in center of Display ● Select number or mail address ● Save to Ph.Book ● As New Entry ● ● Complete other fields ● ○ To add to an existing entry, select As New Detail. ● When MEMORY: appears in scan results, press ● to enter the items underlined with a dotted line automatically in Phone Book entry window.
Opening saved scan results	Tools Doc./Rec. Barcode/ Scan Doc./Rec. Barcode/ Scan Doc./Rec. Barcode/ Scan Doc./Rec. Barcode/ Select file Select a file and press a to rename files, open properties or delete files. Some files may not open.
	Start Here
Using linked info	Sending Messages Select mail address → ● Complete message → ⊕  • When MAILTO: appears in scan results, press ● to enter the items underlined with a dotted line automatically in Composition window.
	Accessing Internet Sites Select URL



Using images as Wallpaper	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select image ● Set as Wallpaper ● Vertical or Horizontal ● ● ●  For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.
Saving images & melodies	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * Select file * □ * To Data Folder * ●
Opening or playing files	● * Tools * ● * ◆ Doc./Rec. * Barcode/ Scan * ● * Scan Barcode * ● * Frame barcode in center of Display * ● * Select file * ●
Using images for System Graphics	● Tools ● Doc./Rec. Barcode/ Scan ● Scan Barcode ● Frame barcode in center of Display ● Select image ● As System ● Select item ● Specify image area ● Some images may be usable without specifying image area.

Pasting to message text	Start Here
	All Text
	Selected Text  ③ Select first character → ● Highlight text range → ● S! Mail or SMS → ● ★  Complete message → ♡  • SI Mail Composition window opens automatically depending on character count.
Copying text	Start Here
	Text  ③ → Copy → ● → Select first character → ●  → Highlight text range → ●
	Number, Address or URL Select number, mail address or URL → ⑤ → Copy Telephone, Copy Address or Copy URL → ⑥

Scan Card	
Saving to Notepad	● → Tools → ● → ⊖ Doc./Rec. → Barcode/ Scan → ● → Scan Card → ● → Frame card in center of Display → ● → □ →  Notepad → ●
Pasting to message text	Start Here
	All Text
	Selected Text  ③ Select first character → ● Highlight text range → ● SI Mail or SMS → ● Complete message → ⊙  • SI Mail Composition window opens automatically depending on character count.
Copying text	Start Here
	Text  ② → Copy → ● → Select first character → ●  → Highlight text range → ●

Coop Coud

#### Scanning and In a text entry window, (□) → Scan → (●) → pasting during text Scan Text ⇒ • Frame text in center of Display → ● Select line → ● → ● entrv Scan → • Scan Text → • Frame text in Scanning more text Select Continue Part to enter additional text or Scan More to enter text after a line break. Scan ⇒ • Scan Text ⇒ • Frame text in Saving scan results ( ) ⇒ ( ) ⇒ Save ⇒ ( ) Scan ⇒ • Scan Text ⇒ • Frame text in Saving linked info Select number or mail address to Phone Book

file 🖈 💿

→ Complete other fields → (Y)

properties or delete files. · Some files may not open.

• To add to an existing entry, select As New Detail. Scan ⇒ (•) ⇒ Scanned Results ⇒ (•) ⇒ Select

• Select a file and press (a) to rename files, open


**Scan Text** 


Opening saved

scan results



	<b>-</b>
Using linked info	Start Here
	Dialing Numbers Select phone number
	Sending Messages Select mail address
	Accessing Internet Sites Select URL
	Start Here
Pasting to message text	All Text
	Selected Text  ③ Select first character → → Highlight text range → → S! Mail or SMS → →  Complete message → (**)
	Complete message 4

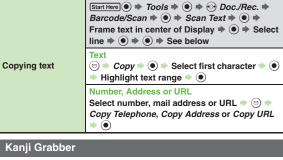

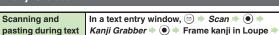

entry

● Scan results appear → ●

### Osaifu-Keitai®



### Cannot use Osaifu-Keitai® (S! FeliCa)

 Battery may be low. Charge battery or install a charged battery.



## Recognition via reader/writer takes time

• Check logo area. Foreign articles can block/hamper recognition.



# Call Remote Lock does not activate even after specified number of Missed Calls

- Missed Call count is reset by calls from other numbers. If series is interrupted, start over from the beginning.
- When Call Forwarding is active, Missed Calls may not be recorded.

### Wakeup TV



## TV does not activate with specified channel

 If Wakeup TV Time arrives while TV is active, channel does not switch to the specified one.

### Voice Recorder



### Cannot record properly

 If incompatible microphone is connected, recording may fail.



### Noise/skipping occurs

 Avoid shocks to handset while recording; may cause noise or skipping.



### Recording takes time to start

 Recording window may take longer to open as more Voice files are saved on Memory Card.



### Scanning Barcode/Card/Text



### Cannot read barcodes properly

- Scan may fail if barcode is dirty or unclear.
- Scan may fail if barcode is scanned under inadequate light.
- Scan may fail if multiple barcodes are captured at one time.



### Cannot read barcodes during text entry

 Scanning is not available during calls or when mobile camera is active.



### Cannot read barcode images in **Data Folder automatically**

• When scan fails, follow onscreen instructions and select next barcode image manually.



### Cannot scan business cards properly

- Scan fails if business card is printed in light-colored text on a dark background, handwritten or printed in casual/decorative fonts, decorated with a background pattern, or designed with both vertical and horizontal text.
- · Scan may fail if business card is printed in light-colored text on a light background, printed in italics or extremely small fonts, decorated with a logo or logo-like text, printed on a glossy paper or other material, or dirty/folded.



### Cannot scan text properly

- Scanning over 35 characters at one time may yield poor results.
- Adjust to frame text in []. Letters at the ends may be distorted.