

Mobile Widget	10-2
Customizing Standby Display (Japanese).....	10-2
S! Quick News	10-5
Receiving Content Updates (Japanese)	10-5
S! Information Channel	10-6
S! Information Channel & Weather Indicator (Japanese).....	10-6
e-Books	10-7
Reading e-Books (Japanese)	10-7

S! Friend's Status	10-8
Using S! Friend's Status	10-8
S! Circle Talk	10-11
Using S! Circle Talk	10-11
Near Chat	10-13
Using Near Chat (Japanese).....	10-13
Blog Tool	10-14
Blogging	10-14
Additional Functions	10-16
Troubleshooting	10-23

10

Entertainment & Communication



Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/ functions immediately from Standby.



Obtaining Widgets

- 1 → **Entertainment** → → **Mobile Widget** →



Mobile Widget Menu

- 2 **Widget Contents** →



Widget List

- 3 **Download** →

• Follow onscreen instructions.

Installing Widgets

• Some widgets may need to be installed manually; follow these steps:

[Widget List] Select widget → →

Install → → Yes →

Activating Single Widgets

[Widget List] Select widget → → →

Deleting Widgets

- 1 In Widget list, select widget

→

• SI速報ニュース/SIともだち状況 cannot be deleted.

- 2 **Delete** → → Yes →

Deleting All Widgets

In Widget list, **Download** → →

Delete All → → Enter Handset

Code → → Yes →

■ If there is a widget saved in Standby, a confirmation appears; follow onscreen prompt.

Advanced

- Opening properties ● Opening widget notification history ● Canceling automatic updates ● Receiving updates automatically while abroad ● Hiding confirmation abroad ● Disabling widget notifications ● Disabling cookies ● Deleting cookies (P.10-16)



Saving Widgets to Standby

- 1
- 2 Use to select (OPEN)
 ➔



- 3 Select widget ➔
 - Corresponding icon appears in Standby.
- 4 Use to specify target location ➔

Using Touch Panel

Tap (OPEN) ➔ Drag widget to Standby ➔ Tap (CLOSE)

- If (OPEN) does not appear, press (tap (Widget On) in Viewer position).

Moving Widgets with Touch Panel

After 1, Long Touch Display ➔

Move Mode ➔ Drag icon ➔ Confirm

Using Pointer ()

- After 1, Long Press to activate pointer navigation; select widgets, etc.
- To cancel pointer navigation, Long Press .

Using Widgets

- 1 ➔ Use to select widget ➔



- 2
 - Widget activates; follow onscreen instructions.


Using Touch Panel

Tap widget

- If no widget appears, press (tap (Widget On) in Viewer position).

Removing Widgets from Standby

- 1 ➔ Use to select widget ➔
- 2 Operation ➔

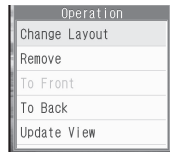

- 3 Remove ➔
- 4 Yes ➔

Advanced

- Logging in to Yahoo!JAPAN
- Moving widgets
- Viewing widget-related information (Japanese)
- Slowing pointer speed
- Removing widgets at once by sheet (And more on P.10-16 - 10-17)



Using Sheets

Paste widgets and Standby Shortcuts on each sheet; toggle sheets to use them.

Saving Widgets on Other Sheets

1 In Widget list, select widget




2 Set as StbyShortcut



10

3 Select sheet

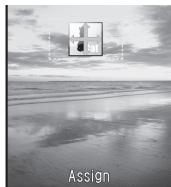

4 Specify target location

Advanced

- Editing sheet names
- Locking sheets
- Adding news items
- Showing unread news only
- Showing news images
- Assigning members
- Managing members (And more on P.10-17 - 10-18)

Toggling Sheets



- To toggle further, press or .
- Sheet name appears at the top, then disappears.
- Save widgets as needed; corresponding icons appear on the current sheet.

Using Touch Panel

Drag finger left or right

- If no widget appears, press (tap (Widget On) in Viewer position).

Using Locked Sheets

- → Select → → Enter Handset Code →
- Alternatively, tap then enter Handset Code and tap **OK**.

Using S! Quick News & S! Friend's Status Widget

933SH is preloaded with **S!速報ニュース!**と**も** **だち状況** (S! Quick News & S! Friend's Status widget) that shows S! Quick News and S! Friend's Status information in Standby.



View Settings

Setting View Pattern

1 → Use to select S! Quick News/S! Friend's Status widget

2 Settings → → Pattern Setting →

3 Select item → (✓) →

Switching View

1 → Use to select S! Quick News/S! Friend's Status widget

2 Operation → → Switch Pattern →

- Repeat the above steps to switch the view.



Receiving Content Updates (Japanese)

View content updates or breaking news.
Transmission fees apply.

Registering S! Quick News Items

- 1 ● ➔ **Entertainment** ➔ ●
➔ **S! Quick News** ➔ ●



S! Quick News Menu

- 2 **S! Quick News List** ➔ ●



S! Quick News List


- 3 **登録はこちら** ➔ ● ➔ **Yes**
➔ ●

- Handset connects to the Internet.

- 4 **Select item** ➔ ●
• Follow onscreen instructions.

Opening Information

- 1 **In S! Quick News List, select item** ➔ ●
• Title list appears.
- 2 **Select title** ➔ ●

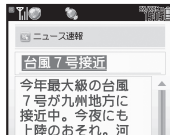

- Press (⏪) to return to title list, or (⏩) to open next title.

Updating Items Manually

- [S! Quick News List] **Select item** ➔
⏪ ➔ **更新** ➔ ● ➔ **一件** or **全件** ➔ ●

Indicators

	Unread Special news		Unread General news
	Read Special news		Read General news
	Unread News Flash		Auto update disabled
	Read News Flash		

Advanced

- Updating S! Quick News list automatically
- Checking update schedule
- Deleting S! Quick News items
- Resetting S! Quick News List
- Changing background image
- Accessing source sites
- Disabling image download (P.10-18 - 10-19)



S! Information Channel & Weather Indicator (Japanese)

Subscribe to Japanese mobile periodicals that download to handset automatically; use Weather Indicator as needed. Transmission fees apply.

Service Registration & Content Subscription

- 1 ● ➔ **Entertainment** ➔ ●
➔ **S! Information Channel/
Weather** ➔ ●



S! Information Channel Menu

- 2 **Registration/Cancel** ➔ ●
- Handset connects to the Internet. Follow onscreen instructions.

New Received Information

Information window opens for new S! Information Channel info delivery.

- 1 **While Information window appears, S! Info. Channel** ➔ ●
- S! Information Channel page opens. Follow onscreen instructions.
 - S! Information Channel page handling is similar to that of Yahoo! Keitai.

- 2 ☎ ➔ **Page closes**

Opening Unread Latest Issue

[S! Information Channel Menu]

What's New ➔ ●

Opening Back Issues

[S! Information Channel Menu] **Back**

Issue ➔ ● ➔ **Select date** ➔ ●

Using Weather Indicator

After S! Information Channel registration, local area weather indicator appears in Standby.

☀	Clear skies (day)	❄	Snow
☾	Clear skies (night)	⚡	Thunder showers
☁	Cloudy	▶	Then
☔	Rain	✓	Partly/chance of

Example: ☁/☔ ➔ Partly cloudy with a chance of rain
Indicators other than the above also appear for more information.

Manual Update

[S! Information Channel Menu]

Weather Indicator ➔ ● ➔ **Manual Update** ➔ ● ➔ **Yes** ➔ ●




Advanced

- ☞ ● Hiding Information window for new received info ● Changing Display Size ● Changing scroll unit ● Copying text ● Hiding Weather Indicator in Standby
● Canceling Weather Indicator automatic updates ● Hiding Information window for weather updates (And more on P.10-19 - 10-20)



Reading e-Books (Japanese)

Downloading e-Books

- 1  ➔ **メニューリスト** ➔ 
- 2 **書籍・コミック・写真集** ➔ 
 - Follow onscreen instructions.
 - Downloaded e-Books are saved to Data Folder (Books).

Note

- Alternatively, go to SH-web Mobile Internet site (**シャープメーカーサイトSH-web** in Bookmarks; see P.5-8) for e-Books.


e-Book Viewer

Read XPDF books and dictionary files. Some files may not be supported.

- 1  ➔ **Entertainment** ➔ 




Entertainment Menu

- 2 **e-Book Viewer** ➔ 
 - e-Book Viewer starts. Refer to the e-Book Viewer help menu for operational instructions.

BookSurfing®

Download Contents Keys and read CCF files. Some files may not be supported.

- 1 **In Entertainment menu, BookSurfing** ➔ 
 - BookSurfing® S! Application starts. Refer to the BookSurfing® help menu for operational instructions.

Moving CCF Files via Memory Card

- When purchasing a new handset, move CCF files and retrieve Contents Keys to open the files. Some files may need to be re-downloaded.

Advanced

-   Copying text  Opening non-933SH e-Books (Library)  Using Library (P.10-20)




Using S! Friend's Status

Exchange current usage status, mood, etc. with compatible handsets.


- Save and organize members in Groups.
- S! Friend's Status requires a separate contract and basic monthly fee.
- Set Connection status to **Online** first.

First S! Friend's Status Use

Follow these steps to register a number saved in Phone Book; Status, Availability and Comment are sent to the members.

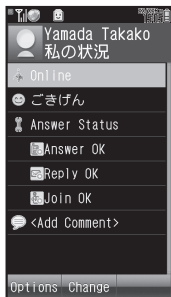

1 (Long)

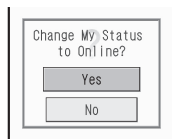


2 Yes



3 Yes

4 Phone Book

5 Select entry Select phone number

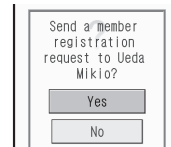

- Omit number selection step if only one number is saved.

6 Yes

- Registration request is sent to the number.

When Request is Accepted

- An acceptance notice arrives; My Status is sent and member's status appears on handset.

Direct Entry

In , **Add New Entry** Enter phone number

Advanced

- Adding members
- Deleting members
- Moving members
- Renaming Groups
- Rejecting requests
- Updating manually
- Opening notices
- Sending My Details image (And more on P.10-21)





Opening Member Status

- 1 (Long) \rightarrow Select Group



My Status
Member Status

- 2 Select member \rightarrow




When Cancellation Notice Arrives

- Member is deleted from S! Friend's Status member list.

Changing My Status

Follow these steps to change Status, Availability and Comment; new status is sent to the members.

- 1 (Long) \rightarrow 私の状況 \rightarrow

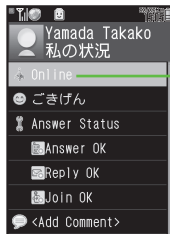

Connection Status

My Status Window

- 2 Select Status, e.g., ごきげん \rightarrow



Status Template Window

- 3 Select new Status \rightarrow

- 4 Select Availability, e.g., Answer OK \rightarrow \rightarrow Select new Availability \rightarrow

- 5 <Add Comment> \rightarrow \rightarrow Enter text \rightarrow

- 6 \rightarrow Update starts

Changing Connection Status

[My Status Window] Online (or Offline) \rightarrow \rightarrow Select status \rightarrow

Changing Status Icon/Label

[Status Template Window] Select Status \rightarrow \rightarrow Status Icon or Status Label \rightarrow \rightarrow Select Pictogram or enter text \rightarrow \rightarrow

Changing Availability Settings at Once


In 4, Answer Status \rightarrow \rightarrow Select new Answer Status \rightarrow \rightarrow From

Editing My Status Name

[My Status Window] \rightarrow Edit Name \rightarrow \rightarrow Edit \rightarrow

Receiving Request from Unsaved Numbers

When a registration request arrives, a confirmation appears.

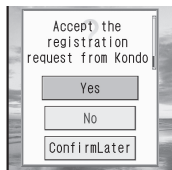

1 Yes → ●

- Acceptance notice is sent; the number is registered.

Rejecting

In 1, No → ● → Yes → ●

- Rejection notice is sent; the number cannot be registered for 24 hours.
- For **ConfirmLater**, Information window opens.

Creating Status Templates


Save custom combinations of Status Icon and Status Label to each template.



1 In Status Template window, New Entry → ●

2 Enter name → ●

3 <未定> → ●



4 Status Icon → ● → Select Pictogram → ●

5 Status Label → ● → Enter text → ● → Y7

6 Repeat 3 - 5 → Y7 → Saved

Saving to Data Folder

[Status Template Window] ⏪ Select template → Ⓜ → Save to DF → ●
→ Save here → ●

Loading Templates via Data Folder

[Status Template Window] Ⓜ → Add Template → ● → Select template → ●

Renaming Templates

[Status Template Window] ⏪ Select template → Ⓜ → Edit Temp. Name → ● → Enter name → ●

Advanced

- 👉 ● Resetting templates (P.10-21)



Using S! Circle Talk

Use handset like a walkie-talkie to speak to multiple parties simultaneously.


- A subscription to S! Friend's Status is required.
- Transmission fees apply during S! Circle Talk.

Registering Members

Follow these steps to register a number saved in Phone Book:

- 1 → **Communication** → → **S! Circle Talk** →
 - When registering a member for the first time, a confirmation appears. Choose **Yes** and press , then skip ahead to 3.

- 2 **<Add New Entry>** →



- 3 **Group** → → **Group**
Name: → → **Enter name**
 →



- 4 **Select number, e.g., No.1:**
 →

- 5 **Phone Book** →

- 6 **Select entry** → → **Select phone number** →



- Omit number selection step if only one number is saved.
- Repeat 4 - 6 to add members.

- 7 → **Saved**

Saving as Individuals

In , **Individual** → → -
Saving from S! Friend's Status Member List

- In , **Members List** → → **Select member** → →
- Omit when **Individual** is selected in .

Advanced

- Editing individual members ● Editing Groups (P.10-22)



Initiating S! Circle Talk

Follow these steps to send S! Circle Talk requests to members:

(First, set Connection status to *Online* (P.10-9).)

- 1 ➔ **Communication** ➔ ➔ **S! Circle Talk** ➔



- 2 **Select member or Group** ➔

- 3 ➔ **Transmission starts**

- S! Circle Talk starts when request is accepted by a receiver.
- Loudspeaker activates automatically.

Direct Entry

Enter phone number ➔ ➔ **Call**
S! Circle Talk ➔ ➔

S! Circle Talk Operations

Speaking

- 1 **Press and hold** **when**
Press and Hold **appears**
 ➔ **You have the floor**



- **:My Turn** appears when you have the floor.

- 2 **Keep holding** **to speak**
 ➔ **Release** ➔ **Floor is released**

- Warning tone sounds before time limit.

Incoming Calls during S! Circle Talk

- Incoming calls are rejected. Set handset to exit S! Circle Talk to answer incoming calls as needed.

Canceling Loudspeaker

During S! Circle Talk,

- To reactivate, follow these steps:

➔ **While message appears,**

Exiting S! Circle Talk

- 1 ➔ **Connection ends**
 - S! Circle Talk ends automatically when there is only one participant left, including yourself.

Rejoining S! Circle Talk

- ➔ **Select most recent S! Circle Talk record** ➔ ➔ **Rejoin Circle Talk** ➔
- Not available when S! Circle Talk has ended or maximum number of participants are already engaged.

Accepting S! Circle Talk Request

- 1 **While handset is ringing/vibrating,** ➔ **S! Circle Talk starts**

- Alternatively, press .
- S! Circle Talk Operations: left

Advanced

- Disabling Loudspeaker ● Exiting S! Circle Talk for incoming calls (P.10-22)



Using Near Chat (Japanese)

Exchange real-time text messages wirelessly with compatible Bluetooth® devices within ten meters. (Available even when handset is out-of-range.) Because this application employs Bluetooth® wireless technology transmission/connection fees do not apply.

Access Restriction



- In the event that this handset may be used by a minor, access to this application may be password restricted by a supervising adult. In this case, Handset Code access must also be managed to prevent the execution of Memory All Clear that may be used to reset the application password.

Sending Near Chat Request

- 1  ➔ **Communication** ➔ 
➔ **Near chat** ➔ 



- 2 **Yes** ➔ 

- Near Chat S! Application starts.
- A confirmation appears. Read the message and press  (はい) or  (いいえ).
- For more, see Near Chat S! Application instructions.



Receiving Near Chat Request

When a Near Chat request arrives, a tone sounds and S! Appli Notification appears.





After a period of inactivity, Information window opens, tone sounds and notification appears.

- 1 **Yes** ➔ 

- Near Chat S! Application starts.
- A confirmation appears. Read the message and press  (はい) or  (いいえ).
- For more, see Near Chat S! Application instructions.

Rejecting Request

In , **No** ➔ 



Blogging

Save blog details to view or update blogs easily on handset.

Saving Blog Details

Setup for Posting via Mail

Follow these steps to save blog name and address for posting:

- 1 **Communication** → **Blog Tool**



Blog Tool Window

- 2 **Add New Entry**



Blog Setting Menu

- 3 **Blog Title** → **Enter name**

- 4 **Blog by send Mail**



Blog Setting Menu (Mail)

- 5 **Blog's Email Address** → **Enter mail address**

- 6 **CLEAR** → **Y**

Saving Title/Text for Posts

After **ESC**, **Blog's Title** or **Blog's Text**

→ **Enter** → **Enter** → **ESC**

- Saved title/text is entered automatically when posting.

Setting Image Size for Posting

After **ESC**, **Picture Size** → **Select**

size → **Enter** → **ESC**

Setup for Posting via the Internet

Save URL for Yahoo! Keitai or PC Site Browser, or both.

- 1 In **Blog Setting** menu, **Refer/Send by Yahoo! Keitai** or **Refer/Send by PC Site Browser**



- 2 **Blog's URL** → **Enter URL**

- 3 **Refer Blog's URL** → **Enter URL**

- 4 **CLEAR** → **Y**



Advanced

- Editing entries
- Deleting entries (P.10-22)

Posting to Blogs

Complete setup for posting via mail/
Internet beforehand.



Posting via Mail

- 1 In Blog Tool window, select entry ➔ 
- 2 **Blog by send Mail** ➔ 
 - S! Mail Composition window opens with address entered.
 - Omit  if no URL is saved for posting.
- 3 Complete message ➔ 


Posting via the Internet

- 1 In Blog Tool window, select entry ➔ 
- 2 **Blog by send Browser** ➔ 
 - Page of URL saved in *Blog's URL* opens.
 - Omit  if no address is saved for posting.
 - If PC Site Browser message appears, follow onscreen prompts.

When URL is Saved for Yahoo! Keitai &
PC Site Browser

After , select browser ➔ 

Opening Blog Page

- 1 In Blog Tool window, select entry ➔ 
 - Page of URL saved in *Refer Blog's URL* opens.
 - If PC Site Browser message appears, follow onscreen prompts.

When URL is Saved for Yahoo! Keitai &
PC Site Browser

After 1, select browser ➔ 



Mobile Widget

Managing

Opening properties	<ul style="list-style-type: none"> ● → Entertainment → ● → Mobile Widget → ● → Widget Contents → ● → Select widget → Details → ● ● Select widget other than <i>S!速報ニュース!</i>ともだち状況.
--------------------	---

Widget History

Opening widget notification history	<ul style="list-style-type: none"> Start Here ● → Entertainment → ● → Mobile Widget → ● → Widget History → ● → See below
	<p>Showing All Text</p> <ul style="list-style-type: none"> Select record → ☰ → View full text → ●
	<p>Deleting a Record</p> <ul style="list-style-type: none"> Select record → ☰ → Delete → ● → Yes → ●
	<p>Deleting All Records</p> <ul style="list-style-type: none"> Select record → ☰ → Delete All → ● → Enter Handset Code → ● → Yes → ●

Settings

Canceling automatic updates	<ul style="list-style-type: none"> ● → Entertainment → ● → Mobile Widget → ● → Settings → ● → Auto Refresh → ● → Off → ●
Receiving updates automatically while abroad	<ul style="list-style-type: none"> ● → Entertainment → ● → Mobile Widget → ● → Settings → ● → AutoConnect Abroad → ● → On → ●
Hiding confirmation abroad	<ul style="list-style-type: none"> ● → Entertainment → ● → Mobile Widget → ● → Settings → ● → Set Use Abroad → ● → Off → ●

Disabling widget notifications	<ul style="list-style-type: none"> ● → Entertainment → ● → Mobile Widget → ● → Settings → ● → Notification Setting → ● → Off → ●
--------------------------------	---

Disabling cookies	<ul style="list-style-type: none"> ● → Entertainment → ● → Mobile Widget → ● → Settings → ● → Cookies → ● → Disabled → ●
-------------------	--

Deleting cookies	<ul style="list-style-type: none"> ● → Entertainment → ● → Mobile Widget → ● → Settings → ● → Delete Cookies → ● → Yes → ●
------------------	--

Operations in Standby

Logging in to Yahoo!JAPAN	<ul style="list-style-type: none"> ☰ → ☰ → Yahoo!JAPAN log in → ● ● Follow onscreen instructions. ● To log out, select Yahoo!JAPAN log out in the above steps.
---------------------------	--

Moving widgets	<ul style="list-style-type: none"> ☰ → Use ☳ to select widget → ☰ → Operation → ● → Change Layout → ● → Specify target location → ●
----------------	--

Moving widgets to front/back	<ul style="list-style-type: none"> ☰ → Use ☳ to select widget → ☰ → Operation → ● → To Front or To Back → ●
------------------------------	---

Updating view	<ul style="list-style-type: none"> ☰ → Use ☳ to select widget → ☰ → Operation → ● → Update View → ●
---------------	---



Removing widgets at once by sheet	<p>Start Here (Start Here) → (Menu) → <i>Operate from List</i> → (OK) → <i>Remove</i> → (OK) → See below</p> <p>All Widgets <i>Remove All</i> → (OK) → Select sheet → (v) → Yes → (OK)</p> <p>Selected Widgets <i>Select also Remove</i> → (OK) → Select widget → (OK) (□/✓) → Complete selection → (v) → Yes → (OK)</p>
	<p>(Start Here) → (Menu) → <i>Information</i> → (OK)</p>
	<p>(Start Here) → (Menu) → <i>Settings</i> → (OK) → <i>Cursor Speed</i> → (OK) → <i>Slow</i> → (OK)</p>
Viewing widget-related information (Japanese)	
Slowing pointer speed	

Sheets

Editing sheet names	<p>Start Here (Start Here) → (Menu) → <i>Settings</i> → (OK) → <i>Sheet Settings</i> → (OK) → <i>Change Sheet Name</i> → (OK) → See below</p> <p>Renaming Select sheet → (OK) → Enter name → (OK)</p> <p>Resetting All Sheet Names (Menu) → Yes → (OK)</p>
	<p>Start Here (Start Here) → (Menu) → <i>Settings</i> → (OK) → <i>Sheet Settings</i> → (OK) → <i>Set Sheet Lock</i> → (OK) → Enter Handset Code → (OK) → See below</p> <p>Activating Lock Select sheet → (OK) → On → (OK)</p> <p>Changing Method for Temporary Access <i>Unlock Method</i> → (OK) → <i>No Password</i> → (OK)</p> <ul style="list-style-type: none"> Press (Start Here), then select (Menu) and press (OK) to unlock sheet temporarily.
Locking sheets	

■ S! Quick News & S! Friend's Status Widget (S! Quick News)

Adding news items	<p>(Start Here) → Select S! Quick News/S! Friend's Status widget → (Menu) → <i>Operation</i> → (OK) → <i>Contents Menu</i> → (OK) → <i>Add News</i> → (OK) → <i>S! Quick News List</i> → (OK) → <i>登録はこちら</i> → (OK) → Yes → (OK) → Select genre → (OK) → Select item → (OK)</p> <ul style="list-style-type: none"> Follow onscreen instructions.
Changing news scroll speed	<p>(Start Here) → Select S! Quick News/S! Friend's Status widget → (Menu) → <i>Operation</i> → (OK) → <i>Contents Menu</i> → (OK) → <i>News Display</i> → (OK) → <i>News Speed</i> → (OK) → Select speed → (OK)</p>
Showing unread news only	<p>(Start Here) → Select S! Quick News/S! Friend's Status widget → (Menu) → <i>Operation</i> → (OK) → <i>Contents Menu</i> → (OK) → <i>News Display</i> → (OK) → <i>Target News</i> → (OK) → <i>Unread Only</i> → (OK)</p>
Showing news images	<p>(Start Here) → Select S! Quick News/S! Friend's Status widget → (Menu) → <i>Operation</i> → (OK) → <i>Contents Menu</i> → (OK) → <i>News Display</i> → (OK) → <i>Display Image</i> → (OK) → On → (OK)</p> <ul style="list-style-type: none"> Available when only S! Quick News area is set to appear on the Panel.



■ S! Quick News & S! Friend's Status Widget (S! Friend's Status)

Assigning members	<p>When Pattern Setting is Not <i>Friend's Status(List)</i> → Select S! Quick News/S! Friend's Status widget → → Use to select member field → → Operation → → Contents Menu → → Assign Member → → Select category → → Select entry/member → </p>
	<p>When Pattern Setting is <i>Friend's Status(List)</i> → Select S! Quick News/S! Friend's Status widget → → Operation → → Contents Menu → → Assign Member → → Select category → → Select entry/member → → (Empty) → </p>
Managing members	<p>Start Here → Select S! Quick News/S! Friend's Status widget → → Use to select member field → → Operation → → Contents Menu → → See below</p>
	<p>Deleting Members Delete → → Yes → </p>
	<p>Changing Member Order Move → → (Up) or (Down) → </p>
	<p>Changing Member Icons Change Icon → → Select Pictogram → </p>

S! Quick News

■ Opening/Updating Items

Updating S! Quick News list automatically	<p> → Entertainment → → S! Quick News → → Settings → → Automatic Update → → Select item → → → Select interval or choose On → </p> <ul style="list-style-type: none"> • If a confirmation appears, press . • When Special is set to On, items are updated every four hours. • When General is set to On, items are updated once a day. • To cancel automatic update, choose Off and press . • Updating items may incur high charges. • Only available in Japan.
Checking update schedule	<p> → Entertainment → → S! Quick News → → Settings → → Check Schedule → </p>
Deleting S! Quick News items	<p>Start Here → Entertainment → → S! Quick News → → S! Quick News List → → Select item → → See below</p> <p>One Entry 一件 → → Yes → </p> <p>All Entries 全件 → → Enter Handset Code → → Yes → </p>
Resetting S! Quick News List	<p> → Entertainment → → S! Quick News → → Settings → → Delete S! Quick News Lists → → Enter Handset Code → → Yes → </p> <ul style="list-style-type: none"> • Not available during automatic updates.



Other

Changing background image	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Quick News → ● → Settings → ● → Change Skin → ● → Select pattern → ●
Accessing source sites	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Quick News → ● → S! Quick News List → ● → Select item → ● → Select title → ● → Select title → ● → Yes → ●
Disabling image download	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Quick News → ● → Settings → ● → Show Image → ● → Off → ●

S! Information Channel

Receiving Information

Hiding Information window for new received info	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Notification → ● → Off → ●
Requesting re-delivery	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Get Latest Contents → ● → Yes → ●

Information Pages

Changing Display Size	<ul style="list-style-type: none"> On a page, ☰ → Settings → ● → Display Size → ● → Select size → ●
Changing scroll unit	<ul style="list-style-type: none"> On a page, ☰ → Settings → ● → Scroll Unit → ● → Select unit → ●
Copying text	<ul style="list-style-type: none"> On a page, ☰ → Copy Text → ● → Select first character → ● → Highlight text range → ●
Saving files to Data Folder	<ul style="list-style-type: none"> On a page, ☰ → Save Items → ● → Select file → ● → Save → ● → Enter name → ● → Save here → ● • Some files are saved automatically.
Opening page properties	<ul style="list-style-type: none"> On a page, ☰ → Details → ●



Weather Indicators

Checking weather forecast	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Weather Indicator → ● → Weather → ●
Changing weather forecast page font size	<ul style="list-style-type: none"> On a page, ⊞ → Settings → ● → Font Size → ● → Select size → ●
Hiding Weather Indicator in Standby	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Weather Indicator → ● → Settings → ● → Standby Setting → ● → Off → ●
Canceling Weather Indicator automatic updates	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Weather Indicator → ● → Settings → ● → Icon Update → ● → Off → ●
Hiding Information window for weather updates	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Weather Indicator → ● → Settings → ● → Weather Notif. → ● → Off → ●

e-Books

Copying text	<ul style="list-style-type: none"> In open page, ▾ → 文字列を北' - → ● → Select first character → ● → Highlight text range → ●
Opening non-933SH e-Books (Library)	<ul style="list-style-type: none"> ● → Entertainment → ● → e-Book Viewer → ● → Select file → ● • Some files may not open.
Using Library	<ul style="list-style-type: none"> [Start Here] ● → Entertainment → ● → e-Book Viewer → ⊞ → See below
	Adding Folders <ul style="list-style-type: none"> ⊞ → New Folder → ● → Enter name → ●
	Switching Folders <ul style="list-style-type: none"> ⊞ → Switch Folders → ● → Select folder → ●
	Renaming Folders/Files <ul style="list-style-type: none"> Select folder/file → ⊞ → Rename → ● → Enter name → ●
	Moving Files <ul style="list-style-type: none"> Select file → ⊞ → Move → ● → Select folder → ● → Move here → ●
	Deleting Folders/Files <ul style="list-style-type: none"> Select folder/file → ⊞ → Delete → ● → Yes → ●
Opening File Properties <ul style="list-style-type: none"> Select file → ⊞ → Details → ● 	



S! Friend's Status

■ Members/Groups

Adding members	<p>* (Long) → Select Group → Add Member → Select method → Select entry or enter phone number → Yes</p>
Deleting members	<p>* (Long) → Select Group → Select member → Registration Release → Yes → Yes</p> <p>• Cancellation notice is sent; deleted members cannot be re-registered for 24 hours.</p>
Moving members	<p>* (Long) → Select Group → Select member → Change Group → Select target Group</p>
Renaming Groups	<p>* (Long) → Select Group → Edit Group Name → Enter name</p>
Rejecting requests	<p>Start Here * (Long) → Settings → Request Reply → See below</p> <p>Rejecting Requests from Unsaved Numbers Confirm if Registered</p> <p>• Rejection notice is sent to rejected numbers automatically.</p>
	<p>Rejecting All Requests Always Ignore</p> <p>• Rejection notice is sent to all requesters automatically.</p>

■ Status/Availability

Saving custom Availability combinations	<p>* (Long) → Settings → Answer Status → User Setting → Select type → Select Availability</p>
Changing Status Icon Pictogram or Status Label description	<p>* (Long) → Settings → Status Setting → Select template → Select Status → Status Icon → Select Pictogram → Status Label → Enter text</p>

■ Status Templates

Resetting templates	<p>Start Here * (Long) → 私の状況 → Select Status → See below</p> <p>One Template</p> <p>Select template → Reset → Yes</p>
	<p>All Templates</p> <p>Reset All → Yes</p>

■ Member Status & Notices

Updating manually	<p>* (Long) → Settings → Status Update</p>
Opening notices	<p>* (Long) → Status Notif. List → Select notice</p>

■ My Details

Sending My Details image	<p>* (Long) → Select Group → Select member → Send Image → Yes</p>
--------------------------	---



S! Circle Talk

■ Member List

Editing individual members	<p>[Start Here] → Communication → S! Circle Talk → Select member → See below</p> <p>Replacing Members Edit → Select method → Select entry</p> <p>Deleting Members Delete → Yes</p>
	<p>[Start Here] → Communication → S! Circle Talk → Select Group → See below</p> <p>Editing Group Name/Members Edit → Select target → Edit/enter</p> <p>Deleting Group Members Edit → Select member → Delete → Yes</p> <p>Deleting Groups Delete → Yes</p>
	<p>Disabling Loudspeaker Communication → S! Circle Talk → Loudspeaker → Off</p> <p>Exiting S! Circle Talk for incoming calls Communication → S! Circle Talk → Incoming Calls → Voice Calls or Video Calls → Accept Calls</p>

■ Settings

Disabling Loudspeaker	<p>Communication → S! Circle Talk → Loudspeaker → Off</p>
Exiting S! Circle Talk for incoming calls	<p>Communication → S! Circle Talk → Incoming Calls → Voice Calls or Video Calls → Accept Calls</p>

Blog Tool

Editing entries	<p>Communication → Blog Tool → Select entry → Edit → Select item → Edit → Blog Title → Blog Title</p> <p>• For Blog Title, omit step of pressing Blog Title after editing.</p>
Deleting entries	<p>Communication → Blog Tool → Select entry → Delete → Yes</p>



S! Friend's Status

? Cannot use S! Friend's Status

- Set IP Service Setting to *On*.

? Handset rejected a registration request automatically

- Rejection notice is sent automatically when 30 members are already registered or handset fails to respond within two hours.

? Registration request arrived from a deleted member

- Registration request arrives when a member fails to receive cancellation notice within 24 hours.

? Registration request was sent to a member automatically

- Registration request is sent automatically when handset fails to receive rejection/cancellation notice within 24 hours.

? Cannot create Status Templates

- Three templates may already be added; reset one and retry.

S! Circle Talk

? Cannot use S! Circle Talk

- Set IP Service Setting to *On*.

? S! Circle Talk starts automatically

- Check My Status; handset accepts S! Circle Talk requests automatically if S! Circle Talk Availability is set to *Auto Join*.

? Cannot accept S! Circle Talk requests

- Check My Status; handset rejects S! Circle Talk requests automatically if S! Circle Talk Availability is set to *Join NG*.

Near Chat

? Cannot receive Near Chat requests

- S! Appli Request may be set to *Off*.

S! Quick News

? Cannot receive content updates

- Update may fail out-of-range or in poor signal conditions.
- Automatic Update does not affect S! Quick News List News Flash update items overnight.
- USIM Card replacement cancels Automatic Update.

