

<b>Infrared</b> .....	<b>12-2</b>
Transferring Files via Infrared .....	12-3
<b>Mass Storage</b> .....	<b>12-5</b>
Connecting PC .....	12-5
<b>Backup</b> .....	<b>12-6</b>
Basics .....	12-6
Backup & Restore.....	12-7

<b>S! Addressbook Back-up (SAB)</b> .....	<b>12-8</b>
About SAB.....	12-8
Backup & Restore .....	12-10
<b>Additional Functions</b> .....	<b>12-11</b>
<b>Troubleshooting</b> .....	<b>12-12</b>

# 12

## Connectivity & File Backup



## Infrared

Wirelessly transfer files between 832SH s and compatible devices.

### Transferable Files

Phone Book	Received Msg.
Calendar	Sent Messages
Tasks	Drafts
Notepad	Templates
Bookmarks	Data Folder


- Copy/forward protected files are not transferable.
- Some files may not be transferable; some settings may be lost, or files may not be saved properly. For details, see "Troubleshooting" at the end of this chapter.

### Getting Started

#### Infrared Precautions

Align Infrared Ports of both devices.

- Handset cannot receive connection requests during Software Update.

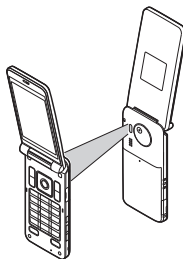

- Do not place objects between devices.
- Keep Infrared Ports aligned during transfer.
- Do not look into Infrared Port during infrared transmissions. Eyesight may be affected.

### Transfer Options

<b>One File Transfer</b>	Transfer single files
<b>All File Transfer</b>	Transfer all files by function

- Some transfer options may be unavailable depending on file type.
- Transfer Memory Card files one by one.

#### Authorization Code

- Four-digit code required for Infrared transfers. All File Transfers possible when codes match. (Authorization Code is changeable for each transfer.)




# Transferring Files via Infrared


## Receiving Files

### 1 (Long)



- Infrared is activated. (Alternatively, activate it via Main Menu.)
- Handset receives files if sent within three minutes.
- Handset must be in Standby to accept connection requests.
- To cancel Infrared, Long Press .

### 2 Connection request arrives

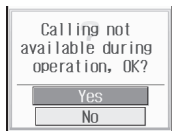

Request Window


### 3 Perform subsequent operations

- To cancel transfer, press .

## Subsequent Operations

### ■ One File Transfer

Yes    Yes  

- If storage media confirmation appears, select media and press .

### ■ All File Transfer (Adding Files)

Yes    Enter Handset Code 

  Enter Authorization Code 

  *As New Items*  

### ■ All File Transfer (Overwriting Existing Files)

Yes    Enter Handset Code 


  Enter Authorization Code 

  *DeleteAll&Save*    Yes

- For Phone Book, My Details except handset phone number is overwritten as well.

## Advanced

-   Activating Infrared via Main Menu (P.12-11)




## Sending Files


## One File Transfer

Example: Phone Book entry

- 1  ➔ **Select entry** ➔  ➔ **Send Entry** ➔ 





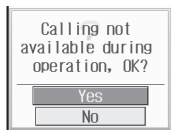




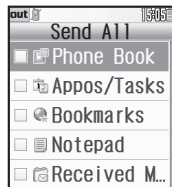
- 2 **Via Infrared** ➔ 






- 3 **Yes** ➔  ➔ **Transfer starts**
- When complete, entry search window returns.


## All File Transfer

- 1  ➔ **Settings** ➔  ➔  ➔ **Connectivity** ➔ **Infrared** ➔ 
- 2 **Send All** ➔ 
- 3 **Yes** ➔  ➔ **Enter Handset Code** ➔ 




- 4 **Select item** ➔  (/✓) ➔ **Complete selection** ➔ 
- 5 **Enter Authorization Code** ➔  ➔ **Transfer starts** ➔ 

## Sending Phone Book

- In 5, follow these steps to select whether to send Phone Book Pictures:  
**Yes or No** ➔ 

## Advanced

-  ● Sending My Details ● Sending non-Phone Book files (P.12-11)

## Connecting PC


### Accessing Memory Card from PC

Connect handset to a PC via USB Cable to access Memory Card from the PC without removing card from handset.

- USB Cable may be purchased separately.
- If handset is connected to a PC via USB Cable, disconnect it first.

1  ➔ **Settings** ➔  ➔  ➔ **Connectivity** ➔ **USB Mode** ➔

2 **Mass Storage** ➔

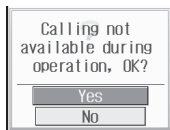

3 **Yes** ➔

4 **Connect handset to a PC via USB Cable**

- Use PC to access Memory Card.

5  ➔ **Yes** ➔  ➔ **Connection ends**

- Safely remove handset (recognized as removable hardware device) on the PC, then disconnect USB Cable.

### Utility Software (Japanese)

For more PC-related operations, download Utility Software (including USB Cable driver) from the following URL.

- **Utility Software**  
<http://k-tai.sharp.co.jp/download/tools/utility/>

### Mobile Data Communication Fees

- Using the Internet by connecting handset to PC/PDA via USB Cable may incur high charges as large-volume packet transmissions tend to occur in a short period of time.



## Basics

Back up information to Memory Card, and restore to handset as needed.

### Supported Items

Select items to back up, or transfer all at once.

Items with \* are selectable at once via **Check Selection** in Options menu.

Phone Book*	Drafts*
Calendar*	Templates
Tasks*	Contents Keys
Bookmarks*	Data Folder
Notepad*	Mail Groups
Received Msg.*	User Dictionary
Sent Messages*	

### Precautions

- Not available if battery is low.
- Some items may not be transferable; some settings may be lost, or files may not transfer properly. For details, see "Troubleshooting" at the end of this chapter.

### Transferring All Items

- Use blank Memory Card for **Backup All Items**. Do not use the card to save other files after **Backup All Items**; backed up content may not be restored properly.

### Contents Keys

- Moving Keys to Memory Card creates a special file. Performing Backup again on the same Memory Card overwrites that file. Perform Restore beforehand.




# Backup & Restore

## Handset to Memory Card

Follow these steps to back up selected items at once:

- 1 → **Settings** → → → **Connectivity** → **Backup/Restore** →

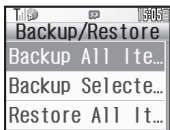

Backup/Restore Menu

- 2 **Backup Selected Items** → → **Enter Handset Code** →
- 3 **Yes** →
- 4 **Select item** → (/✓) → **Complete selection**
  - For *Phone Book*, confirmation appears. Choose **Yes** or **No** and press .

- 5 → **Yes** →
  - To cancel, press .

- 6 **Backup complete** → →

### Selecting Multiple Items at Once

In 4, → **Select option** → →

From 5

### Selecting/Canceling All Items

In 4, → **Check All or Uncheck All**

→

## Memory Card to Handset

Follow these steps to restore selected items:

(Restoring backed up content to handset overwrites current--with the exception of Contents Keys--handset content.)

- 1 **In Backup/Restore menu, Restore Selected Items** → → **Enter Handset Code** →
- 2 **Yes** →
- 3 **Select item** → (/✓) → **Complete selection**

- 4
  - If no file list appears, skip ahead to 7.

- 5 **Select file** →
  - Repeat 5 to complete selection.

- 6

- 7 **Yes** →
  - To cancel, press .

- 8 **Restore complete** → →

### Selecting Multiple Items at Once

In 3, → **Select option** → →

From 4

### Selecting/Canceling All Items

In 3, → **Check All or Uncheck All**

→

### Changing Restoration Method

After 3, select item → → **Chg. to Add Mode or Chg. to Overwrite Mode** → → From 4


## Advanced

- Backing up all items ● Encoding data for backup ● Restoring all items ● Deleting backup files (P.12-11)



## About SAB

Back up Phone Book content in SAB; add Phone Book changes to SAB anytime. Edit SAB online via PC; add SAB changes to Phone Book anytime. Restore lost or altered Phone Book content from SAB.

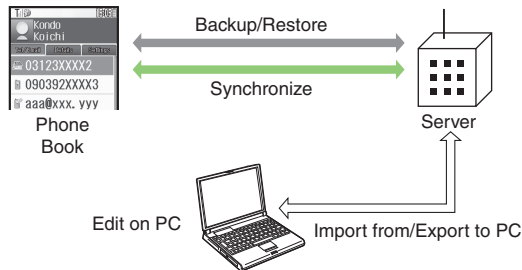

- SAB requires a separate contract and basic monthly fee.
- Use SAB to add Phone Book content to a new compatible SoftBank handset; some conditions apply (P.12-9).
- Use a PC to edit SAB online.
- For more about SAB, see SoftBank Mobile Website (P.14-21).
- Sync commands (Backup, Restore and Synchronize) all incur transmission fees.

### Auto Synchronization

- When subscribed to SAB, Network Information retrieval activates auto synchronization (Set Auto Sync: **On**, Set Frequency: **After Editing Ph.Book(10 min.)**, Set Sync Mode: **Synchronize**); Phone Book changes are added to SAB automatically.
- Cancel auto synchronization as needed. However, it reactivates after Network Information retrieval.

## SAB Sync Commands & Features

Backup/ Restore	Backup	Export Phone Book content to SAB <sup>1</sup>
	Restore	Import SAB content to Phone Book <sup>2</sup>
Synchronize	Synchronize	Synchronize Phone Book and SAB <sup>3</sup>
	Oneway-Client	Add Phone Book changes to SAB <sup>4</sup>
	Oneway-Sever	Add SAB changes to Phone Book <sup>5</sup>
Edit on PC	Import from PC	Upload PC address book info to SAB
	Export to PC	Export SAB content to PC address book
	Sync Lock	Prevent synchronization from handset
Send Notice <sup>6</sup>	Birthday Notification	SAB sends reminders via SMS to handset
	Email Address Notification <sup>7</sup>	Send new handset mail address to specified addresses
	"Disaster Message Board" Message Notification <sup>8</sup>	Send emergency message board update to specified addresses
Spam Filter	Tomodachi Email Filter <sup>9</sup>	Always accept messages from mail addresses saved in SAB

<sup>1</sup> Any existing SAB content is deleted.

<sup>2</sup> Any existing Phone Book content is deleted.

<sup>3</sup> If the same entry item is edited in Phone Book and SAB, SAB content is referenced.

<sup>4</sup> Unrelated SAB changes remain.

<sup>5</sup> Unrelated Phone Book changes remain.

<sup>6</sup> Access this function via handset (My SoftBank; Japanese) or a PC.

<sup>7</sup> Backup resets notification setting; handset address is sent to all addresses.

<sup>8</sup> Backup resets notification setting; updates are not sent to any address.

<sup>9</sup> Export Phone Book content to SAB beforehand.





## Service Usage Outline

### Complete Contract

Visit a SoftBank Shop, dial 157 from a SoftBank handset for SoftBank Mobile Customer Center, General Information or access My SoftBank (Japanese).



### Receive User ID & Password

After subscription, user ID and password arrive via SMS.

- User ID and password are required to use SAB via a PC.



### Use SAB

Export Phone Book content to SAB.

## Precautions

### ■ Unsynchronizable Items

SAB restoration cancels these Phone Book settings:

- Picture, Tone/Video, Vibration

### ■ Unintentional Phone Book or SAB Content Deletion

- When no Phone Book content exists, selecting **Synchronize**, **Oneway-Client** or **Backup** deletes all SAB content.
- When no SAB content exists, selecting **Synchronize**, **Oneway-Sever** or **Restore** deletes all Phone Book content.

### ■ Phone Book ⇄ SAB Content Capacity Disparities

When the number of savable items varies between Phone Book and SAB entries, Synchronization reflects lower limit.

### ■ Contract Termination

SAB content is deleted upon contract termination.

### ■ SAB Transfers to New Handsets

- **SAB-Compatible 3G Handsets**  
SAB remains as last saved and is fully accessible.
- **Other 3G Handsets**  
SAB remains as last saved and is accessible via PC.
- **V3/V4/V5/V6/V8 Series**  
Service contract is terminated and SAB content is deleted.

### ■ When Double Number is Active

Regardless of usage mode setting, all Phone Book content is backed up.

## Advanced

- 👉 ● Canceling auto synchronization (P.12-11)




## Backup & Restore

### Backup (Phone Book → SAB)

Any existing SAB content is deleted.

- 1  → **Phone** →  → **S! Addressbook Backup** →



S! Addressbook Menu

- 2 **Start Sync** →  → **Backup** →

- 3 **Yes** →  → **Enter Handset Code** →

- Backup starts; when complete, details appear.

- 4  → **Backup complete**

#### Canceling Backup

- **Yes** →

### Restore (SAB → Phone Book)

Any existing Phone Book content is deleted.

- 1 In S! Addressbook menu, **Start Sync** →  → **Restore** →

- 2 **Yes** →  → **Enter Handset Code** →

- Restore starts; when complete, details appear.

- 3  → **Restore complete**

#### Canceling Restore

- **Yes** →

### Synchronizing Phone Book

Synchronize Options:

<b>Synchronize</b>	Synchronize Phone Book and SAB
<b>Oneway-Client</b>	Add Phone Book changes to SAB
<b>Oneway-Sever</b>	Add SAB changes to Phone Book

If this is your first use of SAB (new handset), Synchronization is performed via Synchronize regardless of selection.

- 1 In S! Addressbook menu, **Start Sync** →  → **Select option** →

- 2 **Yes** →  → **Enter Handset Code** →

- Synchronization starts; when complete, details appear.

- 3  → **Synchronization complete**

#### Canceling Synchronization

- **Yes** →

### Advanced

- Changing auto synchronization settings  Confirming password  Opening log (P.12-11)

Infrared	
Activating Infrared via Main Menu	<ul style="list-style-type: none"> <li>☐ → Settings → ☐ → ☐ Connectivity → Infrared → ☐ → Switch On/Off → ☐ → On(3 min.) → ☐</li> </ul>
Sending My Details	<ul style="list-style-type: none"> <li>☐ → 0:22 → ☐ → Send My Card → ☐ → Via Infrared → ☐ → Yes → ☐ → Transfer starts</li> </ul>
Sending non-Phone Book files	<ul style="list-style-type: none"> <li>In file list, select file → ☐ → Send (or Send/Blog) → ☐ → Via Infrared → ☐ → Yes → ☐ → Transfer starts</li> </ul>

## Backup

### Backup & Restore

Backing up all items	<ul style="list-style-type: none"> <li>☐ → Settings → ☐ → ☐ Connectivity → Backup/Restore → ☐ → Backup All Items → ☐ → Enter Handset Code → ☐ → Yes → ☐ → Yes → ☐ → Backup complete → ☐ → ☐</li> </ul>
Encoding data for backup	<ul style="list-style-type: none"> <li>☐ → Settings → ☐ → ☐ Connectivity → Backup/Restore → ☐ → Settings/Manage → ☐ → Encode Settings → ☐ → Select item → ☐ → On → ☐</li> </ul> <ul style="list-style-type: none"> <li>• Available for Phone Book, Messaging folders, Calendar and Tasks.</li> </ul>
Restoring all items	<ul style="list-style-type: none"> <li>☐ → Settings → ☐ → ☐ Connectivity → Backup/Restore → ☐ → Restore All Items → ☐ → Enter Handset Code → ☐ → Yes → ☐ → Yes → ☐ → Restore complete → ☐ → ☐</li> </ul>

### Backup Files

Deleting backup files	<ul style="list-style-type: none"> <li>☐ → Settings → ☐ → ☐ Connectivity → Backup/Restore → ☐ → Settings/Manage → ☐ → File Management → ☐ → Select item → ☐ → Select file → ☐ (☐/☑) → Complete selection → ☐ → Yes → ☐</li> </ul>
-----------------------	---

### S! Addressbook Back-up

Canceling auto synchronization	<ul style="list-style-type: none"> <li>☐ → Phone → ☐ → S! Addressbook Backup → ☐ → Set Auto Sync → ☐ → Enter Handset Code → ☐ → Set On/Off → ☐ → Off → ☐</li> </ul>
Changing auto synchronization settings	<div style="border: 1px solid gray; padding: 2px; margin-bottom: 5px;"> <ul style="list-style-type: none"> <li>Start Here ☐ → Phone → ☐ → S! Addressbook Backup → ☐ → Set Auto Sync → ☐ → Enter Handset Code → ☐ → See below</li> <li>• Set Set On/Off to On beforehand.</li> </ul> </div> <p><b>Changing Auto Sync Frequency</b></p> <ul style="list-style-type: none"> <li>Set Frequency → ☐ → Select frequency → ☐ → Enter/select date/time/day of the week → ☐</li> <li>• For After Editing Ph.Book(10 min.), omit steps for date, time, etc.</li> </ul> <p><b>Changing Auto Sync Command</b></p> <ul style="list-style-type: none"> <li>Set Sync Mode → ☐ → Select command → ☐</li> </ul>
Confirming password	<ul style="list-style-type: none"> <li>☐ → メニューリスト → ☐ → My SoftBank → ☐ → English → ☐ → Password confirmation for S! Address Book → ☐</li> <li>• Follow onscreen instructions.</li> </ul>
Opening log	<ul style="list-style-type: none"> <li>☐ → Phone → ☐ → S! Addressbook Backup → ☐ → Sync History → ☐ → Select record → ☐</li> </ul>



## File Transfer

### ? Some files are not received

- If storage limit is reached during transfers, remaining files will not be received.

### ? Cannot receive/accept connection requests even when Infrared is *On*

- Handset may not be in Standby.
- Keypad Lock/Function Lock may be active.
- Software Update may be in progress.

### ? Phone Book settings are lost

- One file transfer resets these settings:
  - Category, Tone/Video, Vibration, Secret
- Picture setting may be lost depending on image; send the image separately and reassign it.

### ? Calendar/Tasks settings are lost

- One file transfer resets these settings:
  - Alarm Tone/Video, Secret, S! Friend's Status

### ? Bookmarks are not saved properly

- Large Bookmarks may not be received correctly.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

### ? Messages are not saved properly on handset

- Messages may not be received depending on the size.
- Messages received via One File Transfer are saved to Other Documents folder and cannot be used as messages.
- Sky Mail may be received as S! Mail when transferred from other SoftBank handsets via All File Transfer.
- In All File Transfers, overwriting messaging folders deletes sort keys.

### ? Messages are not saved properly on recipient devices

- Mail Notices are saved as messages, invalidating complete message retrieval.
- When sending messages to other handset models via All File Transfer, Spam Folder messages may be saved to the incoming message folder.
- When sending messages in Drafts to other handset models via All File Transfer, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

### ? Cannot find files in DCIM folder

- Received files in DCIM folder are saved to Pictures folder.

## Infrared

### ? Infrared transfer fails

- Infrared Port may be obstructed by dust, etc.; clean with soft cloth.
- Transfers may fail in direct sunlight, under fluorescent lighting or near infrared equipment.



## Backup & Restore

### ? Backup fails

- Check handset/Memory Card memory; backup may fail if the memory is low.

### ? Some files are not restored

- If storage limit is reached during Restore, remaining files will not be restored.

### ? Cannot use backup files on other SoftBank handsets or PCs

- Some backup files may not be usable on other SoftBank handsets or PCs.

### ? Cannot open backup files

- Some backup files may open only after being restored to handset.

### ? Phone Book settings are lost

- Picture setting may be lost depending on image; send the image separately and reassign it.

### ? Messages are not saved properly

- Transfer may delete sort keys.
- Mail Notices are restored as messages, invalidating complete message retrieval.

### ? Bookmarks are not saved properly

- Yahoo! Keitai, Streaming and PC Site Browser Bookmarks are all backed up as a single file.
- Streaming Bookmarks are saved as Yahoo! Keitai Bookmarks.

## ■ Exporting Backed Up Data to Other SoftBank Handsets

### ? Messages are not saved properly

- If spam filter is available on recipient handset, Spam Folder messages are saved in spam folder regardless of the setting. (If unavailable, they are saved as normal received messages.)
- When restoring draft messages, only the first entered recipient may remain or SMS addressed to multiple recipients may not be saved.

## ■ Importing Data Backed Up on Other SoftBank Handsets

### ? Messages are not saved properly

- Messages may not be restored depending on the size.
- Sky Mail may be restored as S! Mail.

