

Text Entry

Text Entry	3-2
Entering Text	3-2
Entering Characters	3-2
Pictographs & Symbols	3-3
Additional Features.....	3-5
Conversion Methods (Japanese)	3-5
Predictive Conversion	3-5
Converting Hiragana to Katakana/Alphanumerics.....	3-7
Narrowing Down Predictive Candidates by Number of Characters	3-8
Editing Text	3-8
Deleting & Replacing	3-8
Copy/Cut & Paste	3-9
User's Dictionary	3-9
Saving User's Dictionary Entries	3-9
Download Dictionary	3-10
Activating Downloaded Dictionaries.....	3-10

Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.



① Input Modes	Operation
漢: Kanji (Hiragana) か: Katakana abc: Alphanumerics 123: Numbers	
② Double-byte/Single-byte	Operation
1/1: Double-byte 1/2: Single-byte	Press and hold
③ Character/Byte Count	
Remaining number of enterable characters appears, regardless of input mode.	
Remaining number of enterable byte appears.	
Note	
<ul style="list-style-type: none"> Follow the steps below to toggle input modes and single-/double-byte at the same time: [Menu] → Input Options → Change Input Mode 	

Help

Help describes text entry operations.


> In text entry window, [Menu] → **Help** → Select an item

Entering Text

Entering Characters

Example: Enter 鈴木

- In alphanumerics mode, twice to switch to kanji (hiragana) mode
 す: three times
 す: * → three times → *
 き: twice

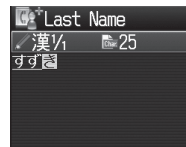













*When the next character is on the same key, press first to move cursor.

- to enter Forecast List
 - To change word before converting, press .
 - There are four types of word suggestion list: **Forecast**, **Normal**, **E-1-Kana** and **Prediction** (P.3-5)
- to select 鈴木




Other Input Functions

Enter katakana/ alphanumerics	 several times to select an input mode → Enter characters
Enter small kana (っ, っ, etc.)	Enter a character →  ● Alternatively, press a key repeatedly to enter an assigned small kana.
Enter upper case characters	Enter a character →  ● Alternatively, press a key repeatedly to enter an assigned upper case character.
Add ` or °	Enter a character →  for ` or  twice for ° ● In single-byte katakana mode, ` and ° are entered as a single-byte character.
Insert line break	 to insert line breaks in text
Insert space at end of text	
Insert space within text	 repeatedly until single-byte space appears*, or use symbol list for double-byte or single-byte space ( Right)
Toggle characters in reverse order	 Example: From c, press  to toggle as follows: c → b → a → 2...
Undo	 [Menu] → <i>Undo</i>

* Space cannot be entered within text in Numbers mode by following the steps above.


Pictographs & Symbols

- Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail addresses.
- Symbol List:  P.17-13

1 Open Pictograph List

In text entry window, 

Open Symbol List


In text entry window, press and hold 

or


 in pictograph list

List Log may appear first.

Pictograph List Number

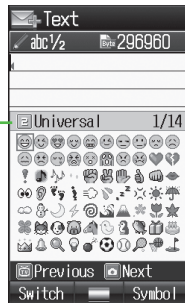

Symbol List Number

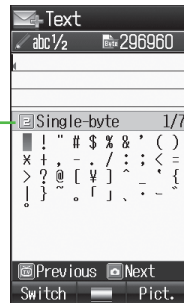




- Functions Available in Pictograph/Symbol List ( P.3-4)


2 to select a pictograph or symbol

List Log/Symbol Log







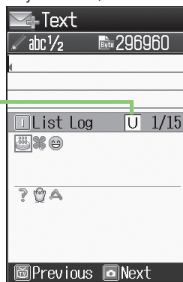


- In Symbol Log, single-byte symbols appear in upper half of window; double-byte symbols in lower half.
- In List Log, pictographs appear in upper half of window; My Pictograms in lower half (only in S! Mail text entry window).

Pictograph Type

-  Universal (Cross-carrier) Pictographs
-  All Pictographs
-  My Pictograms



Functions Available in Pictograph/Symbol List

Toggle pictograph lists	In pictograph list,  [Switch] <ul style="list-style-type: none"> ● Toggle lists: (List Log →) Universal¹ → Full List → My Pictogram² ● Alternatively, press key corresponding to Pictograph List number (1-4) for direct access.
Toggle Symbol lists	In symbol list,  [Switch] <ul style="list-style-type: none"> ● Toggle lists: (Symbol Log →) Single-byte → double-byte ● Alternatively, press key corresponding to Symbol List number (1-3) for direct access.
Jump to next page	In pictograph/symbol list, 
Jump to previous page	In pictograph/symbol list, 
Toggle pictograph/symbol list	In pictograph list,  /*/  [Symbol] In symbol list,  /*/  [Pict.]
Close list	

¹ In messages only

² In S! Mail Text field only

Note

- In Numbers mode, open pictograph/symbol list by [Menu] → **Pictograph** or **Symbol**.

Additional Features

Emoticons

> In text entry window, [Menu] → *Emotions* → Select an emoticon

Use Info from Phone Book/Account Details/Notepad/ String Templates

> In text entry window, [Menu] → *Insert* → Select an item (See below)

Item	Operation/Description
Phone Book Data*	> Select an entry → Select an item
Account Details*	> Select an item
Notepad	> Highlight a note → [Set] ● Alternatively, in kanji (hiragana), katakana and alphanumerics mode, press and hold [*] → Highlight a note → [Set].
String Templates	Insert web and mail extensions > Select an extension

* Available Items: Last Name/First Name, Reading, Phone Number, Email Address, Address or Note.

Enter Kuten Code

> In text entry window, [Menu] → *Input Options* → *Kuten Code* → Enter a character code (4 digits) (P.17-14)

Tip

Settings ● Change Input Font Size (P.16-12)

Conversion Methods (Japanese)

Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

Before Entering Text*	Forecast (Pre-text Predict)	Suggests salutations/opening words Example: こんにちは, お疲れさま, etc.
While Entering Text	Forecast	Lists likely conversions and matching conversions. Likely Conversions: わ → 私, わたし, etc. Matching Conversions: わ → 和, 輪, etc.
	Normal	Suggests only matching conversions Example: わ → 和, 輪, etc.
	E-1-Kana	Lists alphanumerics/katakana assigned to key (P.3-7)
After a Word is Fixed	Prediction	Suggests words likely to follow Example: 私 is fixed → です, の, は, etc.

* Available when you open Message Text window or cursor is at top of Text window. Note that handset Language must be set to **日本語**.

- Predictions change with each letter entered.
- Press [Forecast]/[Normal] to toggle Forecast List and Normal List.

Predictive Candidates

- Time Season Predict function suggests words appropriate for current season and time.
- Set word suggestions for formal or informal words. (P.16-13)

Note









- 841P learns entered characters and suggests them for future conversions.



Tip



Settings


- Disable Learning (Kana Conversions)
- Reset Learned Words
- Change Candidate Font Size
- Hide Predictive Candidates
- Hide Context Forecast List
- Fix Entered Characters Automatically (☞ P.16-12)
- Deactivate Pre-text Predict
- Deactivate Time Season Predict
- Activate Text Expression (☞ P.16-13)

Example: Enter 私の鼻

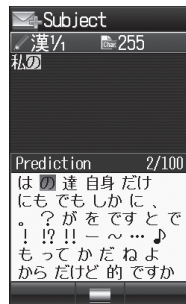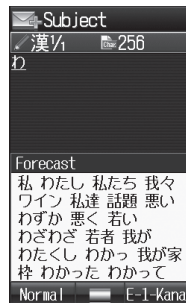
- 1 In kanji (hiragana) mode,  わ is entered and Forecast List appears.
- 2  to move to Forecast List →
 to select 私
私 is entered and Prediction List appears.
- 3  to move to Prediction List
→  to select の
の is entered and Prediction List appears.
- 4  → 
はな is entered and Forecast List appears.
- 5  [Normal]
Normal List appears.



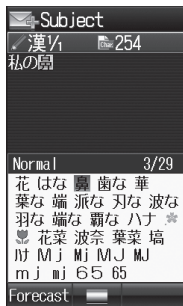

- 6  to move to Normal List
 →  to select 鼻



If the Word is Not Listed

Press  to return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

- ① Move cursor to る, then convert はる to 春 → 
- ② Convert か to 香 → 





Using Previously Entered Words

Enter the first one or two hiragana to access previously entered words in the list.

Converting Hiragana to Katakana/Alphanumerics







Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

Example 1: Enter OK

Step	1	2	3	4
Key	 (3 times)	 (twice)	 [E-1-Kana]	
Display	ふい	ふいこ	E-1-Kana List	OK

- Highlight OK and press .

Example 2: Enter 10:30 or 10/30


Step	1	2	3
Key	   	 [E-1-Kana]	
Display	あわさわ	E-1-Kana List	10/30 10:30 10月30日 etc.


- Highlight a suggestion and press .

Narrowing Down Predictive Candidates by Number of Characters

In kanji (hiragana) mode, narrow down Predictive Candidates by specifying minimum number of characters.



Example: Suggest words with a minimum of seven characters, starting with かさ

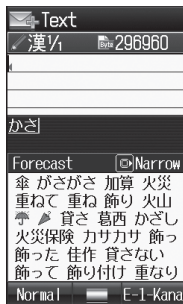
1 Enter かさ → 



2  (five times)

Word suggestions of seven or more characters appear.

- Press  to change number of characters.
- To show word suggestions of only seven characters:  [Switch]

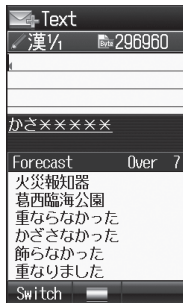

Editing Text

Deleting & Replacing

1 Delete Characters within Lines

Place cursor before a character → 

A character after cursor is deleted.

- Press and hold  to delete all characters after cursor.

Delete Characters from the End of Text

Place cursor at the end of text → 

A character before cursor is deleted.

- Press and hold  to delete all characters before cursor.

2 Enter another character

Copy/Cut & Paste

- Up to seven copied/cut entries are stored; six text entries and one Graphic Mail entry.

1 In text entry window, [Menu] → *Copy* or *Cut*

2 Select Text to Copy/Cut

Place cursor before (or after) text to select →

Place cursor after (or before) text →

Select All

[All] →

3 Paste Text

Place cursor at target location → Press and hold

Paste Previously Copied/Cut Text

Place cursor at target location → [Menu] → *Paste*
→ Select data

Note

- Turning off power deletes stored text data.
- Graphic Mail entry is deleted when S! Mail text entry window is closed.

User's Dictionary

Save frequently used words/phrases (up to 100 entries).
Saved words/phrases appear among word suggestions.

Saving User's Dictionary Entries

1 In text entry window, [Menu] → *Input Options*
→ *User's Dictionary*

2 [Create]

- When saved items exist: [Menu] → *Create*

3 Enter a word → Enter reading

Edit User's Dictionary Entries

> After Step 1, highlight a word → [Menu] → *Edit* → Edit word →
Edit reading

Delete User's Dictionary Entries

> After Step 1, [Menu] → *Delete* → Select an item (See below)

Item	Operation/Description
One	>
Selected Words	> Check entries → [OK] →
All	> [YES] → Enter Phone Password

Note

- Alternatively, **Main Menu** ▶ **Settings** ▶ **Phone Settings**
▶ **Dictionaries** ▶ **User's Dictionary**.

Download Dictionary

Download dictionaries from P-egg, a download site for 841P users (see below). Activate downloaded dictionaries to add character conversions to conversion suggestions (Japanese).

- P-egg (as of January 2010)

Main Menu ► Yahoo! ► Bookmarks ► Panasonic Site (P-egg)

Activating Downloaded Dictionaries

Main Menu ► Settings ► Phone Settings ► Dictionaries
► Download Dictionary

1 Select a dictionary → **ON**

- To cancel: **OFF**

Change Title

> In Step 1, highlight a dictionary → [Menu] → **Rename** → Edit

View Details

> In Step 1, highlight a dictionary → [Menu] → **Property**

Delete Dictionaries

> In Step 1, (highlight a dictionary →) [Menu] → **Delete** → Select an item (See below)

Item	Operation/Description
One	> <input type="radio"/>
Selected Files	> Check dictionaries → [Delete] → [YES]
All	> [YES] → Enter Phone Password