

# Text Entry

<b>Text Entry</b> .....	<b>3-2</b>
<b>Entering Text</b> .....	<b>3-3</b>
Entering Characters .....	3-3
Pictographs & Symbols .....	3-4
Smileys.....	3-5
Templates.....	3-6
Additional Features.....	3-6
<b>Conversion Methods (Japanese)</b> .....	<b>3-7</b>
Predictive Conversion .....	3-7
Converting Hiragana to Katakana/Alphanumerics.....	3-9
Narrowing Down Predictive Candidates by Number of Characters.....	3-9
<b>Editing Text</b> .....	<b>3-10</b>
Deleting & Replacing .....	3-10
Copy/Cut/Paste.....	3-10
<b>User's Dictionary</b> .....	<b>3-11</b>
Saving User's Dictionary Entries .....	3-11
<b>Download Dictionary</b> .....	<b>3-11</b>
Activating Downloaded Dictionaries.....	3-11

## Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

- Three types of character input methods are available: Mode 1 (5-touch), Mode 2 (2-touch), Mode 3 (NIKO-touch)

In this guide, examples are described in Mode 1 (5-touch).

### Mode 2 (2-touch)/Mode 3 (NIKO-touch)


Press two numeric keys to enter a character.

- List of Key Assignments (☞P.19-15 to 17)

### Help

Help describes text entry operations.

➤ In text entry window, [Menu] → *Help* → Select an item

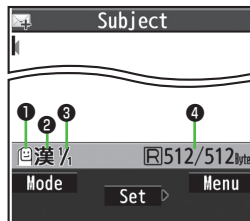

① Character Input Methods	Operations
<b>2</b> : Mode 2 (2-touch) ☞: Mode 3 (NIKO-touch) <ul style="list-style-type: none"> <li>No icon appears for Mode 1 (5-touch).</li> </ul>	Press and hold ☞[Mode]
② Input Modes*	Operations
<b>abc</b> : Alphanumerics <b>123</b> : Numbers 漢: Kanji (hiragana) 加: Katakana	☞[Mode]
③ Double-byte/Single-byte*	Operations
<b>1/1</b> : Double-byte <b>1/2</b> : Single-byte	☞[Menu] → <i>2bytes character</i> <i>(1byte character)</i>
④ Remaining/Maximum Bytes in Message	

\* Operations in Mode 3 (NIKO-touch): ☞P.19-17

# Entering Text

## Entering Characters

Example: Enter 鈴木


1 In alphanumeric mode, twice to switch to kanji (hiragana) mode

す: three times

ず: \* → three times → \*

き: twice


\* When the next character is on the same key, press first to move cursor.

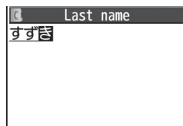

2 to enter Predictive Candidates List

● To change word before converting, press .

● There are four types of word suggestion lists: **Predictive Candidates**, **Conversion Candidates**, **Context Forecast** and **abc/123/Kana Candidates** (P.3-7)

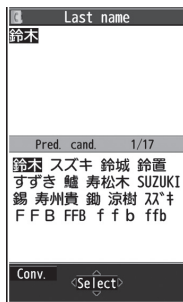

3 to select 鈴木

## Other Input Functions

Enter katakana/alphumerics	[Mode] to cycle input modes → Enter characters
Enter small kana (っ, っ, etc.)	Enter a character →  to convert to small character ● Alternatively, press a key repeatedly to enter an assigned small kana.
Enter upper case characters	Enter a character → ● Alternatively, press a key repeatedly to enter an assigned upper case character.
Add * or °	Enter a character to add ° or ° → * for ° or * twice for ° ● In single-byte katakana mode, ° and ° are entered as a single-byte character.
Insert line break	[Line FD] to insert line breaks in text
Insert space at end of text	
Insert space within text	repeatedly until single-byte space appears*, or  [Menu] → <b>Pictograms/symbols</b> → <b>Space</b> to enter a space (Double-byte (single-byte) space is entered in 2 bytes (1 byte) input mode.)
Toggle characters in reverse order	[Rev] Example: From c, press to toggle as follows: c → b → a → 2...
Move cursor to beginning/end of sentence	[Menu] → <b>Jump</b> → <b>To beginning</b> or <b>To end</b>
Undo	[Undo]

\* Space cannot be entered within text in number mode by following the steps above. Use symbol list.

## Pictographs & Symbols

- Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail addresses.
- Symbol List: ☞P.19-18

### 1 Open Pictograph List

In text entry window, (✖)


### Open Symbol List

In text entry window, press and hold (#),  
or


(✖) in pictograph list

List Log may appear first.

#### Pictograph List Number

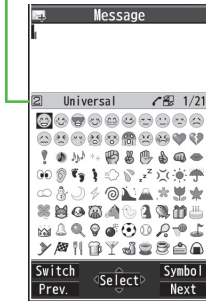

#### Symbol List Number

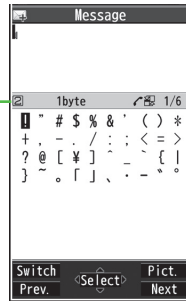

- Functions Available in Pictograph/Symbol List (☞P.3-5)


2 (🌀) to select a pictograph or symbol

### Pictograph/Symbol List Log










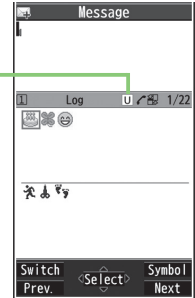
- In Symbol Log, single-byte symbols appear in upper half of window; double-byte symbols in lower half.
- In List Log, pictographs appear in upper half of window; My Pictograms in lower half (only in S! Mail text entry window).

#### Pictograph Indicators

- U** Universal (cross-carrier) pictographs
- F** All pictographs
- My** My Pictograms



## Functions Available in Pictograph/Symbol List


<b>Toggle pictograph lists</b>	In pictograph list,  [Switch] <ul style="list-style-type: none"> <li>● Toggle lists: (Log →) Universal pictographs<sup>1</sup> → Full pictographs → My Pictograms<sup>2</sup></li> <li>● Alternatively, press key corresponding to Pictograph List number (1-3) for direct access<sup>3</sup>.</li> </ul>
<b>Toggle symbol lists</b>	In symbol list,  [Switch] <ul style="list-style-type: none"> <li>● Toggle lists: (Log →) Single-byte symbols → Double-byte symbols</li> <li>● Alternatively, press key corresponding to Symbol List number (1-3) for direct access<sup>3</sup>.</li> </ul>
<b>Jump to next page</b>	In pictograph/symbol list,  [Next]
<b>Jump to previous page</b>	In pictograph/symbol list,  [Prev.]
<b>Toggle pictograph/symbol list</b>	In pictograph,  /  [Symbol] In symbol list,  /  [Pict.]
<b>Toggle full screen/standard screen</b>	
<b>Close list</b>	

<sup>1</sup> In messages only




<sup>2</sup> In S! Mail Text field only

<sup>3</sup> Log (List Number 1) does not appear if any symbols/pictographs are not entered.

### Note

- In number mode, open pictograph list by  [Menu] → *Pictograms/symbols* → *Pictograms*


## Smileys

- 1 In text entry window,  [Menu] → *Pictograms/symbols* → *Smiley*
- 2 Select a smiley
  - To show next/previous page:  [Next]/  [Prev.]


## Templates

Insert templates (greetings, URLs, emoticons) or edit preinstalled templates.

### Inserting Templates

- 1 In text entry window, press and hold 
  - Not available in number mode.
- 2 Select a category → Select a template

#### Note

- Alternatively, in a text entry window,  [Menu] → *Input assistance* → *Templates* to enter a template

### Editing Templates

Main Menu ► Tools ► Templates/Users Dic. ► Templates

- 1 Select a category
- 2 Highlight a template →  [Edit] → Edit template


#### Reset Edited Templates



- > After Step 1, (highlight a template →)  [Menu] → *Reset this* or *Reset all* (→ For *Reset all*, enter Phone Password) → *YES*

#### Manage Template Folders

- > In Step 1, highlight a category →  [Menu] → *Edit folder name* → Edit folder name
- To reset folder name,  [Menu] → *Reset name* → *YES*

## Additional Features

- 1 In text entry window,  [Menu] → *Input assistance*
- 2 Select an item (See below)

Item	Operation/Description
<b>Kuten Code</b>	Enter a character code (☞P.19-19) > Enter a character code (4 digits)
<b>Input date/time</b>	Select a style to enter date/time > Select a display style → Enter date/time
<b>Quote phone book</b>	Quote Phone Book entry detail > Select an entry → Check item(s) to quote →  [Finish]
<b>Quote acctn detls</b>	Quote Account Details > Enter Phone Password → Check item(s) to quote →  [Finish]
<b>Bar code reader</b>	Activate Bar Code Reader to insert scanned result (☞P.13-15)

# Conversion Methods (Japanese)

## Predictive Conversion

The following suggestion lists appear while entering text or after a word is fixed.

Before Entering Text*	Predictive Candidates (Pre-text Predict)	Suggests salutations/opening words Example: こんにちは, お疲れさま, etc.
While Entering Text	Predictive Candidates	Lists likely conversions and matching conversions. Likely Conversions: わ → 私, わたし, etc. Matching Conversions: わ → 和, 輪, etc.
	Conversion Candidates	Suggests only matching conversions Example: わ → 和, 輪, etc.
	abc/123/Kana Candidates	Lists alphanumerics/katakana assigned to key (☞P.3-9)
After a Word is Fixed	Context Forecast	Suggests words likely to follow Example: 私 is fixed → です, の, は, etc.

\* Available when you open Message Text window or cursor is at top of Text window. Note that handset Language must be set to **日本語**.

- Predictions change with each letter entered.
- Press **[☑][Pred.]/[Conv.]** to toggle Predictive Candidates List and Conversion Candidates List.

### Predictive Candidates

- Time Season Predict function suggests words appropriate for current season and time.
- Set word suggestions for formal or informal words (☞P.18-12).

### Note






- 940P learns entered characters and suggests them for future conversions (☞P.18-11).



### Tip



#### Settings


- Disable Learning for Secret Mode/Secret Data Only
- Reset Learned Words ● View Learned Words ● Hide Predictive Candidates and Context Forecast Lists ● Fix Entered Characters Automatically (☞P.18-11)
- Deactivate Pre-text Predict ● Deactivate Time Season Predict
- Activate Text Expression (☞P.18-12)


**Example: Enter 私の鼻**

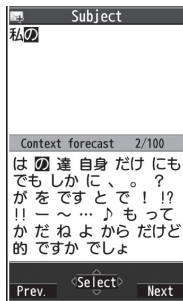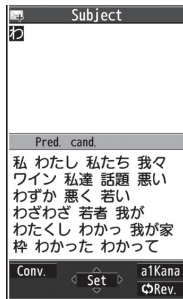- 1 In kanji (hiragana) mode, (0) わ is entered and Predictive Candidates List appears.
- 2  to move to Predictive Candidates List →  to select 私 私 is entered and Context Forecast List appears.
- 3  to move to Context Forecast List →  to select の の is entered and Context Forecast List appears.
- 4 (6) → (5) はな is entered and Predictive Candidates List appears.
- 5  [Conv.] Conversion Candidates List appears.



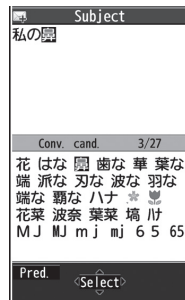

- 6  to move to Conversion Candidates List →  to select 鼻

**If the Word is Not Listed**

Press  to return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

- ① Move cursor to る, then convert はる to 春 → 
- ② Convert か to 香 → 

**Using Previously Entered Words**

Enter the first one or two hiragana to access previously entered words in the list.



## Converting Hiragana to Katakana/ Alphanumerics

Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

Example 1: Enter OK

Step	1	2	3	4
Key	(3 times)	(twice)		
Display	ふ	ふに	abc/123/Kana Candidates	OK

- Highlight **OK** and press .

Example 2: Enter 10/30, 10:30 or 10月30日

Step	1	2	3
Key			
Display	あわさわ	abc/123/Kana Candidates	10/30 10:30 or 10月30日


- Highlight a suggestion and press .

## Narrowing Down Predictive Candidates by Number of Characters

In kanji (hiragana) mode, narrow down Predictive Candidates by specifying minimum number of characters.

Example: Suggest words with a minimum of seven characters, starting with かさ.


1 Enter かさ →

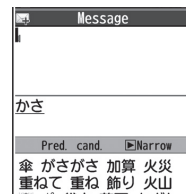

2 (five times)

Word suggestions of seven or more characters appear.


- Press to change number of characters
- To show word suggestions of only seven characters: [Change]

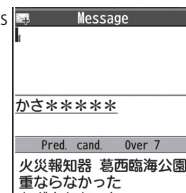

## Editing Text

### Deleting & Replacing


#### 1 Delete Characters within Lines

Place cursor before a character → 

A character after cursor is deleted.

- Press and hold  to delete all characters after cursor.

#### Delete Characters from the End of Text

Place cursor at the end of text → 

A character before cursor is deleted.

- Press and hold  to delete all characters before cursor.

#### 2 Enter another character

### Copy/Cut/Paste

1 In text entry window,  [Menu] → *Copy* or *Cut*


#### 2 Select Text to Copy/Cut

Place cursor before (or after) text to select →

- [Start] → Place cursor after (or before) text →
- [End]

#### Select All

 [All] → ● [End]

3 Place cursor at target location →  [Menu] → *Paste*

## User's Dictionary

Save frequently used words/phrases (up to 100 entries).  
Saved words/phrases appear among word suggestions.

### Saving User's Dictionary Entries

- 1 In text entry window, **[Y]**[Menu] →  
*Text entry setting* → *User's Dictionary*
- 2 <New>
- 3 Enter a word → Enter reading

#### ■ Edit User's Dictionary Entries

> After Step 1, highlight a word → **[E]**[Edit] → Edit word → Edit reading

#### ■ Delete User's Dictionary Entries

> After Step 1, **[Y]**[Menu] → *Delete* → *Delete this* or *Delete all*  
(→ For *Delete all*, enter Phone Password) → *YES*

#### Note

- Alternatively, **Main Menu** ► **Tools** ► **Templates/Users Dic.**  
► **User's Dictionary**

## Download Dictionary

Download dictionaries from P-egg, a download site for 940P users (see below). Activate downloaded dictionaries to add character conversions to conversion suggestions (Japanese).

- P-egg (as of October 2009)  
**Main Menu** ► **Yahoo!** ► **Bookmarks** ►  
**Panasonic Site (P-egg)**

### Activating Downloaded Dictionaries

**Main Menu** ► **Tools** ► **Templates/Users Dic.**  
► **Download Dictionary**

- 1 Select a dictionary  
★ appears for active dictionary.  
● To cancel: follow the same step

#### ■ Change Title

> In Step 1, highlight a dictionary → **[Y]**[Menu] → *Edit title* → Edit

#### ■ View Details

> In Step 1, highlight a dictionary → **[Y]**[Menu] → *Dictionary info*

#### ■ Delete Dictionaries

> In Step 1, (highlight a dictionary) → **[Y]**[Menu] → *Delete this* or *Delete all* (→ For *Delete all*, enter Phone Password) → *YES*

