11

Handset Security

Operations Security

Function Lock

Restrict access to handset functions.

Auto	Lock when Display turns off or handset is closed
Once	One time lock
At Power On	Lock when handset is turned on

1 ● ➡ *Settings* ➡ ● ➡ In Phone Settings menu, *Locks* ➡ ●

Locks
PIN Entry
Off
Change PIN2
Face Recog
Off
Function Lock
Off
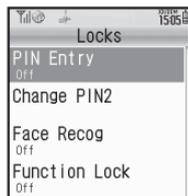
Locks Menu

2 *Function Lock* ➡ ●

3 Select item ➡ ● ➡ Enter Handset Code ➡ ●

Unlocking Temporarily
While handset is locked, enter Handset Code ➡ ●

When Function Lock is Active
● Press corresponding key to turn handset on/off, answer calls, place callers on hold, end calls, etc.

PIN Entry

Activate PIN Entry to require PIN entry each time handset is turned on.

1 In Locks menu, *PIN Entry* ➡ ● ➡ *Switch On/Off* ➡ ●

2 *On* ➡ ● ➡ Enter PIN ➡ ●

Secure Remote Lock

Lock a lost handset remotely via PC or another handset. Secure Remote Lock disables all operations except turning handset on, and activates IC Card Lock (**P.9-13**). For more about Secure Remote Lock, see SOFTBANK MOBILE Corp. Website (**P.14-22**) or contact SoftBank Customer Center, General Information (**P.14-40**).

Accessing My SoftBank

Access My SoftBank as needed.

1 ⊠ ➡ *メニューリスト* ➡ ●

2 *My SoftBank* ➡ ● ➡ *English* ➡ ●

Handset Security

11

Advanced

● Changing PINs ● Setting Secure Remote Lock activation message to appear (**P.11-6**)

Information Security

Application Lock

Restrict access to these functions:

Phone Book	Calendar/Tasks
Yahoo! Keitai	Mail
Notepad	

1. ● ➡ *Settings* ➡ ● ➡ In Phone Settings menu, *Locks* ➡ ●
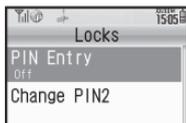
> Locks
> PIN Entry
> Off
> Change PIN2
>
> Locks Menu

2. *Application Lock* ➡ ●

> ApplicationLock
> ■ Phone Book
> □ Calendar/Tasks
> □ Yahoo! Keitai
> □ Mail
> □ Notepad
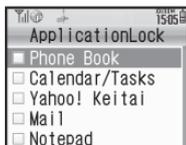
3. Select item ➡ ● (☑ appears)
   - For Phone Book, select *No Refer* or *Refer* and press ●.

4. ⌨ ➡ Enter Handset Code ➡ ●

Temporary Access to Functions
- When accessing functions, enter Handset Code and press ●.

History Lock

Restrict access to Call Log and sent/received mail records.

1. In Locks menu, *History Lock* ➡ ●

> History Lock
> ■ Call Log
> □ Sent/Rcvd Msg.

2. Select item ➡ ● (☑ appears)

3. ⌨ ➡ Enter Handset Code ➡ ●

Temporary Access to Records
- When accessing records, enter Handset Code and press ●.

Show Secret Data

Activate Show Secret Data to access Secret entries.

1. In Locks menu, *Show Secret Data* ➡ ●

2. *On* ➡ ● ➡ Enter Handset Code ➡ ●

When Show Secret Data is Active
- Predictive is not available for text entry.

Activating Temporarily with Motion Control

1. Enter Handset Code ➡ Shake handset left or right
   - Close handset in Standby to cancel Show Secret Data.

Using Face Recognition

Capture portraits with mobile camera then match live image to saved ones to unlock handset or access functions/files. If Face Recognition fails, Function Lock activates.

Setup

Precautions

- Identification accuracy is not guaranteed. SoftBank cannot be held liable for misuse or any damages associated with the use of Face Recognition.
- Handset Code is required to cancel Face Recognition. Changing the code helps enhance security.
- Osaifu-Keitai® is available even when Face Recognition is active.
- When capturing/scanning face, remember these points:
  - Make sure your face is clearly visible.
  - Face should be lit evenly and brightly.

Saving User Information

1 ● ➡ *Settings* ➡ ● ➡ In Phone Settings menu, *Locks* ➡ ●

2 *Face Recog* ➡ ●

```
Yıl©
           Face Recog
Switch On/Off
Off
Conductor
Off
Security Level
Normal
Report
Unregistered
User Registration
```
Face Recognition Menu

3 *User Registration* ➡ ● ➡ Enter Handset Code ➡ ●

```
Yıl©
          User Registry
User 1
Unregistered
User 2
Unregistered
```

4 Select from *User 1* to *User 5* ➡ ●

```
Yıl©
             User 1
Face Image:
Empty
User Name:

Register Riddle:

Register Answer:
```
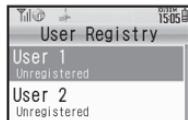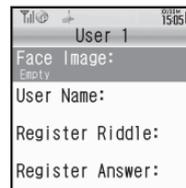
5 *User Name:* ➡ ● ➡ Enter name ➡ ●

6 *Register Riddle:* ➡ ● ➡ Enter question ➡ ●

7 *Register Answer:* ➡ ● ➡ Enter answer ➡ ●

8 *Face Image:* ➡ ●

```
Yıl©
           Face Image
Image 1
Unregiste_
Image 2
Unregiste_
```

9 Select from *Image 1* to *Image 5* ➡ ✉
- Mobile camera activates.

Handset Security

11

11-4

10 **Frame your face on Display** ➡ ● ➡ ✉/

11 *Yes* ➡ ●
● To save more, repeat ⑨ - ⑩.

12 CLEAR/BACK ➡ ☒ ➡ **Saved**

Precautions for Portrait Capture
● Look straight into lens and frame whole face with no expression.
● Do not wear a mask when capturing portraits, even for use with *Low(Mask)*.

Activating & Canceling

1 **In Face Recognition menu,** *Switch On/Off* ➡ ●

2 *On* or *Off* ➡ ● ➡ Enter Handset Code ➡ ●

Scanning Face

1 **Face the Display ➡ Recognition starts**

2 **If face matches a saved portrait, handset unlocks**
● If Face Recognition fails, Function Lock activates. Press ✉/ to retry.

Unlocking Handset after Face Recognition Fails

■ **When No Matching Portrait is Found**

1 **Enter Handset Code ➡ ●**

■ **When Matching Portrait is Found**
Saved question appears.

1 ● ➡ **Enter answer ➡ ●**

If You Cannot Remember the Answer
In ❶, ☎ ➡ Enter Handset Code ➡ ●
When No Question or Answer is Saved
In ❶, Enter Handset Code ➡ ☒

Handset Security

11

Advanced

⚗ ●Changing recognition guide option ●Opening contact information when recognition fails (**P.11-7**)

PIN Entry

Changing PINs	Start Here ● ➡ *Settings* ➡ ● ➡ **In Phone Settings menu,** *Locks* ➡ ● ➡ **See below**
	Changing PIN *PIN Entry* ➡ ● ➡ *Change PIN* ➡ ● ➡ **Enter current PIN** ➡ ● ➡ **Enter new PIN** ➡ ● ➡ **Re-enter new PIN** ➡ ● ● Activate PIN Entry first.
	Changing PIN2 *Change PIN2* ➡ ● ➡ **Enter current PIN2** ➡ ● ➡ **Enter new PIN2** ➡ ● ➡ **Re-enter new PIN2** ➡ ●

Secure Remote Lock

Setting Secure Remote Lock activation message to appear	Start Here ● ➡ *Settings* ➡ ● ➡ **In Phone Settings menu,** *Locks* ➡ ● ➡ *Set Lock Message* ➡ ● ➡ **See below**
	Saving Message *Message* ➡ ● ➡ **Enter Handset Code** ➡ ● ➡ **Enter message** ➡ ● ➡ *Yes* ➡ ●
	Checking Message *Check Message* ➡ ●

Handset Security

11

11-6

Face Recognition

Editing/deleting user information	Start Here ● ➡ *Settings* ➡ ● ➡ In Phone Settings menu, *Locks* ➡ ● ➡ *Face Recog* ➡ ● ➡ *User Registration* ➡ ● ➡ Enter Handset Code ➡ ● ➡ Select from *User 1* to *User 5* ➡ See below **Editing** ● ➡ Select item ➡ ● ➡ Change portrait or enter information ➡ ● ➡ ✉ ● Edit items in the same way as saving entries. **Deleting** ✉ ➡ *Yes* ➡ ●
Changing/deleting portraits	Start Here ● ➡ *Settings* ➡ ● ➡ In Phone Settings menu, *Locks* ➡ ● ➡ *Face Recog* ➡ ● ➡ *User Registration* ➡ ● ➡ Enter Handset Code ➡ ● ➡ Select from *User 1* to *User 5* ➡ ● ➡ *Face Image:* ➡ ● ➡ Select from *Image 1* to *Image 5* ➡ See below **Changing** ● ➡ ✉ ➡ *Yes* ➡ ● ➡ ● ➡ ✉ **Deleting** 🖅 ➡ *Yes* ➡ ●

Changing accuracy level	● ➡ *Settings* ➡ ● ➡ In Phone Settings menu, *Locks* ➡ ● ➡ *Face Recog* ➡ ● ➡ *Security Level* ➡ ● ➡ Select level ➡ ● ● When set to *Low(Mask)*, handset recognizes faces with masks.
Changing recognition guide option	● ➡ *Settings* ➡ ● ➡ In Phone Settings menu, *Locks* ➡ ● ➡ *Face Recog* ➡ ● ➡ *Conductor* ➡ ● ➡ Select option ➡ ●
Opening contact information when recognition fails	● ➡ *Settings* ➡ ● ➡ In Phone Settings menu, *Locks* ➡ ● ➡ *Face Recog* ➡ ● ➡ *Report* ➡ ● ➡ Enter Handset Code ➡ ● ➡ Enter contact information ➡ ●

Handset Security

11